

# PHILIPS

Headlight bulb

Ultinon Essential LED

Type of lamp: H8/H11/H16

6500 K stylish white light

Compact design for better fit

Compatible with most cars

11366UE2X2



## Stand out from the crowd

Stylish LED lighting that's easy to fit

All-new Philips Ultinon Essential LED provides the best value for your money. It comes in a compact all-in-one design featuring powerful brightness, stylish looks, dual heat-dissipation technology and 12 V and 24 V compatibility.

### Compatible with major vehicle models

- 12 V and 24 V compatibility for wider application
- Optional connector rings to fit most car models

### 6500 K colour temperature for stylish white light

- Enjoy a stylish, white-light experience

### Long-lasting performance

- Expect long-lasting performance, not early failure

### Reliable durability with dual heat dissipation

- Excellent cooling via effective heat dissipation

### Compact all-in-one design for plug-and-play use

- Compact all-in-one design for plug-and-play use

# Ultinon Essential LED

Headlight bulb

11366UE2X2


## Highlights

### Up to 6500 Kelvin white light

**6500 K**


For that modern, high-end style, customise your car with Philips Ultinon Essential LED headlight bulbs. With a colour temperature of up to 6500 Kelvin, these bulbs project a modern white light so you can always stand out from the crowd with a stylish beam.

### Reliable dual heat dissipation

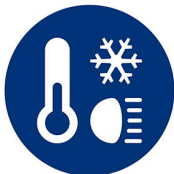

Optimal performance with superior durability places Philips Ultinon Essential LED headlight bulbs at the forefront of LED technology. Thanks to the dual heat-dissipation mechanism — built-in fan and an aluminium heatsink with anodising coating — these LED headlight bulbs disperse heat more effectively and efficiently. They can perform at their highest level of brightness for a longer period of time.


### Compact all-in-one design

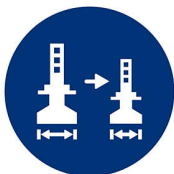

Philips Ultinon Essential LED uses a brand-new bulb design that integrates the driver-box electronics into the body, allowing more space

for the bulb in the headlamp and making fitting easy. Enjoy the plug-and-play experience: the one-piece design allows the centre ring to be taken out from the top easily, without unscrewing. Philips Ultinon Essential LED with its compact design fits a wide range of car models and can be easily installed by specialist mechanics.

### Powerful brightness

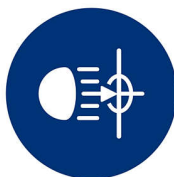

The uniform, accurate beam pattern lets you see and be seen more clearly. Thanks to the precise optical design of Philips Ultinon Essential LED, the light is projected just where you need it on the road. Not only will you be able to spot obstacles faster and drive with more confidence, you'll avoid blinding other drivers with dangerous glare, making everyone safer on the road. For a sharp beam, it's also important that the bulb is correctly positioned in your headlamp. Using the adjustable connector rings, you can ensure perfect alignment for optimal light performance and enhanced road safety.

### 12 V and 24 V compatibility



Philips Ultinon Essential LED is a perfect fit for a wide range of vehicles and is compatible with both 12 V and 24 V electrical systems. Reach out to anyone of our authorised partners or call centre for further details.

### Long-lasting performance



With over 100 years of automotive lighting experience, Philips lighting ensures that our Automotive-Grade Quality products are designed and developed following strict quality-control processes (including applicable ISO norms), leading to consistently high production standards.

### Optional connector rings



Because H7 headlights feature a wide variety of lamp brackets, you can sometimes have trouble fitting LED lights, but not with Philips Ultinon Essential LEDs. Optional Philips LED connector rings ensure that they fit the largest selection of car models, so you can buy Philips LEDs with peace of mind.

# Ultinon Essential LED

Headlight bulb

11366UE2X2

## Specifications

### Marketing specifications

Expected benefits: Style

Product highlight: Philips LED lamps

### Product description

Application: fog beam

Base: PGJ19

Designation: LED-HL [~H8/H11/H16]

ECE certification: NO

Range: Ultinon Essential LED

Technology: LED

Type: LED-HL [~H8/H11/H16]

### Lifetime

Life time: 1500 hrs

### Light characteristics

Color temperature: 6500 K

Lumens [lm]: 1550

### Electrical characteristics

Wattage: 24 W

Voltage: 12 V and 24 V

### Ordering information

Order entry: 11366UE2X2

Ordering code: 00386731

### Packaging Data

EAN1: 8719018003867

EAN3: 8719018003874

Packaging type: X1

### Packed product information

Gross weight per piece: 26.5 g

Length: 10.6 cm

Width: 4.8 cm

Height: 12.7 cm

Net weight per piece: 48.4 g

Pack Quantity: 2

MOQ (for professionals): 12

### Outerpack information

Length: 22 cm

Width: 15.5 cm

Height: 11.5 cm

Net weight per piece: 449.4 g

Gross weight per piece: 0.55 kg

