

PHILIPS

Car headlight bulb

Ultinon Essential
LED

LED-HL [~H4]

6000 K bright white light

Fits major car models

Innovative heat dissipation



11342UEX2



Feel unique, enjoy the difference

Stylish LED lighting that's easy to fit

Compatible with most cars, you can easily upgrade your style and safety. Featuring a stylish look and ThermalCool heat dissipation technology, Ultinon Essential LED [~H4] headlight bulbs provide consistently high-performing light.

Powerful brightness

- Philips technology for bright white lights

ThermalCool heat management

- ThermalCool heat management for superior performance
- Excellent cooling material for effective heat dissipation

Compatible with most car models

- Compact design for quick and simple installation

Precise beam pattern for increased safety


- See more and avoid dangerous glare with a precise beam

Reliable Philips quality

- Highest quality Philips automotive lighting
- Expect long-lasting performance, not early failure

Highlights

Powerful brightness

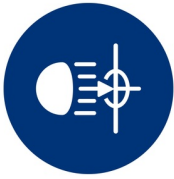


For that modern high-end look, customize your car with Ultinon Essential LED headlights. With 6000 Kelvin color temperature, these lights project a stylish, white light. Featuring innovative heat management system, these LED bulbs provide a consistently bright beam of light for your journey.

Effective heat management




Heat management is a critical factor in the performance of LED lights. Built with a unique one-piece design, Philips Ultinon Essential LED headlights dissipate heat effectively, so they always perform at the optimal brightness level (even when they get very hot – unlike inferior quality LEDs). And they also last longer, so you don't have to replace them as often. Unique ThermalCool technology has been tested in real-life automotive conditions, not just in the laboratory (unlike many competitive products). So you can have confidence in their stated high performance.

Excellent cooling material

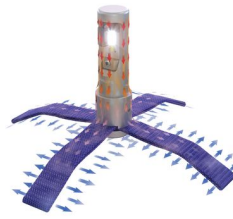

Ultinon Essential LEDs are highly resistant to heat damage because they're built from superior materials. Many competitive products can start to emit a weaker beam of light when the LEDs get hot, because they use inferior metals and have less efficient heat dissipation technology. Ultinon Essential LED headlights contain a heat sink with flexible copper braids and an aluminum burner, which help heat to escape quickly, so you get a consistently powerful beam of light throughout your entire journey.

Compact design for easy fit

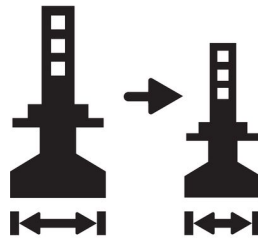

The compact design of the Ultinon Essential LED bulbs make installation simple. Even in the smallest headlamps, you'll have space to fit these bulbs. Because of the flexible copper braids of the heat sink, and the curved control box, you can fit your new LED lights in cars where other products would be too bulky.

See more with a precise beam

Thanks to the precise optical design of Philips Ultinon Essential LED, the light will be projected just where you need it on the road. Not only will you be able to spot obstacles

faster and drive with more confidence, you'll avoid blinding other drivers with dangerous glare (making everyone on the road safer). For a sharp beam, it's also important that the bulb is correctly positioned in your headlamp. Using adjustable connector rings, you can ensure perfect alignment for optimal light performance and enhanced road safety.

Long-lasting performance



You want bright white LED lights for that modern look. But some people who opt for new LED lights are disappointed with their experience. This is usually because the claimed heat management performance does not tally up with real world conditions. In other words, they have bought inferior products that fail too quickly. Philips Ultinon Essential LED products are durable and reliable, lasting up to five years under real-life conditions.

Automotive grade quality

Technologically advanced Philips lighting is renowned in the automotive industry, and has been for over 100 years. The Philips Automotive Grade Quality products are designed and developed following strict quality control processes (including applicable ISO norms), leading to consistently high production standards. Philips lamps are generally compatible with car models of major brands, such as Audi, BMW, Ford, GM, Toyota and Volkswagen. See the product selector guide for more information.

Specifications

Packaging Data

Packaging type: X2
EAN1: 8719018051172
EAN3: 8719018051189

Product description

Technology: LED
Application: High beam, Low beam
Range: Ultinon Essential LED
Type: [~H4]
Homologation ECE: NO
Designation: 11342UEX2
Base: P43t-38

Electrical characteristics

Wattage: 17 W
Voltage: 12 V

Marketing specifications

Expected benefits: Style
Product highlight: Philips LED lamps

Light characteristics

Color temperature: 6000 K

Ordering information

Order entry: 11342UEX2
Ordering code: 5117231

Outerpack information

Height: 123.6 cm
Length: 116.7 cm
Width: 92.7 cm

Packed product information

Gross weight per piece: 1460 g
Height: 20.5 cm
Length: 30.5 cm
Net weight per piece: 1260 g
Width: 16.5 cm
MOQ (for professionals): 6
Pack Quantity: 2

Lifetime

Life time: Up to 5 years

