




Philips Xperion 6000
Under-Bonnet Light

High lumen output
1,200 lm and 110° beam radius
Presence sensor
Extension up to 2.08 meters

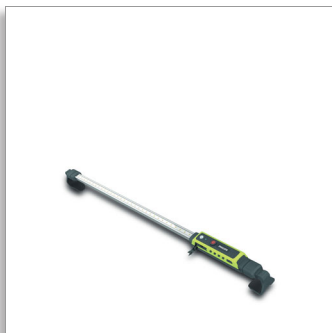

LUMX60BONNX1

Designed with you in mind

Extendable, powerful LED under-bonnet lamp

The Philips Xperion 6000 Under-Bonnet LED Light offers a seamlessly dimmable beam of up to 1,200 lumens, 360° rotatability, and a telescopic mount extending up to 2.08 meters on both sides, ideal for working on cars, vans, and trucks.

Extended warranty

- Extend your warranty online to 3 years

Long lasting performance

- Long-life battery
- Presence sensor to save battery life

Powerful, bright LED light

- Seamless light dimming

Enhanced durability

- Robust, and water dust protected

Enhanced versatility

- Sliding light module
- Telescopic, extendable mount

PHILIPS

Under-Bonnet Light

High lumen output 1,200 lm and 110° beam radius, Presence sensor, Extension up to 2.08 meters

Specifications

Marketing specifications

- Product highlight: 2.08 m extendable for all vehicles
- Expected benefits: Designed with you in mind

Product description

- Hands free options: Presence sensor
- Hook: Rotatable, 2 sides extendable
- Impact protection rating (IK): IK07
- Magnet: No
- Materials & finishing: Aluminum
- Number of LEDs: 32
- Operating Temperature: -10°C to 40°C
- Range: Xperion 6000
- Technology: LED
- Ingress protection rating (IP): IP65
- Resistant to: Grease, oil, workshop solvents

Light characteristics

- Beam angle: 110 degree
- Color temperature: 5800 K
- Light output (eco): 120 lumens
- Light output (boost): 1200 lumens

Electrical characteristics

- Voltage: 3.7 V
- Power source: Rechargeable battery

- Battery capacity: 5200 mAh
- Battery run time (boost): Up to 3 hours
- Battery run time (eco): Up to 20 hours
- Battery type: Lithium battery
- Plug type: 5V 2A adaptor (except UK)
- Charging cable type: Type C USB
- Battery charging time: Up to 3.5 hours
- Wattage: 1,2 W

Ordering information

- Order entry: X60BONNX1
- Ordering code: 02171731

Packaging Data

- EAN1: 8719018021717
- EAN3: 8719018021724

Packed product information

- Length: 117 cm
- Width: 7,5 cm
- Height: 12 cm
- Pack Quantity / MOQ: 6
- Weight with batteries: 960 g
- Cable length: USB type-C 100cm cable, 5V 2A adaptor

LUMX60BONNX1/10

Highlights

Powerful bright LED light

The Philips Xperion 6000 Under bonnet LED light offers a powerful 1,200 lumens of light, helping you spot even the smallest of details. Tune the light intensity as you wish with a rotatable knob, to adjust to your environment or preserve battery life.

Telescopic, extendable mount

The Philips Xperion 6000 Under-Bonnet LED Light is equipped with two integrated telescopic hooks extendable on both sides and rotatable through 360°. The hooks feature wider openings and are covered with soft rubber for easy attachment to the vehicle bonnet without scratching the paintwork. With a mount stretching from 1.10 to 2.08 meters, our Philips Xperion 6000 Under-Bonnet LED lamp can be used in a wide range of locations. Whether under the bonnet, roof, or rear hatch of any car, van, or truck, this lamp has the flexibility you need.

Sliding light module

Thanks to the Philips Xperion 6000 Under-Bonnet LED Light's unique design, you can slide the light module along the mount to the area you want to illuminate. No need to change the lamp angle when repositioning the module.

Presence sensor

The Philips Xperion 6000 Under-Bonnet LED Light is equipped with a presence sensor that senses human activity within a 2,5-meter radius. This enables the lamp to switch off automatically after 5 minutes when unused. It switches on again when a presence is detected, saving battery life and giving you hands-free control.

Enhanced durability

Complying with international impact-resistance standard IK07, the robust aluminum housing of the Philips under bonnet LED light is designed to withstand tough working environments. It is IP54-rated for splash and dust resistance. Built to strict manufacturing standards with multiple sealing processes, our lamp is resistant to splashed water and protected from dust.

Up to 3-year warranty

Benefit from Philips standard 2-year warranty plus 1 additional year.*

Long-life battery

The 5200 mAh long-life battery of the Philips Xperion 6000 Under-Bonnet LED Light provides you with three hours of continuous use in Boost mode, and up to 20 hours in Eco mode. See when the battery needs charging. It features a battery-status indicator that shows how much battery life is left. Never run out of power in the middle of a job again. The indicator also displays the time remaining until the battery is fully charged.



Issue date 2024-05-02

Version: 4.4.1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* To be claimed on the Philips extended-warranty webpage