



Philips LED Daytime lights
DayLight 4

DRL
12 V

12831ACCX1

High visibility for maximum safety

LED daytime running lights for better visibility

The high-power Luxeon LED daytime running lights improve your safety on the road, increasing your visibility without compromising on lifetime or energy consumption.

Fits most car models

- Hybrid, electric and start & stop compatible

Original Equipment Quality

- Water and gravel-impact resistant
- High-quality aluminium housing

Simple, click installation

- Simple wiring system
- Smart clip-on system

PHILIPS


Highlights

Start & stop compatible



With the intelligent electronics of the control box, the modules are compatible with the latest types of vehicles: hybrid, electric and start & stop cars are all supported. Please refer to the application guide section for an overview of all makes and models.

Gravel-impact resistant

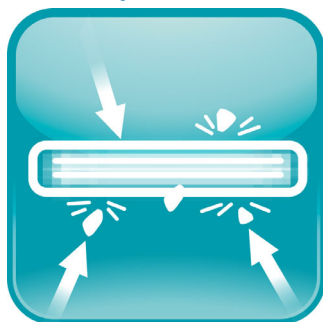

The high-quality aluminium housing and lens are water and gravel-impact resistant. After mounting, the system does not require any maintenance.

Aluminium housing



The robust high-quality aluminium housing prevents corrosion and is weatherproof: water, salt, sand and dust stand no chance. The result is long life and no maintenance work.

Simple wiring system

The simple wiring system will enable you to install your daylight easily.

Clip-on system



Simple installation with smart clip-on system. Install the brackets in any cavity and simply click the modules into place. The modules will lock tightly and are protected from theft.

Specifications

Technical specifications

- Voltage: 12 V
- Application: Daylight
- Homologation: ECE compliant (street legal)
- Lasts car's lifetime: 5000 hours

Maximum visibility

- Colour temperature: 6000 K

Easy to install

- Easy click system: clip-on system

Original equipment quality

- Premium finishing: High-quality aluminium housing
- Quality: Certified automotive quality
- Gravel impact resistance lens: Automotive test PSA B21 7090
- Homologation: ECE R87
- Standard waterproof connectors: Waterproof connector
- Waterproof - Weather-proof: Water, salt, dust, sand

