

PHILIPS

sonicare



Rechargeable Toothbrush -
Trial Unit NOT FOR RESALE

DiamondClean Prestige
9900

SenseIQ

20x more plaque removal*

15x healthier gums**

Visual pressure sensor



HX9994/12

Personalized care for your oral health

Gently removes up to 20x more plaque*

Experience our most advanced electric toothbrush: Philips Sonicare DiamondClean Prestige 9900 with SenseIQ technology. It enhances our proven sonic technology with intelligence, sensing and adapting to deliver personalized oral care.

Brushing made effortless

- Help protect your gums with our pressure sensor
- Choose your ideal cleaning experience
- Personalized guidance and real-time feedback

Designed for your lifestyle

- Designed to care, with care
- Keep brushing your best with brush head replacement reminder
- 14-day battery life

Feel the care of Sonicare

- 20x more effective on plaque*, gentle on gums
- SenseIQ Technology for your personalized experience
- Sonicare Fluid Action

DiamondClean Prestige 9900

Rechargeable Toothbrush - Trial Unit NOT FOR RESALE

HX9994/12

Highlights

Our best plaque removal



Everyone cleans differently, so we designed this brush head with multi-angle bristles to keep plaque removal on course no matter your technique. Our All-in-One A3 brush head delivers our best cleaning and removes up to 20x more plaque, 15x healthier gums in six weeks, and up to 100% more stain removal in less than two days versus a manual toothbrush.

SenseIQ Technology



SenseIQ Technology helps balance your brushing style and senses your pressure, motion and coverage up to 100 times per second while you brush. If you apply too much pressure, the toothbrush will step in and automatically adjust the intensity level, helping to protect your teeth and gums.

Sonicare Fluid Action




Philips Sonicare toothbrushes clean gently yet effectively and care for your teeth and gums with 62,000 bristle movements per minute. Sonicare Fluid Action supports the bristles to clean by driving fluid deep between teeth and along the gumline.

Visual pressure sensor



This Sonicare electric toothbrush has a light ring at its base that gently lets you know if you're overdoing the pressure. Simply ease off when it lights up to help your gums stay protected.

Modes and intensities

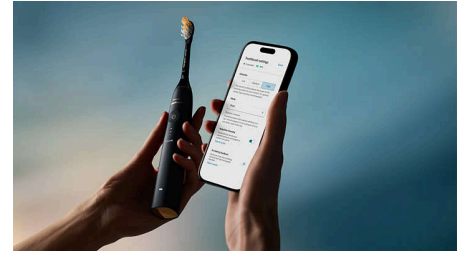

Enhance your oral care routine with 15 brushing settings. Whether you're looking for a deep clean or a specific focus, you can have it with this electric toothbrush. Select from five modes - Clean, White+, Gum Health, Deep Clean, and Sensitive - and adjust to one of three intensity levels for a personalized clean. Simply open the app, select your preferences, and let your toothbrush do the rest.

Sonicare App



Achieve your oral health goals with your Sonicare toothbrush and app. The two pair seamlessly to provide real-time coaching, personalized guidance, and tailored insights to improve your brushing routine. Track your progress, refine your technique, and receive continuous feedback to make the most out of each brushing session. Together, you are unstoppable. Meanwhile, auto-syncing keeps brushing data up to date in the app, even when you don't brush with the app by your side.

DiamondClean Prestige 9900

Rechargeable Toothbrush - Trial Unit NOT FOR RESALE

HX9994/12


Highlights

Premium design and accessories



From its sleek design to its state-of-the art charging stand, every detail of this electric toothbrush is crafted with attention to detail by our dedicated designers and engineers. Plus, with the included charging travel case, you can maintain your oral care routine, even while on the go.

Replacement Reminder

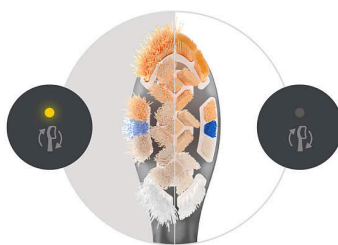

Did you know brush heads become less effective after three months? Dental professionals recommend changing your brush head regularly, that's why Philips Sonicare toothbrushes have a brush head replacement reminder. It tracks how

often and how hard you brush, then reminds you to replace your brush head once it's time for a new one.

Battery life



Experience up to 14 days of regular brushing on a full charge, bringing a new level of convenience to your daily routine.

DiamondClean Prestige 9900

Rechargeable Toothbrush - Trial Unit NOT FOR RESALE

HX9994/12

Specifications

Intensities

High: To boost your clean
Medium: For an everyday clean
Low: For sensitive teeth and gums

Power

Power supply: 100-240 V

Technical specifications

Operating time (full to empty): 14 days
Battery: Rechargeable
Energy Consumption: Standby without display
<0.06W
Battery type: Lithium ION

Design and finishing

Color: Midnight Blue

Service

Warranty: 2-year limited warranty
Software support: Philips offers relevant software updates for a period of 2 years after the date of purchase.

Compatibility

Android compatibility: Android phones with Bluetooth 4.0 and above
Bluetooth wireless technology: Connected Sonicare app
iOS compatibility: iPhone with Bluetooth 4.0 and above

Ease of use

Handle: Sleek and compact design
Handle compatibility: Easy click-on brush heads
Battery indicator: Illuminated icon indicates battery life
Timer: BrushPacer and SmartTimer

Items included

Handle: 1 DiamondClean Prestige 9900
Brush heads: 1 A3 Premium All-in-One
Travel case: 1 Prestige USB charging travel case
Charger: 1 Charging base and stand

Cleaning performance

Plaque removal: 20x more effective*
Gum Health: Up to 15x healthier gums***
Whitening: Up to 100% more stain removal***
Speed: 62,000 brush movements / min

Modes

Clean: For an exceptional everyday clean
Sensitive: For sensitive teeth and gums
Gum Health: Gently massages your gums
White+: To help remove surface stains
Deep Clean: For an invigorating deep clean

Smart sensor technology

Pressure feedback: Ring lights up purple, Vibration and pulsing sound
Replacement Reminder: Lets you know when to replace your brush head
SenseIQ: Automatically adjusts brushing based on pressure and motion

Sonicare app

Real-time coaching with SenseIQ: Receive instant feedback on pressure, motion, and coverage to improve your brushing technique as you go.
Personalized guidance: Get customized brushing tips based on your brushing patterns and habits.
Progress reports: Track your brushing habits and improvements over time with in-depth data and personalized insights.

