

PHILIPS

10 G vibration
resistance


X-tremeVision G-
force

Type of lamp: H1

12 V, 55 W

10 G vibration resistant tested

Up to 130% more brightness

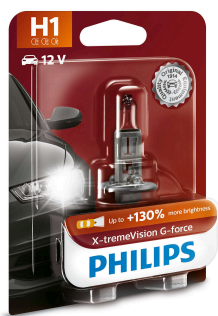

12258XVGB1

Enjoy performance taken to new X-tremes

Up to 130% brighter light

Philips X-tremeVision G-force H1 car bulbs are among the brightest you can buy. They outshine most other car lights with up to 130% more brightness and superior beam length. See further, react faster and drive safer.

Durable lights with vibration resistance

- A lifetime of safety so you can see and be seen
- Performance means more light and longer lifetime
- Endurance performance bulbs for vibration resistance

White light for more contrast

- Significantly whiter light to improve comfort and safety

Up to 130% brighter light for better visibility

- One of the brightest bulbs: ultimate light performance
- See further and react faster with up to 130% more brightness

Enhanced safety

- Among the safest road-legal headlights

Philips quality

- Philips is the choice of major car manufacturers

X-tremeVision G-force

10 G vibration resistance

Highlights

Up to 130% more brightness

Perfect illumination is especially important in the distance – usually between 75-100 metres in front of your vehicle. Philips X-tremeVision G-force boosts your visibility with up to 130% more brightness. This helps you recognise obstacles and any potential dangers earlier than with most other halogen headlight lamps.

Ultimate light performance

With its optimised high-precision filament geometry, up to 13 bar high-pressure gas filling, high-precision coating and high-quality UV-Quartz glass, Philips X-tremeVision G-force headlights represent a milestone in automotive lighting. They are engineered for the ultimate performance and uncompromising visibility.

Significantly whiter light

The bright white light of up to 3500 Kelvin is significantly whiter than standard headlights. The Philips patented gradient coating technology produces a more powerful light, so you can enjoy one of the brightest lighting performances and a highly comfortable night driving experience.

A lifetime of safety

Every potential failure of a spare part is a risk for you and your vehicle. This is especially true for headlights. Every broken headlight lamp reduces visibility and safety for you and the oncoming traffic. Philips X-tremeVision G-force is optimised for a long and reliable lifetime. You can see and be seen for longer than with any other high-performance lamp.

More light and longer lifetime

Philips X-tremeVision G-force headlights are made for outstanding performance, producing up to 130% brighter light, without compromising on the lifetime. With up to 450 hours*, Philips X-tremeVision G-force's lifetime is significantly longer than competitor solutions in the more light category. (*tested at 13.2 V standard voltage).

Vibration-resistant endurance

Don't let a pothole be the end of your car lights. Today's journeys can be a challenge for your car. Philips X-tremeVision G-force is designed to last. Tested for vibration resistance, these lamps underline their great endurance.

Safe road-legal headlights

Philips X-tremeVision G-force is among the safest, easiest and most efficient ways to upgrade your car headlights within legal parameters. The lights are fully ECE certified.

Highest quality car lighting

Technologically advanced Philips lighting is renowned in the automotive industry, and has been for over 100 years. Philips Original Equipment Quality products are designed and developed following strict quality control processes (including applicable ISO norms), leading to consistently high production standards. X-tremeVision G-force is compatible with car models of major brands, such as Audi, BMW, Ford, GM, Toyota and Volkswagen. See the product selector guide for more information.

12258XVGB1

Specifications

Marketing specifications

Expected benefits: More light
Product highlight: More light

Product description

Application: High beam, Low beam, Front fog
Base: P14, 5s
Designation: 12258XVGB1
ECE certification
Range: X-tremeVision G-force
Technology: Halogen
Type: H1

Lifetime

Life time: 350 hrs

Light characteristics

Colour temperature: Up to 3500 K
Lumens: 1550 ±15% lm

Electrical characteristics

Voltage: 12 V
Wattage: 55 W

Ordering information

Order entry: 12258XVGB1
Ordering code: 35522230

Packaging Data

Packaging type: Blister
EAN1: 8727900355222
EAN3: 8727900355239

Packed product information

Gross weight per piece: 18.4 g
Length: 9.5 cm
Width: 2.6 cm
Height: 12.9 cm
Pack Quantity: 1
MOQ (for professionals): 10

Outerpack information

Length: 25 cm
Width: 14 cm
Height: 13 cm
Gross weight per piece: 0.27 kg

