

# PHILIPS

## Headlights

CrystalVision

Type of lamp: H11

Pack of: 2+2

12 V,55 W

Style



12362CVSM



## Drive with style

Up to 4300K bright white light

Philips CrystalVision halogen headlamp upgrades the style of your car with up to 4300K bright white light. With the blue coating and the silver top finishing, your car will look more stylish

### Bright white light up to 4300K


- CrystalVision 4300K bright white light for style upgrade
- Bright white color match effect for high end look

### High quality and ultra resistant headlamp

- Philips is the choice of major car manufacturers.
- Change both your headlamps simultaneously for more safety
- Wide range of 12V lamps for all functions
- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity^
- Philips car lamps are highly UV resistant

# Highlights

## 4300K bright white light

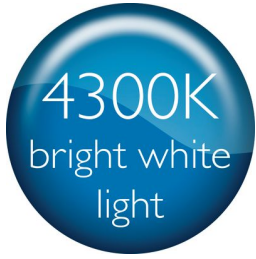

With the blue coating and silver top design, CrystalVision is offering bright white headlight of 4300K to see and to be seen, for both city and country driving

## High-end look car

Supplied with two colour matching w5w position lamps, CrystalVision gives your car lights the premium look of high end cars.

## High quality quartz glass

UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability to withhold increased pressure inside the lamp, UV-quartz glass is able to produce more powerful light. ^Application varies per bulb type

## Resistance against humidity

Only a burning bulb made of quartz glass (filament 2650°c, glass 800°c) can resist thermal shocks : such as, if a drop of cold

water touches the hot bulb, when you drive through water with a broken headlight unit. ^Application varies per bulb type

## UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

## Designed for multiple usage



Which 12V lamp for which function? Philips Automotive offers all car specific functions : high beam, Low beam, front fog, front indicator, side indicator, rear indicator, stop

light, reversing light, rear fog light, license plate lights, rear position/parking light, interior lights

## Change by pairs



Highly recommended to change them by pairs for symmetric light performance

## Car manufacturers' choice

For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standards on modern automobiles. Today, one in two cars in Europe and one in three worldwide, is equipped with Philips lighting.

# Specifications

## Product description

Technology: Halogen  
Application: Front fog light  
Designation: H11  
Homologation ECE: NO  
Marking ECE: N/A  
Range: CrystalVision  
Base: PGJ19-2  
Type: H11

## Electrical characteristics

Voltage: 12 V  
Wattage: 55 W

## Lifetime

Life time: B3/Tc = 200/400

## Light characteristics

Color temperature: 4300 K  
Lumens: 900 ±15%  
Color temperature: up to 4300 K

## Packaging Data

EAN1: 8711559526461  
EAN3: 8711559526843  
Packaging type: SMA

## Ordering information

Order entry: 12362CVSM  
Ordering code: 40864830

## Marketing specifications

Expected benefits: Style  
Product highlight: 4300K

## Outerpack information

Gross weight per piece: 0.616 kg  
Height: 12 cm  
Length: 28.6 cm  
Width: 14.1 cm

## Packed product information

Gross weight per piece: 107.9 g  
Height: 13.3 cm  
Length: 11 cm  
Net weight per piece: 46 g  
Width: 5.3 cm  
MOQ (for professionals): 5  
Pack Quantity: 4

