

PHILIPS

Motorcycle
headlights

RacingVision GT200
moto


H7

Pack of: 1

12V, 55W

Up to 200% brighter light*

12972RGTBW

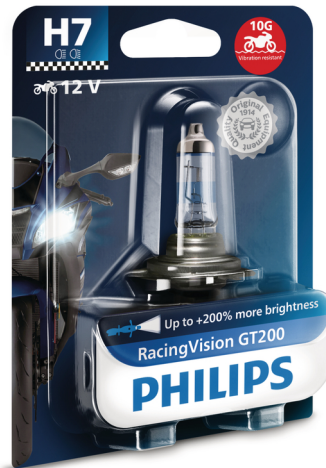

Incredible performance from a road-legal bulb Let our lights take your driving to the next level

If you're passionate about driving, let Philips RacingVision GT200 moto bulbs elevate your automotive experience. Up to 200% brighter light means better vision and faster reactions for a more exciting drive.

Up to 200% brighter lights to transform your drive

- See a step change in visibility and driving excitement
- Unique bulb coating techniques maximize light throughput
- Advanced quartz glass technology for precise light output

The best-performing beam in our portfolio

- A striking beam that throws light further

Fully road-legal for an enjoyable drive

- Approved for use on public roads

The reassurance of Philips quality

- Philips is the choice of major car manufacturers

Highlights

Our best-performing bulb

The highest performer in our portfolio, Philips RacingVision GT200 moto delivers the super-bright visibility of a rally bulb in a format you can use on public roads. Experience the razor-sharp clarity of up to 200% brighter light. The optimized bulb design provides higher luminance for a better view of the road ahead, giving you a safer, more exciting drive.

Extend your beam

With its ultra high-performance beam, Philips RacingVision GT200 moto lets you see more of the road ahead. Spot potential hazards sooner, react faster and position your car more accurately on the road. It all adds up to a safer, more satisfying driving experience.

Brighter light for performance

Philips RacingVision GT200 moto headlight bulbs are ECE homologated for the road. Performance-oriented drivers enjoy a bright, vibrant and street-legal bulb compliant with relevant regulations.

More light on the road

Unique patented gradient and screen-print coating techniques enable these bulbs to project more light onto the road, improving

your visibility in night-time driving conditions. In addition to maximized throughput, enjoy a stylish, distinctive light that's right on trend.

Brightness where you need it

Advanced production techniques for Philips Diamond Silk quartz glass ensure a sharp cutoff line and a brighter sweetspot, giving you more brightness where it counts. Also, quartz glass means greater resistance to thermal shocks to protect the bulb's lifespan and enhanced UV absorption protects your headlight optics.

Highest quality car lighting

Technologically advanced Philips lighting is renowned in the automotive industry, and has been for over 100 years. The Philips Original Equipment Quality products are designed and developed following strict quality control processes (including applicable ISO norms), leading to consistently high production standards. Philips RacingVision GT200 moto is compatible with motorcycles models of major brands.

Specifications

Electrical characteristics

Rated voltage: 12V

Wattage: 55 W

Lifetime

Life time: 250h

Light characteristics

Color temperature: 3500 K

Lumens: 1500 ±10%

Marketing specifications

Expected benefits: More light

Product highlight: Up to 200% brighter light*

Ordering information

Order entry: 12972RGTBW

Ordering code: 2383430

Outerpack information

Height: 14.0 cm

Length: 19.6 cm

Width: 19.6 cm

Gross weight per piece: 0,332 kg

Packaging Data

EAN1: 8719018023834

EAN3: 8719018023841

Packaging type: BW

Packing: Blister

Quantity in box: 1

Packed product information

Gross weight per piece: 24,1 g

Height: 12.9 cm

Length: 9.5 cm

Width: 3.5 cm

MOQ (for professionals): 10 pcs

Pack Quantity: 1 pc

Product description

Technology: Halogen

Type: H7

Range: RacingVision GT200

Application: High beam, Low beam

Homologation ECE

Designation: H7 12972 RGT 12V 55W PX26d

BW

Base: PX26d

