

User Manual

EN	3
简体中文	11



飞利浦汽车生活
官方微信公众号

EN Read these instructions for use carefully before using the product and save them for future reference.

简体中文 使用前请仔细阅读使用说明，保留说明书以便日后查阅。







English

Before you start

Thank you for buying Philips GoPure Car air purifier. Before you install GoPure in your car, take time to read this guide.

The GoPure Car air purifier will help you **protect your health by improving the quality of the air you breathe in your car**. It is known that air pollution levels inside cars are often much higher than outside.

The GoPure Car air purifier removes harmful gases and fine particles such as microorganisms. It also reduces bad odors to make the time in your car more pleasant and healthier.



Warranty and service



The Lumileds warranty applies, provided:

- The product is handled properly for its intended use only.
- The product is used in accordance with its operating instructions.
- You present the original invoice with the product.

The Lumileds warranty does not apply if the product is damaged due to accident, error, or misuse.

For more information and assistance, or if you have a problem with the product, you can visit the Philips website at www.philips.com/automotive, or contact the retail outlet where you purchased the product.

Or for the users in China, please call the customer service hotline: 400 690 8826

Lumileds (Shanghai) Management Co., Ltd
No. 19-20, Lane 299,
Wenshui Road, JiangAn District, Shanghai



1 ⚠ Important information

⚠ Danger

Do not clean or spill any liquids such as water, detergents, or flammable solvents on the device.

⚠ Warning

Keep Philips GoPure car air purifier free of any object. Do not cover!

⚠ Important

To clean the GoPure car air purifier:

- Disconnect GoPure car air purifier
- Use soft cloth only.

⚠ Warning

Philips GoPure car air purifier is not a toy! Do not let children play with it.

⚠ Warning

For your safety, do not manipulate the device while driving.

Always stop your car first!

⚠ Warning

Philips GoPure car air purifier device contains high-precision technology.

**Handle with care.
Do not drop or tamper!**

Environment




⚠ Important

Help to preserve the environment. Do not discard the device with household waste. Bring it to the official waste recycling service near by you. Filters may be disposed of with household waste.


Cautions:

- this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
- children shall not play with the appliance
- cleaning and user maintenance shall not be made by children without supervision
- the appliance is only to be used with the detachable power supply provided
- must only be supplied at SELV

2 Discover Gopure car air purifier

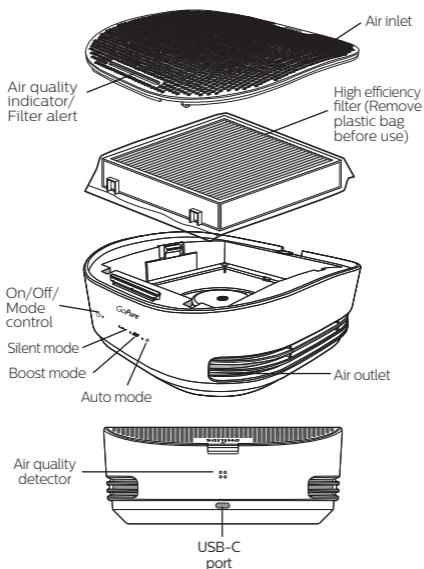

2.1 Discover the content of Philips GoPure car air purifier package





⚠ Warning

Make sure the device is installed **according to the instructions** in this guide.


For your safety, use only the items delivered in this package to install the device. In case of incorrect installation, Lumileds declines all responsibility for any harm or accident.

3 How to install Philips GoPure car air purifier in your car



3.1 Installation-using the headrest or armrest

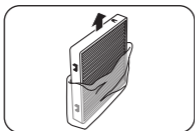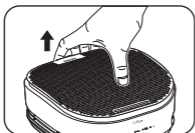

1 Take off top cover and remove the filter's plastic wrapping.

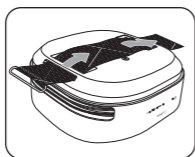

2 Place the mounting belt over the device as shown, with the furry surface facing the device.

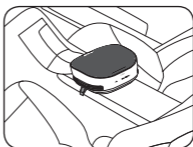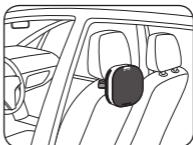

3 You may install Philips GoPure car air purifier on headrest or armrest of your car.


Notice:

- 1 The mounting belt may not be suitable to the armrest of all car models.
- 2 Please don't put device on car dashboard or airbag.

⚠ Warning

For your safety, only use the equipment delivered in your package. Never use other equipment, such as tape, cord, or others.

3.2 Connection and operation

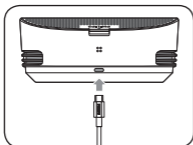

1 Connect the USB-C power cable to the device as shown.



2 Connect the power cable to a USB outlet in your car. (To ensure optimal performance, the device power input needs to be higher than 5V/1A.)



⚠ Important

When using Philips GoPure car air purifier

- Keep your car ventilation in low speed.
- Keep car windows closed.

⚠ Warning


For your safety, do not try to switch off or operate the device manually while driving.

Always park your car first!


In-car USB DATA port is not recommended as power input.

4 Using GoPure car air purifier functions

When the vehicle power supply is on, the device starts automatically in auto mode.



1 To turn on the device, touch the power button, the device will start running in auto mode.



2 Touch the power button to switch the speed mode in sequence of auto, boost and silent.

3 To turn off the device, touch and hold the power button for 2 seconds.

Understanding GoPure healthy-air indicator

The healthy-air indicator shows the air quality inside your car at all times.

	Red	>150 ug/m ³	Severe pollution
	Yellow	76-150 ug/m ³	Moderate pollution
	Blue	0-75 ug/m ³	Excellent
	After the device is turned on, the AQI will alert in yellow blinking light.		Replace filter

5 Filter replacement and reset

Philips GoPure Car air purifier is composed of a **multi-layer filtration system** that guarantees the most effective air-purification. All filter layers are assembled in one single simple-to-replace filter.

⚠ Important

Philips GoPure car air purifier indicates automatically when you must change the filters.




When the filter needs to be replaced, the AQI indicator will alert in yellow blinking light.


Replace the filter immediately using only genuine Philips GoPure filter.

It helps maintain the maximal performance of your Car air purifier and helps to provide the purest air quality inside your car.


5.1 How to replace the filter



1 Disconnect GoPure car air purifier device.

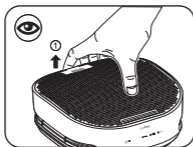

2 Lifting up the rear side of top cover and remove it.

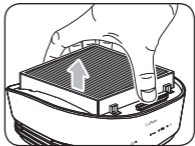

3 Remove the old filter as shown.



4 Using the groove, insert a new original GoPure filter.

⚠ Important

The filter slides in only one way, do not force it in. See above.

5.2 How to reset GoPure car air purifier after a filter replacement

⚠ Important

You must reset the Philips GoPure device after every filter replacement.

1. Plug the device into the power supply and turn off the device.
2. Touch and hold power button for 5 seconds until you hear a beep sound. The device will be turned into filter reset process. Wait for another 5 seconds until the AQI color changes to blue, indicates filter reset successful.
3. Repeat the above steps if the filter rest fails.

6 Philips GoPure car air purifier troubleshooting

Problem 1

Philips GoPure car air purifier does not switch to boost speed.

Solution 1

- Check it is not connected to in-car USB data port which is usually not designed as power source.
- Connect to in-car USB port with charging function.
- Or check your USB power input, it needs to be higher than 5V/1A.

Problem 2

When the AQI turns to yellow or red color, my GoPure Car air purifier keeps rebooting.

Solution 2

- Verify that the USB port is not DATA port, connect only to USB port with charging function (or current over 1A).
- Check the power connection and make sure the USB cable is properly inserted.
- If your device still does not restart, please contact your retailer.

Problem 3

Some cars continue to power the 5V outlet when the engine is off.

Solution 3

To avoid draining the battery, Philips GoPure car air purifier will automatically power off after two hours of continuous running. To restart your device, press the power button.

Problem 4

After filter replacement, Philips GoPure filter AQI indicator remains yellow blinking light at restart.

Solution 4

Turn off the device and follow filter reset steps in section 5.2. Pls make sure the power cable remains connected during the whole process.

- Repeat the reset steps section 5.2.

Problem 5

The Philips GoPure motor stops running for a short while.

Solution 5

This is normal: the device has a voltage protection. At times, the voltage supply from vehicle may vary and fluctuant, in these cases, the device will turn off automatically. Touch the power button to restart the device.

Problem 6

Philips GoPure air quality indicator does not change for a very long time.

Solution 6

It may simply indicate stable air quality. It may also indicate that the air intake slots are obstructed or polluted.

- Make sure the air circulation around the device is free.
- Restart the device. If the problem remains, please contact your retailer or service center.

**Problem 7**

Philips GoPure air quality indicator changes frequently.

Solution 7

This is normal and the device is working properly. When the air quality is poor, the device performs its cleaning process. However, the air quality indicator reflects the air quality near the device. At times, this may bring a frequent air quality display change. Let the GoPure car air purifier perform its cleaning process. When the air reaches good quality, the air quality indicator will turn blue as described.

Problem 8

Philips GoPure air quality indicator shows a blue light, but some odor remains in the car.

Solution 8

Philips GoPure air quality indicator only reflects dust-related pollution in the air. It does not indicate chemical pollution. However, Philips GoPure car air purifier still removes dust and chemical pollutants while running.

- Let the device perform its cleaning process and the air quality will improve rapidly.

Problem 9

Philips GoPure car air purifier has been running for a long time, yet my new car continues to produce unpleasant odor.

Solution 9

Some unpleasant odor in new cars may come out continuously from a variety of sources. GoPure car air purifier device continues to purify the air. However, some odors may be produced continuously. GoPure car air purifier reduces the air pollutants considerably.

- To speed up the air cleaning process in a new car, you may run GoPure car air purifier in **Boost** mode (section 4 in page 7).





简体中文

简体中文

开始使用前

感谢您购买飞利浦怡动车载空气净化器。在车内安装怡动净化器之前，请花一点时间阅读本使用说明。

众所周知，车内空气污染程度往往高于外界空气。透过飞利浦怡动车载空气净化器**改善车内空气质量，保护您的健康。**

怡动车载空气净化器可以去除诸如微生物等微小颗粒及有害气体。同时**减少异味，伴您更愉快健康地度过车内时光。**

保修和服务

亮锐保修适用范围：

- 产品严格按照指定用途操作；
- 产品依照使用说明使用；
- 出示产品原始发票。

亮锐保修不适用于事故、失误或使用不当引起的产品损坏。

欲知详情和指导，或对产品有疑问，请访问飞利浦网站：

www.philips.com/automotive，

亦可联系向您出售产品的零售商。

或致电客户服务热线：

400 690 8826

亮锐（上海）管理有限公司

上海市静安区汶水路299弄19-20号

邮编：200072





1 △ 重要事项

△ 危险

切勿用液体清洗或泼洒净化器，如水、洗涤剂或易燃溶剂。

△ 注意

保持飞利浦怡动车载空气净化器周围畅通无阻。切勿覆盖！

△ 重要事项

清洁飞利浦怡动车载空气净化器：

- 将怡动车载空气净化器同电源断开。
- 仅使用柔软抹布擦拭。

△ 注意

飞利浦怡动车载空气净化器不是玩具！切勿给儿童把玩。

△ 注意

为了您的安全，切勿在驾车时调节净化器。

请先停车！

△ 注意

飞利浦怡动车载空气净化器使用了精密零部件，**请谨慎使用。**
防止跌落或损坏！

环保




△ 重要事项

为环保尽一份力。切勿将净化器同生活垃圾一起丢弃。


将净化器带到附近的官方垃圾回收中心。过滤网则属于生活垃圾一类。



2 认识怡动车载空气净化器

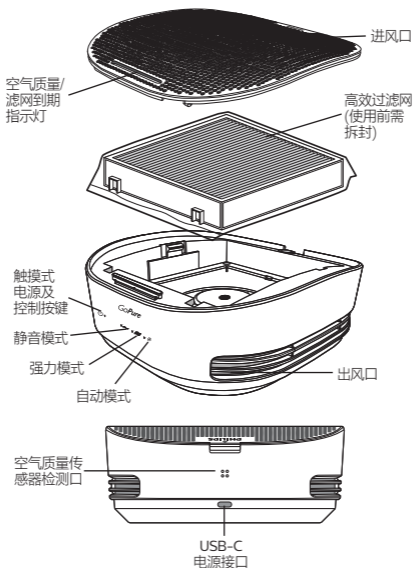

2.1 熟悉飞利浦怡动车载空气净化器盒内配件





△ 注意
为了您的安全，请依照使用说明书安装净化器。


为了您的安全，请只使用本包装盒内的配件安装净化器。亮锐不承担任何因安装不当而引起的损害或事故责任。

3 如何在车内安装飞利浦怡动车载空气净化器



3.1 安装-使用头枕或扶手

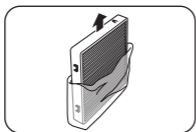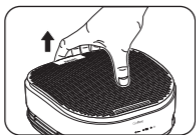

1 打开上盖，拆除滤网塑料包装。

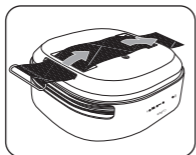

2 将安装带插入产品底部的插槽中，绒毛面朝向净化器。

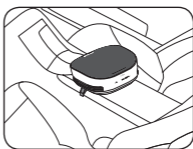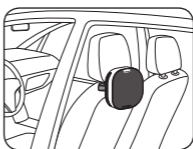

3 如图所示，您可以将飞利浦怡动车载空气净化器安装到车内任何头枕或扶手上。

请注意：


- 1 安装绑带不一定适合所有车型的扶手。
- 2 请勿将净化器放在仪表盘和安全气囊上。

⚠ 危险

为了您的安全，切勿在行车时试图关闭或操作净化器。
切勿使用其它设备，如胶带、绳子等等。



3.2 连接和操作

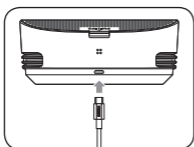

1 依图示，将净化器连上 USB-C 电源线。



2 在车内将电源线连接到 USB 电源插座。(为保证最佳洁净性能，净化器输入电流需大于5V/1A)



△ 重要事项

使用飞利浦怡动净化器时：
· 保持车内低风速水平。
· 保持车窗紧闭。

△ 注意

为了您的安全，请驾驶者切勿在行车时试图手动关闭或操作净化器。操作净化器前，请先停车！
不推荐使用车内USB数据接口供电。


简体中文




4 使用怡动车载空气净化器功能



当车载电源启动时，净化器将自动运行在自动模式。



1 关机状态下，触摸电源控制键，机器将开机进入自动模式运行。



- 2 触摸电源控制键，伴随提示音净化器进入强力模式，再次触摸进去静音模式。
- 3 如需关机，持续触摸电源控制键 2秒。

熟悉怡动健康空气指示灯

怡动健康空气指示灯将随时显示您车内的空气质量。



红色 >150 ug/m³ PM2.5严重污染



黄色 76-150 ug/m³ PM2.5中度污染



蓝色 0-75 ug/m³ PM2.5优



开机后，空气质量指示灯黄灯闪烁 需要更换过滤网






5 过滤网的更换及重置

飞利浦怡动车载空气净化系统由多层过滤网组成，确保最佳空气净化质量。所有过滤网均装配在同一个可简便更换的过滤器内。


△ 重要事项

飞利浦怡动车载空气净化器自动提醒您更换过滤网。

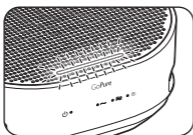


当需要更换过滤时，每次开机时，空气质量指示灯黄灯闪烁。

请务必使用正品飞利浦怡动过滤网做及时更换，这将维持您的怡动车载空气净化器的最佳性能，确保车内空气最大纯净度。

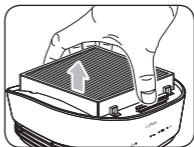

3 如图示取下过滤网。

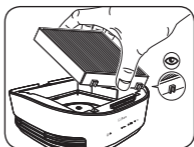

4 对齐前段的沟槽，插入新的替换过滤网。


△ 重要事项

过滤网只能单向滑入，切勿强行安装。参见上图




5.2 如何在更换过滤网后重置怡动空气净化器

5.1 如何更换过滤网



1 将飞利浦怡动车载空气净化器设备同电源断开。

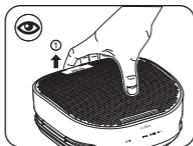

2 如图示顶出进风顶盖。取下顶盖。

△ 重要事项

每次更换过滤网之后，您必须重置飞利浦怡动车载空气净化器。

1. 机器在连接电源状态下，保持关机状态。
2. 持续触摸电源按键5秒直到听到提示音后松开按键，净化器进入滤网复位程序。5秒后空气质量指示灯变为蓝色，滤网复位成功。
3. 若滤网重置失败，请重复以上操作。





6 飞利浦怡动车载空气净化器疑难解答

问题 1

飞利浦怡动净化器不能切换到强力模式。

解答 1

- 请检查是否正在使用车内数据USB端口供电，数据USB端口通常电流较低，不推荐用于产品供电。
- 请使用车内具有充电功能的USB端口。
- 亦可使用5V/1A以上的USB转接口。

问题 2

当空气质量指示灯显示黄色或红色时，飞利浦怡动净化器反复重启。

解答 2

- 请检查是否正在使用车内数据USB端口供电，请使用车内具有充电功能的USB端口（或电流大于1A）。
- 请检查电源连接并保证USB线已插紧。
- 如果仍然不能正常启动，请联系零售商。

问题 3

某些车型即使在熄火时，仍会继续输出5V的电压。

解答 3

- 为避免耗尽电池，飞利浦怡动车载空气净化器将在连续运转两小时后自动关闭电源。
- 如欲再次启动怡动净化器，请触摸控制键。

问题 4

更换过滤网后，空气质量指示灯在重启时呈黄灯闪烁。

解答 4

- 电源线连接条件下关闭净化器并按照章节5.2复位滤网。
- 重复章节5.2上的重置步骤。

问题 5

飞利浦怡动净化器风扇出现短暂停转。

解答 5

正常现象：净化器进入电压保护。有时电压值会发生变化。在这种情况下，净化器风扇停转，直到电压恢复正常为止。触摸控制键重启。

问题 6

飞利浦怡动空气质量指示灯长时间没有变化。

解答 6

- 可能表示空气质量稳定。
- 可能表示空气通风口堵塞或遭污染。
- 确保净化器周围空气畅通。
- 重启净化器，观察问题是否仍然存在。如果指示灯仍然长时间没有变化，请联系零售商。

问题 7

飞利浦怡动空气质量指示灯经常变化。

解答 7

正常现象，净化器运转正常。当空气质量不佳时，净化器会循序渐进地完成其净化功能。尽管如此，如果空气中的粉尘分布不均，空气质量指示灯则会即时显示净化器周围的空气质量，这可能会引起空气质量指示灯频繁变化。这意味着净化器运转正常，请让它完成其净化功能，并耐心等待指示灯变蓝。

问题 8

飞利浦怡动空气质量指示灯为蓝色，但车内仍然有异味。

解答 8

- 飞利浦怡动空气质量指示灯仅能显示空气中的粉尘污染。却不能显示化学污染。尽管如此，飞利浦怡动净化器在运转时仍然能去除化学污染物。
- 让净化器完成其净化功能，快速改善空气质量。

问题 9

飞利浦怡动车载空气净化器已运转了较长一段时间，但我的新车内仍然有异味。

解答 9

新车内的某些异味归咎于多种因素。

怡动净化器继续净化空气，尽管如此，新车可能会不断生成新的污染物。怡动车载空气净化器能显著减少空气污染物。

为加快新车内空气净化过程，您可以启动怡动车载空气净化器的高速模式（第15页第4步）。





产品保修卡

此产品设计精良，品质优异，在正常使用及保养下，应能表现出优异性能。
本产品自购买日期起（以购机发票为准），整机保修1年。按照下列保用条例，亮锐将
为持卡用户提供免费维修服务。

保用条例：

- 保用服务只限于一般正常使用下有效。一切人为损坏，例如接入不适当电源，使用不适当配件，不依说明使用，非经本公司认可之维修和改装，错误使用或疏忽而造成损坏，不适当安装或因天灾造成损坏等，保用服务立即失效。
- 维修时请携带此卡原件和发票原件，并随产品一起提供给销售商。否则，将不能保证保修服务的正常提供。
- 保修卡和发票若经修改，将不能获得保修服务。
- 请联络您所购买的产品的销售商，此销售商将协助您进行产品的保修服务。
- 对不依照上述保用条例办理之用户，本公司对上述条例负有解释权。

以下信息由用户填写：

(以下信息我们将严格保密，仅用于维修联络之目的，请务必填写准确详细信息)

姓名：_____ 详细地址：_____
_____ 电话：_____ 邮编：_____

以下信息由零售商填写：

零售商：_____ 负责人：_____

地址：_____

电话：_____ 型号：_____ 机身编号：_____

(若购买日期与发票日期不符，或无相关信息，将按出厂日期顺延1个月起算)

以下信息由亮锐填写：

故障描述：

1. _____
2. _____

保修日期	受理日期	故障现象	故障原因	维修纪录	维修完成日期	责任人

客户服务热线：400 690 8826

维修凭证

兹提供给(销售商名称) _____ 空气净化器壹台，

机身编号：_____

接收人签字：_____

送修人签字：_____

日 期：_____

备注：请凭此领取维修产品，并交还此凭证

维修凭证

兹提供给(销售商名称) _____ 空气净化器壹台，

机身编号：_____

接收人签字：_____

送修人签字：_____

日 期：_____

备注：请凭此领取维修产品，并交还此凭证

合格证

检验员：_____

日 期：_____







Lumileds is the warrantor of this product.
Philips and the Philips Shield Emblem are registered trademarks
of Koninklijke Philips N.V. and are used under license.
2020 © Lumileds Holding B.V. All rights reserved.

亮锐(Lumileds)为此产品提供质保。
飞利浦(Philips)以及飞利浦盾牌为皇家飞利浦有限公司(Koninklijke
Philips N.V.)的注册商标，皇家飞利浦有限公司许可亮锐使用。
2020 © 亮锐公司(Lumileds Holding B.V.)版权所有。
保留所有权利。

321100823571