

# PHILIPS

car headlight bulb

X-tremeVision

Type of lamp: H4

Pack of: 2

12 V,60/55 W

P43t-38



923494117114



## Feel safe, drive safe

up to 100% more light: boost your visibility on the road

Philips X-tremeVision headlight bulbs offers up to 100% more light with a light beam up to 35 meters longer than a standard lamp. X-tremeVision is engineered with state-of-the-art technology for ultimate bright light.

### Original Equipment manufacturer

- Philips is the choice of major car manufacturers
- Award winning car lamp manufacturer
- Respecting high quality standards of the ECE homologation

### Very high quality and ultra resistant car lamp

- Philips car lamps are highly resistant against humidity
- Philips car lamps are made of high-quality quartz glass

### more vision for better visibility

- X-tremeVision projects 35 m light extra than a standard bulb
- Change both your headlamps at once for more safety
- Wide range of 12V lamps to meet all functions
- Greater driving comfort and safety

# Highlights

## Car manufacturer choice



For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting

## Change by pairs



Highly recommended to change them by pairs for symmetric light performance

## Designed for multiple usage




Which 12V lamp for which function ? Philips Automotive offering includes all car specific functions : high beam, Low beam, front fog , front indicator, side indicator, rear indicator, stop light, reversing light, rear fog light, license plate lights, rear position/parking light, interior lights.

## ECE homologation

Philips automotive products and services are considered best-in-class in the Original Equipment Manufacturer market and the

aftermarket. Manufactured from high quality products and tested to the highest specifications, our products are designed to maximize the safety and comfort of our customers' driving experience. Our entire product range is thoroughly tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements. Put simply, this is quality you can trust.

## Resistance against humidity

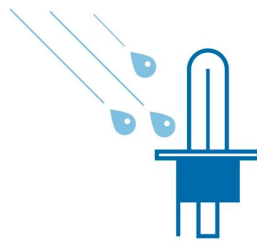

Only a burning bulb made of quartz glass (filament 2650°C, glass 800°C) can resist thermal shocks : if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

## Rewarded Car lamps



Our lamps are often rewarded by automotive experts

## High quality and visibility



X-treme Vision provides you with a better reactivity thanks to an earlier recognition of obstacles and traffic signs. Light is a


fundamental part of the driving experience and light is the first and only part of the safety circle that actually helps prevent accidents. Philips promotes active safety protection to prevent accidents by increasing overall visibility and road illumination.

## High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

## 100% more vision on the road

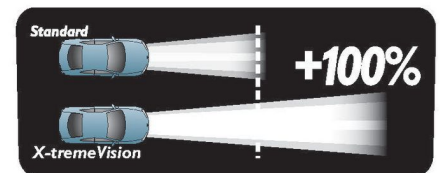

Based on a unique filament design and optimized geometry, X-tremeVision is engineered with state-of-the-art technology for ultimate performance and bright, white light where it matters the most.

# Specifications

## Packaging Data

Packaging type: S2/L  
EAN1: 8727900369106  
EAN3: 8727900369113

## Electrical characteristics

Voltage: 12 V  
Wattage: 60/55 W

## Lifetime

Life time: 400h

## Light characteristics

Lumens: 1650 lm

## Outerpack information

Gross weight per piece: 0.601 kg  
Height: 12 cm  
Length: 28,6 cm  
Width: 14,1 cm  
Net weight per piece: 215 g

## Product description

Type: H4  
Application: High beam, Front fog light, Low beam  
Designation: H4-12342XV-CI  
Homologation ECE  
Marking ECE: E1 2C3  
Range: X-tremeVision  
Technology: Halogen  
Base: P43t-38

## Packed product information

Gross weight per piece: 60.1 g  
Height: 13,3 cm  
Length: 5,3 cm  
Net weight per piece: 21.5 g  
Pack Quantity / MOQ: 2  
Width: 11,0 cm

## Marketing specifications

Expected benefits: More light  
Product highlight: Up to 100% more light

## Ordering information

Order entry: 12342XVS2  
Ordering code: 36910628

