

# PHILIPS

Motorcycle  
headlights

CityVision Moto

Type of lamp: H7

Pack of: 1

12 V, 55 W

Style



12972CTVBW

## Feel safe, ride safe

### See and be seen

For better safety and visibility in city traffic, Philips has designed CityVision Moto lights with a distinctive, attention-grabbing orange effect in the headlight. CityVision Moto bulbs also produce up to 40% more vision.

#### **Be seen in traffic**

- Distinctive orange effect in the headlight
- Up to 40% more vision
- Designed for city riders
- Vibration resistance up to 10G

#### **State-of-the-art technology**

- Philips is the choice of major motorbike manufacturers.
- Respecting the high quality standards of ECE homologation

#### **Vibration resistance**

- Philips moto lamps are made of high-quality quartz glass

# Highlights

## Designed for city use



Philips CityVision Moto headlights are specifically designed to improve the rider's safety in a city environment. The attention-grabbing orange effect and the 40% increase in light output allow a safer riding experience in traffic and play an active role in accident reduction.

## Distinctive orange effect



Philips CityVision Moto headlights have been specifically developed for city riders. Thanks to their distinctive orange effect, Philips motorcycle bulbs grab the attention of drivers and guarantee earlier recognition of the rider.

## ECE homologation

Philips Automotive is dedicated to producing best-in-class products and services in the Original Equipment Manufacturer market as well as in the aftermarket. Our products are manufactured from high-quality materials and tested to the highest specifications to

maximise the safety and driving comfort of our customers. Our entire production is meticulously tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements.

## High-quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2650° C and glass 800° C) are able to withstand severe thermal shock. With the capability for increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light.

## Manufacturers' choice


For 100 years, Philips has been at the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting.

## Vibration resistant



Philips CityVision Moto lamps are designed with state-of-the-art technology to resist vibrations up to 10G and last longer. Those motorcycle bulbs are mounted with an extremely resistant double coil filament to withstand a wide range of vibrations including physical shocks.

## Greater light-beam projection

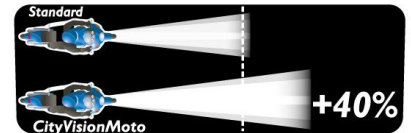

Offering up to 40% more vision on the road, Philips CityVision Moto headlights actively participate in increasing rider safety. Thanks to better visibility on the road, Philips motorcycle lights allow for better obstacle recognition and accident prevention.

# Specifications

## Packaging Data

Packaging type: Blister  
EAN1: 8727900398984  
EAN3: 8727900398991

## Electrical characteristics

Voltage: 12 V  
Wattage: 55 W

## Lifetime

Lifespan: Up to 400 h

## Light characteristics

Lumens: 1500  
Colour temperature: Up to 3200 K

## Marketing specifications

Product highlight: See and be seen  
Expected benefits: More light

## Product description

Designation: H7 CityVision Moto  
Range: CityVision Moto  
Technology: Halogen  
Base: PX26d  
Application: High beam, Low beam  
Type: H7

## Ordering information

Ordering code: 39898430  
Order entry: 12972CTVBW

## Outer pack information

Gross weight per piece: 350 g  
Height: 13 cm  
Length: 19 cm  
Width: 19 cm

## Packed product information

Gross weight per piece: 35 g  
Height: 12.900 cm  
Length: 9.500 cm  
Net weight per piece: 12.4 g  
Pack Quantity / MOQ: 10  
Width: 3.500 cm

