

PHILIPS



Longer Lifetime

LongLife EcoVision

Type of lamp: H4

12 V, 60/55 W

Long lasting, less replacement

Ultra-resistant bulb



12342LLECOS2

Drive with care

Higher lifetime, less replacement

Tired of changing your headlight bulbs all the time? With higher lifetime of a car bulb, Philips LongLife EcoVision is the choice for drivers seeking to minimise maintenance on their vehicles.

Very high quality and ultra-resistant car lamp

- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant to humidity
- Philips car lamps are highly UV resistant

Lasts significantly longer than a standard lamp

- Change both your headlamps at once for more safety
- Wide range of 12 V lamps to meet all functions
- Less waste thanks to fewer replacements
- High-quality filament design to minimise maintenance
- Extra lifetime

Original Equipment manufacturer

- Philips is the choice of major car manufacturers
- Award-winning car lamp manufacturer
- Complying with the high quality standards of ECE homologation

Highlights

Car manufacturers' choice



For 100 years, Philips has been at the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting

Change in pairs



It is highly recommended to change them in pairs for symmetrical light performance

Designed for multiple usage



Which 12V lamp for which function? Philips Automotive offering includes all car specific functions: high beam, low beam, front fog, front indicator, side indicator, rear indicator, stop light, reversing light, rear fog light, licence plate lights, rear position/parking light, interior lights.

Drive several times longer

With Philips LongLife EcoVision, drivers don't have to worry about changing a headlight for up to 3000 hours*. (*Philips H4 LongLife EcoVision Lifetime may differ by bulb types. Please refer to light specifications)

ECE homologation

Philips automotive products and services are considered best in class in the Original Equipment Manufacturer market and the aftermarket. Manufactured from high-quality products and tested to the highest specifications, our products are designed to maximise the safety and comfort of our customers' driving experience. Our entire product range is thoroughly tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements. Put simply, this is quality you can trust.

High-quality quartz glass




UV-quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650°C and glass 800°C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

Reduced maintenance



With Philips LongLife EcoVision, you need significantly fewer lamp replacements. This makes them the ideal lamp for high-voltage cars.

Resistance to humidity

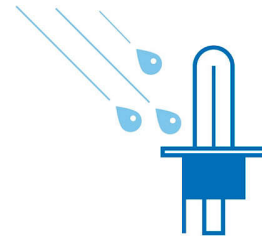

Only a burning bulb made of quartz glass (filament 2650°C, glass 800°C) can resist thermal shocks: if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

Award-winning car lamps



Our lamps are often rewarded by automotive experts

UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensuring their longevity

Reduce waste, drive greener

It is the right choice for drivers looking for an environmentally friendly lighting solution.

Specifications

Marketing specifications

Expected benefits: Long lasting

Product highlight: Lifetime up to 1500 hours

Product description

Application: High beam, Front fog light, Low beam

Base: P43t-38

Designation: H4 LongLife EcoVision

ECE certification

Range: LongLife EcoVision

Technology: Halogen

Type: H4

Lifetime

Life time: Up to 3000 h

Light characteristics

Lumens: 1650 \pm 15% lm

Colour temperature: Up to 3100 K

Electrical characteristics

Wattage: 60/55 W

Voltage: 12 V

Ordering information

Order entry: 12342LLECOS2

Ordering code: 36257228

Packaging Data

Packaging type: S2

EAN1: 8727900362572

EAN3: 8727900362589

Packed product information

Width: 11 cm

Height: 13.3 cm

Net weight per piece: 21.359 g

Gross weight per piece: 62 g

Length: 5.3 cm

Pack Quantity: 2

MOQ (for professionals): 10

Outer pack information

Length: 28.6 cm

Width: 14.1 cm

Height: 12 cm

Gross weight per piece: 0.62 kg

