

PHILIPS

Truck headlight bulb


MasterDuty

Type of lamp: H4

Pack of: 1

24 V, 75/70 W

More light

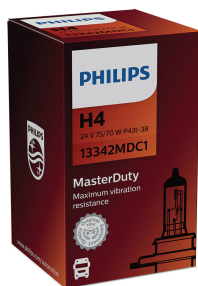

13342MDC1



Built to last

Maximum vibration resistance

The Philips MasterDuty headlamps are designed for maximum vibration resistance and excellent lifetime. MasterDuty is the right choice for drivers seeking toughness that lasts.

Durable lights with vibration resistance

- Durable lights with increased resistance to vibration

Up to 130% brighter light* for better visibility

- See further and react faster with up to 130% brighter light

Enhanced lifetime

- A lifetime of safety so you can see and be seen

Philips automotive quality

- Philips is the choice of major car manufacturers

Highlights

Maximum vibration resistance

Philips MasterDuty features increased mount and base stiffness for ultimate protection against mechanical shock as well as a robust double coil filament designed to withstand severe vibration while remaining stable. Philips MasterDuty provides drivers with an increased lifetime up to 550 hours.

Up to 130% brighter light

Perfect illumination is especially important in the distance – usually between 75-100 metres in front of your vehicle. Philips MasterDuty boosts your visibility with up to 130% brighter light* on the road. This helps you recognise obstacles and any potential dangers earlier than with most other halogen headlight lamps.

Enhanced lifetime

Every potential failure of a spare part is a risk for you and your vehicle. This is especially true for headlights. Every broken headlight

lamp reduces visibility and safety for you and the oncoming traffic. Philips MasterDuty is optimised for a long and reliable lifetime. You can see and be seen for longer than with any other high-performance lamp.

Highest quality car lighting

Technologically advanced Philips lighting is renowned in the automotive industry, and has been for over 100 years. The Philips Original Equipment Quality products are designed and developed following strict quality control processes (including applicable ISO norms), leading to consistently high production standards. Philips MasterDuty is compatible with truck and bus models of major brands. See the product selector guide for more information.

Specifications

Marketing specifications

Expected benefits: More light
Product highlight: Built to last

Product description

Application: High beam, Low beam
Designation: 13342MDC1
Range: MasterDuty
Technology: Halogen
Type: H4
Base: P43t-38
Homologation ECE

Electrical characteristics

Voltage: 24 V
Wattage: 75/70 W

Ordering information

Order entry: 13342MDC1
Ordering code: 82579760

Outerpack information

Gross weight per piece: 3.25 kg
Height: 16.7 cm
Length: 47.8 cm
Width: 24.1 cm

Packaging Data

EAN1: 8711500825797
EAN3: 8711500825803
Packaging type: C1

Packed product information

Gross weight per piece: 0.282 g
Height: 16.7 cm
Length: 4,600 cm
Net weight per piece: 0.215 g
Pack Quantity / MOQ: 100
Width: 24.1 cm

