




Philips Xperion 6000  
Under-Bonnet Light

**High lumen output**  
1200 lm and 110° beam radius  
Presence sensor  
Extension up to 2.08 metres

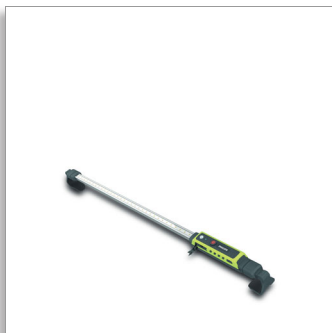

**LUMX60BONNX1**

## Designed with you in mind

### Extendable, powerful LED under-bonnet lamp

The Philips Xperion 6000 Under-Bonnet LED Light offers a seamlessly dimmable beam of up to 1,200 lumens, 360° rotatability and a telescopic mount extending up to 2.08 metres on both sides, ideal for working on cars, vans and trucks.

#### Extended warranty

- Extend your warranty online to 3 years

#### Long-lasting performance

- Long-life battery
- Presence sensor to save battery life

#### Powerful, bright LED light

- Seamless light dimming

#### Enhanced durability

- Robust, and water- and dust-protected

#### Enhanced versatility

- Sliding light module
- Telescopic, extendable mount

**PHILIPS**

## Under-Bonnet Light

High lumen output 1200 lm and 110° beam radius, Presence sensor, Extension up to 2.08 metres

# Specifications

### Marketing specifications

- Product highlight: 2.08 m extendable for all vehicles
- Expected benefits: Designed with you in mind

### Product description

- Hands-free options: Presence sensor
- Hook: Rotatable, 2 sides extendable
- Impact protection rating (IK): IK07
- Magnet: No
- Materials and finishing: Aluminium
- Number of LEDs: 32
- Operating Temperature: -10°C to 40°C
- Range: Xperion 6000
- Technology: LED
- Ingress protection rating (IP): IP65
- Resistant to: Grease, oil, workshop solvents

### Light characteristics

- Beam angle: 110 degree
- Colour temperature: 5800 K
- Light output (eco): 120 lumens
- Light output (boost): 1200 lumens

### Electrical characteristics

- Voltage: 3.7 V

- Power source: Rechargeable battery
- Battery capacity: 5200 mAh
- Battery run time (boost): Up to 3 hours
- Battery run time (eco): Up to 20 hours
- Battery type: Lithium battery
- Plug type: 5 V 2 A adapter (except UK)
- Charging cable type: Type C USB
- Battery charging time: Up to 3.5 hours
- Wattage: 1.2 W

### Ordering information

- Order entry: X60BONNX1
- Ordering code: 02171731

### Packaging Data

- EAN1: 8719018021717
- EAN3: 8719018021724

### Packed product information

- Length: 1160 cm
- Width: 118 cm
- Height: 60 cm
- Pack Quantity / MOQ: 6
- Weight with batteries: 960 g
- Cable length: USB type-C 100 cm cable, 5 V 2 A adapter

## LUMX60BONNX1/10

# Highlights

### Powerful bright LED light

The Philips Xperion 6000 Under-bonnet LED light offers a powerful 1200 lumens of light, helping you spot even the smallest of details. Tune the light intensity as you wish with a rotatable knob, to adjust to your environment or preserve battery life.

### Telescopic, extendable mount

The Philips Xperion 6000 Under-Bonnet LED Light is equipped with two integrated telescopic hooks extendable on both sides and rotatable through 360°. The hooks feature wider openings and are covered with soft rubber for easy attachment to the vehicle bonnet without scratching the paintwork. With a mount stretching from 1.10 to 2.08 metres, our Philips Xperion 6000 Under-Bonnet LED lamp can be used in a wide range of locations. Whether under the bonnet, roof or rear hatch of any car, van or lorry, this lamp has the flexibility you need.

### Sliding light module

Thanks to the Philips Xperion 6000 Under-Bonnet LED Light's unique design, you can slide the light module along the mount to the area you want to illuminate. No need to change the lamp angle when repositioning the module.

### Presence sensor

The Philips Xperion 6000 Under-Bonnet LED Light is equipped with a presence sensor that senses human activity within a 2.5 metre radius. This enables the lamp to switch off automatically after 5 minutes when unused. It switches on again when a presence is detected, saving battery life and giving you hands-free control.

### Enhanced durability

Complying with international impact-resistance standard IK07, the robust aluminium housing of the Philips under-bonnet LED light is designed to withstand tough working environments. It is IP54-rated for splash and dust resistance. Built to strict manufacturing standards with multiple sealing processes, our lamp is resistant to splashed water and is protected from dust.

### Up to 3 year warranty

Benefit from Philips standard 2 year warranty plus 1 additional year.\*

### Long-life battery

The 5200 mAh long-life battery of the Philips Xperion 6000 Under-Bonnet LED Light provides you with three hours of continuous use in Boost mode, and up to 20 hours in Eco mode. See when the battery needs charging. It features a battery-status indicator that shows how much battery life is left. Never run out of power in the middle of a job again. The indicator also displays the time remaining until the battery is fully charged.



Issue date 2024-11-22

Version: 5.5.1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* To be claimed on the Philips extended-warranty webpage