

PHILIPS

Dashcam

ADR900

WaveGuard 24/7 parking monitor

Fatigue index and driver alert

171° super wide angle

Perfect night view



ADR90BLX1



Your personal road safety guardian

with WaveGuard 24hr automatic parking monitoring

Enjoy peace of mind while driving, Philips car driving video recorder will protect you in case the unexpected happens. And when you are away, Philips unique WaveGuard parking monitoring will automatically switch on to watch over your car.

Hassle free & reliable with emergency support

- Automatic recording when you start your vehicle
- Collision detection and automatic emergency recording
- Fatigue index and driver alert
- Emergency Capture, to always catch the unexpected

WaveGuard 24h automatic parking monitoring

- WaveGuard watch over your car when you are away, day & night

Crystal clear images day and night

- Vivid details with 1080p Full HD definition
- Perfect night view
- 171° degree wide angle lens

Designed and tested for automotive conditions

- Designed to work under tough driving conditions
- CCC/CE certified for safe installation and use

Highlights

Automatic recording



Automatic recording

As soon as you power on your vehicle, the driving recorder starts operating automatically.

Collision detection



Collision detection

In case of a collision, an emergency recording is automatically saved to secure the evidence and prevent overwriting.

Fatigue index




The fatigue index shows the evolution of a driver's fatigue, and will indicate a visual and acoustic warning message when the driver should be taking a rest.

Emergency Capture

Philips Emergency Capture ensures fast and emergency recording buttons at hand. Capture and save everything that happens on the road when you need it.

WaveGuard 24/7 parking monitor

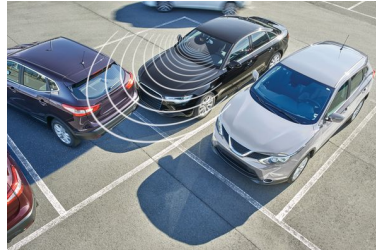

To protect your vehicle continuously 24/7, ADR900 will automatically switch to WaveGuard surveillance when you park your car. WaveGuard, Philips unique microwave detection technology, sense the scene in front of the car, and start recording whenever it detects moving object, such as human and vehicle, to be approaching too close to your vehicle. It will then shutdown automatically to save vehicle battery power.

Full HD



Full HD

Capture vivid details with 1080p Full HD definition

Night view



Capture sharpest details, day and night. With optimized Night View.

View angle



Wide angle 171°

Capture more of the scene with a proven 171° degree super wide angle

Heat and vibration resistance

Philips automotive driving recorder is equipped with high quality components, to ensure resistance against vibrations and extreme temperature conditions.

CCC/CE certified

Philips Automotive Driving Recorder is compliant with international certifications and tested against electromagnetic interference like GPS or cell phone.

Specifications

Product description

Designation: ADR900
Technology: Car Driving Recorder
Operating Temperature: -10°C ~ 65 °C
Storage Temperature: -20°C ~ 70 °C
File Format: .MOV, H.264 video compression
Fixed Lens: 171° super wide angle lens
Random Access Memory: 64Mx16bit (1Gbits) DDR2 SDRAM
Recording Time: 320min @32GB for full HD
Display: 2.7" LCD
G-sensor
Auto exposure
Auto white balance
LCD Auto Off
Seamless loop recording
Aperture Range: F/#2.0
Collision detection
Date and time stamp

Image Sensor: 2.1 Mega-pixels CMOS
Video resolution: Full HD 1080p
Emergency file protection
Recording media (ext. Memory): Micro SD card (up to 64GB)
Interface: HDMI, Micro USB 2.0
Languages: Chinese, English
Sub category: Road & parking protection
Improved night visibility: Yes, YES ISO6400 perfect night view
Automatic recording
Parking monitoring: WaveGuard
Internal Memory: 64Mb SPI Flash

Accessories included

Power cable length: 4 m
Accessories: 12V cable, Mounting bracket
Power: 12V car adapter

Weight and dimensions

Box weight: 370 g
Product dimensions (L x W x H): 106.7 x 50.0 x 32.5 mm
Product weight: 83 g

Marketing specifications

Expected benefits: Your road safety guardian
Product highlight: WaveGuard 24/7 parking monitor

Logistic data

EAN (China): 6947939172412
Ordering code (China): 17241230
Quantity in box: 1
Reference: ADR90BLX1

