



Philips Essential Moto  
Headlight bulb

Type of lamp: M5

Pack of: 1  
12 V, 18/18 W  
Standard

12166ESC1

## High quality replacement headlight

Ultra resistant with UV-quartz glass

Philips Essential Moto halogen headlamp is the high quality replacement lamp for you.

### High quality light for replacement use

- Quality replacement light for a comfortable ride
- Philips car lamps are made of high-quality quartz glass<sup>^</sup>

### Ultra resistant with UV-quartz glass

- Philips is the choice of major car manufacturers
- Philips car lamps are highly UV resistant
- Philips car lamps are highly resistant against humidity<sup>\*</sup>

# PHILIPS

Headlight bulb  
Type of lamp: M5 Pack of: 1, 12 V,18/18 W, Standard

# Highlights

## High quality replacement light




Philips Essential Moto headlights provides the optimal light performance for your everyday use.

## Car manufacturers' choice



For 100 years, Philips has been at the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting.

## Resistance against humidity

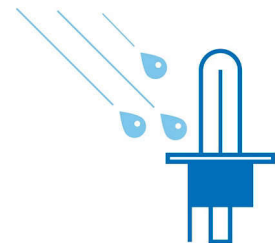

Only a burning bulb made of quartz glass (filament 2650°C, glass 800°C) can resist thermal shocks : such

as, if a drop of cold water touches the hot bulb, when you drive through water with a broken headlight unit.

## UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

## High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, eliminating the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability to withhold increased pressure inside the lamp, UV-quartz glass is able to produce more powerful lighting. ^Application varies per bulb type.

12166ESC1

# Specifications

## Marketing specifications

- Expected benefits: High quality light
- Product highlight: UV-blocking quartz

## Product description

- Application: High beam, Low beam, Additional high beam
- Base: P15d-25-1
- Designation: M5 Essential Moto
- Homologation ECE: NO
- Marking ECE: N/A
- Range: Essential Moto
- Technology: Halogen
- Type: M5

## Lifetime

- Life time: 150h

## Light characteristics

- Lumens: 400.0 ± 15% lm

## Electrical characteristics

- Wattage: 18/18 W
- Voltage: 12 V

## Ordering information

- Order entry: 12166ESC1
- Ordering code: 53385960

## Packaging Data

- Packaging type: C1
- EAN1: 8727900533859
- EAN3: 8727900533873

## Packed product information

- Gross weight per piece: 18 g
- Length: 2.7 cm
- Width: 2.6 cm
- Height: 6.5 cm
- Net weight per piece: 9.34 g
- Pack Quantity / MOQ: 100

## Outerpack information

- Length: 30 cm
- Width: 15.5 cm
- Height: 15 cm
- Net weight per piece: 934 g
- Gross weight per piece: 1800 g



Issue date 2024-02-16

Version: 8.0.1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)