

PHILIPS


car headlight bulb

CrystalVision

Type of lamp: H3

Pack of: 1

12 V,55 W

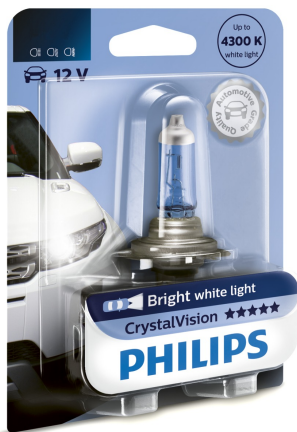

12336CVB1



Drive with style

Bright white light

Offering a bright white light close to daylight (up to 4300K), CrystalVision produces more light than a standard headlight lamp and is ideal for all-purpose driving, especially for drivers seeking crystal-clear vision at night.

Bright white light up to 4300K

- With whiter light, your visibility on the road increases

Bluish effect in the headlight

- Cool elegance for your headlights

High-quality quartz glass

- Philips car lamps are made of high-quality quartz glass

Non-ECE homologated, for off-road only

- Non-ECE homologated, driving great visibility
- Same power consumption, easy fitting

Highlights

Blue coating for whiter light

Philips CrystalVision headlight lamps provide the perfect choice for drivers who want a crisp white look for their headlights. Thanks to the Philips patented coating technology, CrystalVision provide a truly white light for great visibility and style.

High-quality quartz glass

UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the bulb, UV-quartz glass lamps are able to give a more powerful light.

Quality off-road lights

We are dedicated to producing best-in-class Philips automotive products and services in the aftermarket. Our products are

manufactured from high-quality materials and tested to the highest specifications to maximize the safety and driving comfort of our customers. Our entire production is meticulously tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000). Designed for off-road purposes, these lights are non-ECE homologated.

Standard power consumption

Featuring the same power consumption as standard halogen lamps with no wiring relays needed.

White light, better visibility

With a color temperature of up to 4300 Kelvin, Philips CrystalVision lamps illuminate the road ahead with a crisp, pure white beam that cuts through the darkness.

Specifications

Product description

Technology: Halogen

Type: H3

Range: CrystalVision

Application: Front fog

Designation: H3 CrystalVision

Homologation ECE: NO

Base: PK22s

Electrical characteristics

Voltage: 12 V

Wattage: 55 W

Light characteristics

Color temperature: Up to 4300 K

Lumens: 1550 ±15% lm

Lifetime

Life time: 250 h

Ordering information

Order entry: 12336CVB1

Ordering code: 77496530

Packaging Data

Packaging type: B1

EAN1: 8711500774965

EAN3: 8711500774996

Packed product information

Gross weight per piece: 19.4 g

Height: 12.9 cm

Length: 9.5 cm

Net weight per piece: 7 g

Width: 2.6 cm

MOQ (for professionals): 10

Pack Quantity: 1

Outerpack information

Height: 13 cm

Length: 25 cm

Width: 14 cm

Gross weight per piece: 0.274 kg

Marketing specifications

Expected benefits: Style

Product highlight: 4300K, Drive with style

