

# PHILIPS

car headlight bulb

BlueVision

Type of lamp: PSX24W

12 V

24 W, Pack of: 1

PG20/7

12276NBVB1

 Product Picture

## Drive with style

### Better visual comfort while driving

Neutral white light with a color temperature up to 3.700K on the headlight. Blue Vision bulb is an excellent option for those who want style in the car. High performance and quality. Offers excellent visual comfort while driving.

#### **Very high quality and ultra resistant car lamp**

- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity

#### **Original Equipment manufacturer**

- Award winning car lamp manufacturer
- Philips is the choice of major car manufacturers
- Respecting high quality standards of the ECE homologation

#### **The best blue Xenon effect for halogen lamps**

- Highlight your car on the streets. Add a touch of style.
- Change both your headlamps simultaneously for more safety
- Better visibility and visual comfort while driving

# Highlights

## More style to your car


Thanks to your white light of 4000K, your car will be highlighted on the streets, showing a stylish light

## High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

## Resistance against humidity

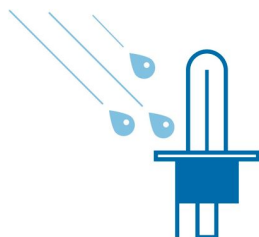

Only a burning bulb made of quartz glass (filament 2650°C, glass 800°C) can resist thermal shocks : if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

## Rewarded Car lamps



Our lamps are often rewarded by automotive experts

## Car manufacturers' choice

For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting

## Change in pairs

Highly recommended to change them by pairs for symmetric light performance

## ECE homologation

Philips automotive products and services are considered best-in-class in the Original Equipment Manufacturer market and the aftermarket. Manufactured from high quality products and tested to the highest specifications, our products are designed to maximize the safety and comfort of our customers' driving experience. Our entire product range is thoroughly tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements. Put simply, this is quality you can trust.

## Neutral white light of 3700 K

The light emitted by the lamps BlueVision stimulates the concentration of the driver, as it enables greater visual comfort while driving.

## Packaging Data

EAN1: 8727900392999

EAN3: 8727900393002

Packaging type: B1

## Product description

Technology: Conventional

Application: fog beam

Range: BlueVision

Type: PSX24W

Homologation ECE

Designation: HV-12276BV-BI

Base: PG20/7

Marking ECE: E4 2MK

## Electrical characteristics

Wattage: 24 W

Voltage: 12 V

## Marketing specifications

Expected benefits: Style

Product highlight: Drive with style

## Light characteristics

Color temperature: 3700 K

## Ordering information

Order entry: 12276NBVB1

Ordering code: 39299930

## Outerpack information

Gross weight per piece: 246 g

Height: 13 cm

Length: 15 cm

Net weight per piece: 96 g

Width: 13.5 cm

## Packed product information

Gross weight per piece: 18.4 g

Height: 12.9 cm

Length: 6.7 cm

Net weight per piece: 9.6 g

Width: 2.7 cm

Pack Quantity / MOQ: 1

