



Philips BlueVision
car headlight bulb

Type of lamp: H3

Pack of: 1
12 V, 55 W
PK22s



924830017127

Drive with style

Better visual comfort while driving

Neutral white light with a color temperature up to 3.700K on the headlight. Blue Vision bulb is an excellent option for those who want style in the car. High performance and quality. Offers excellent visual comfort while driving.

Original Equipment manufacturer

- Philips is the choice of major car manufacturers
- Award winning car lamp manufacturer
- Respecting high quality standards of the ECE homologation

Very high quality and ultra resistant car lamp

- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity

PHILIPS

car headlight bulb
Type of lamp: H3 Pack of: 1, 12 V, 55 W, PK22s

Highlights

Car manufacturer choice



For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting

ECE homologation

Philips automotive products and services are considered best-in-class in the Original Equipment Manufacturer market and the aftermarket. Manufactured from high quality products and tested to the highest specifications, our products are designed to maximize the safety and comfort of our customers' driving experience. Our entire product range is thoroughly tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements. Put simply, this is quality you can trust.


High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and

vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

Resistance against humidity

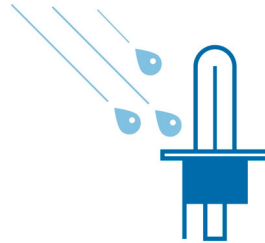

Only a burning bulb made of quartz glass (filament 2650°c, glass 800°c) can resist thermal shocks : if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

Rewarded Car lamps



Our lamps are often rewarded by automotive experts

924830017127

Specifications

Packaging Data

- EAN1: 8711500695307
- EAN3: 8711500695314

Electrical characteristics

- Voltage: 12 V
- Wattage: 55 W

Light characteristics

- Color temperature: 3700 K

Ordering information

- Order entry: 12336BV+B1
- Ordering code: 69530730

Outerpack information

- Gross weight per piece: 318 g
- Height: 11 cm
- Length: 19,5 cm
- Net weight per piece: 70 g
- Width: 15,3 cm

Product description

- Type: H3
- Range: BlueVision
- Technology: Halogen
- Base: PK22s
- Homologation ECE
- Designation: H3-12336BV-BI
- Marking ECE: E1 21W

Packed product information

- Pack Quantity / MOQ: 10
- Gross weight per piece: 20,7 g
- Height: 13,5 cm
- Length: 2,348 cm
- Net weight per piece: 7 g
- Width: 9,5 cm

Marketing specifications

- Expected benefits: Style
- Product highlight: Much more style

Packaging details

- Packaging type: B1/L



Issue date 2020-02-03

Version: 10.0.1

12 NC: 8670 001 20257

© 2020 Philips Lighting Holding B.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Philips Lighting Holding B.V. or their respective owners.

www.philips.com

* Images merely illustrative