



Philips Essential Moto
Headlight bulb

Type of lamp: M5

Pack of: 1
12 V,25/25 w
Standard

High quality replacement headlight

Ultra resistant with UV-quartz glass

TICKET ID XGG-685-54450



12163ESC1

High quality light for replacement use

- Quality replacement light for a comfortable ride
- Philips car lamps are made of high-quality quartz glass^

Ultra resistant with UV-quartz glass

- Philips is the choice of major car manufacturers
- Philips car lamps are highly UV resistant
- Philips car lamps are highly resistant against humidity*

PHILIPS

Headlight bulb
Type of lamp: M5 Pack of: 1, 12 V, 25/25 W, Standard

Highlights

High quality replacement light




Philips Essential Moto headlights provides the optimal light performance for your everyday use.

Car manufacturers' choice



For 100 years, Philips has been at the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting.

Resistance against humidity

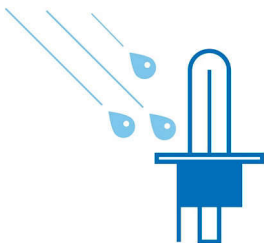

Only a burning bulb made of quartz glass (filament 2650°C, glass 800°C) can resist thermal shocks : such

as, if a drop of cold water touches the hot bulb, when you drive through water with a broken headlight unit.

UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, eliminating the risk of explosion. Philips quartz-glass lamps (filament 2650°C and glass 800°C) are able to withstand severe thermal shock. With the capability to withstand increased pressure inside the lamp, UV-quartz glass is able to produce more powerful lighting. ^Application varies per bulb type.

12163ESC1

Specifications

Marketing specifications

- Expected benefits: High quality light
- Product highlight: UV-blocking quartz

Product description

- Application: High beam, Low beam, Additional high beam
- Base: P15d-25-1
- Designation: M5 Essential Moto
- Homologation ECE: NO
- Marking ECE: N/A
- Range: Essential Moto
- Technology: Halogen
- Type: M5

Lifetime

- Life time: 150h

Light characteristics

- Lumens: 520 lm ± 15% lm

Electrical characteristics

- Wattage: 25/25 W
- Voltage: 12 V

Ordering information

- Order entry: 12163ESC1
- Ordering code: 53264760

Packaging Data

- Packaging type: C1
- EAN1: 8727900532647
- EAN3: 8727900532661

Packed product information

- Gross weight per piece: 18 g
- Length: 2.7 cm
- Width: 2.6 cm
- Height: 6.5 cm
- Net weight per piece: 9.34 g
- Pack Quantity / MOQ: 100

Outerpack information

- Length: 30 cm
- Width: 15.5 cm
- Height: 15 cm
- Net weight per piece: 934 g
- Gross weight per piece: 1800 g



Issue date 2024-02-16

Version: 7.0.1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com