


Philips PremiumVision
Moto
Motorcycle headlights

Type of lamp: HS1

Pack of: 1
12 V, 35/35 W

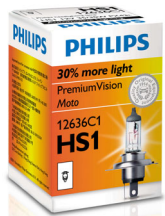

12636C1

Feel safe, ride safe

Up to 30% more vision

Producing up to 30% more vision than a standard lamp, Vision Moto headlamps allow motorcycle riders to see farther with improved light beam performance at a very competitive price. For greater safety, choose Vision Moto bulbs!

State-of-the-art technology

- Respecting the high quality standards of ECE homologation
- Philips is the choice of major motorbike manufacturers.

The most economical choice

- The best value choice

30% more vision than a standard lamp

- Philips moto lamps are made of high-quality quartz glass
- 30% more vision

PHILIPS

Motorcycle headlights
Type of lamp: HS1 Pack of: 1, 12 V, 35/35 W

Highlights

Best value



The Philips Vision Moto lamps are the best choice for drivers looking for economical lamp solutions and not willing to compromise on security. The motorcycle bulbs offer 30% more vision on the road than a standard lamp.

Greater light-beam projection

Offering up to 30% more vision on the road, Philips PremiumVision Moto headlamps are the perfect choice for motorcycle riders seeking light performance and safety. With better light output, riders can react faster to obstacles and avoid accidents.

High-quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2650° C and glass 800° C) are able to withstand severe thermal shock. With the capability for increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light.

Manufacturers' choice

For 100 years, Philips has been at the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting.

ECE homologation

Philips Automotive is dedicated to producing best-in-class products and services in the Original Equipment Manufacturer market as well as in the aftermarket. Our products are manufactured from high-quality materials and tested to the highest specifications to maximise the safety and driving comfort of our customers. Our entire production is meticulously tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements.

12636C1

Specifications

Marketing specifications

- Expected benefits: More light
- Product highlight: Up to 30% more vision

Product description

- Application: High beam, Low beam
- Base: PX43t
- Designation: HS1 Vision Moto
- Range: PremiumVision Moto
- Technology: Halogen
- Type: HS1

Lifetime

- Life time: 400h

Electrical characteristics

- Wattage: 35/35 W
- Voltage: 12 V

Ordering information

- Order entry: 12636C1
- Ordering code: 51250130

Packaging Data

- Packaging type: Carton
- EAN1: 8711559512501
- EAN3: 8727900370881

Packed product information

- Gross weight per piece: 705 g
- Length: 4.55 cm
- Width: 4.55 cm
- Height: 7.6 cm
- Pack Quantity / MOQ: 10

Outer pack information

- Length: 23.8 cm
- Width: 9.3 cm
- Height: 7.8 cm
- Gross weight per piece: 705 g



Issue date 2024-01-22

Version: 10.0.1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com