

PHILIPS

car headlight bulb

X-tremeVision

Type of lamp: H7

12 V

55 W, Pack of: 2

PX26d



928204717129



Feel safe, drive safe

up to 100% more light: boost your visibility on the road

Philips X-tremeVision headlight bulbs offers up to 100% more light with a light beam up to 35 meters longer than a standard lamp. X-tremeVision is engineered with state-of-the-art technology for ultimate bright light.

Original Equipment manufacturer

- Philips is the choice of major car manufacturers
- Award winning car lamp manufacturer
- Respecting high quality standards of the ECE homologation

Very high quality and ultra resistant car lamp

- Philips car lamps are highly resistant against humidity
- Philips car lamps are made of high-quality quartz glass

more vision for better visibility

- X-tremeVision projects 35 m light extra than a standard bulb
- Change both your headlamps at once for more safety
- Wide range of 12V lamps to meet all functions
- Greater driving comfort and safety

Highlights

Car manufacturer choice



For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting

Change by pairs



Highly recommended to change them by pairs for symmetric light performance

Designed for multiple usage




Which 12V lamp for which function ? Philips Automotive offering includes all car specific functions : high beam, Low beam, front fog, front indicator, side indicator, rear indicator, stop light, reversing light, rear fog light, license plate lights, rear position/parking light, interior lights.

ECE homologation

Philips automotive products and services are considered best-in-class in the Original Equipment Manufacturer market and the

aftermarket. Manufactured from high quality products and tested to the highest specifications, our products are designed to maximize the safety and comfort of our customers' driving experience. Our entire product range is thoroughly tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements. Put simply, this is quality you can trust.

Resistance against humidity

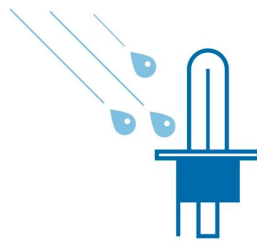

Only a burning bulb made of quartz glass (filament 2650°C, glass 800°C) can resist thermal shocks : if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

Rewarded Car lamps



Our lamps are often rewarded by automotive experts

High quality and visibility



X-treme Vision provides you with a better reactivity thanks to an earlier recognition of obstacles and traffic signs. Light is a


fundamental part of the driving experience and light is the first and only part of the safety circle that actually helps prevent accidents. Philips promotes active safety protection to prevent accidents by increasing overall visibility and road illumination.

High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2650°C and glass 800°C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

100% more vision on the road

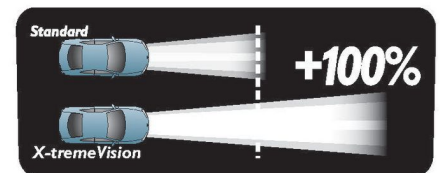

Based on a unique filament design and optimized geometry, X-tremeVision is engineered with state-of-the-art technology for ultimate performance and bright, white light where it matters the most.

Specifications

Packaging Data

Packaging type: S2/L

EAN1: 8727900355963

EAN3: 8727900355970

Electrical characteristics

Voltage: 12 V

Wattage: 55 W

Lifetime

Life time: B3/Tc = 200/400

Light characteristics

Lumens: 1500 ±10% lm

Outerpack information

Gross weight per piece: 0.586 kg

Height: 12 cm

Length: 28,6 cm

Width: 14,1 cm

Net weight per piece: 118 g

Product description

Type: H7

Application: High beam, Low beam, fog beam

Designation: H7-12972XV-CI

Homologation ECE

Marking ECE: E1 22Z

Range: X-tremeVision

Technology: Halogen

Base: PX26d

Packed product information

Gross weight per piece: 58.6 g

Height: 13,3 cm

Length: 5,3 cm

Net weight per piece: 11.8 g

Pack Quantity / MOQ: 2

Width: 11,0 cm

Marketing specifications

Expected benefits: More light

Product highlight: Up to 100% more light

Ordering information

Order entry: 12972XVS2

Ordering code: 35596328

