

**Philips Series 5000
Fully automatic
espresso machines**

- 6 Beverages
- LatteGo
- Stainless Steel
- AquaClean



EP5335/10

6 coffee varieties from fresh beans made easy

LatteGo, the fastest to clean milk system ever*

Easily make aromatic coffee varieties like Espresso, Coffee, Cappuccino and Latte Macchiato at the touch of a button. LatteGo tops milk varieties with silky smooth froth, is easy to set up and can be cleaned in as little as 15 seconds*.

A variety of coffees customized to your taste

- Adjust the volume, 5 aroma strength and 5 grinder settings
- Enjoy 6 beverages at your fingertips, including café au lait
- Silky smooth milk froth thanks to high speed LatteGo system
- Individually adjust and save your favorite coffee varieties

High quality coffee from fresh beans

- Coffee at the perfect temperature with our Thermoblock
- Keep your beans fresh for longer thanks to the aroma seal
- 20,000 cups of finest coffee with durable ceramic grinders

Effortless use and cleaning for everyday enjoyment

- Both parts of LatteGo are dishwasher safe
- Easy cleaning thanks to fully removable brew group
- Storage lid on LatteGo keeps your milk fresh in the fridge
- Up to 5000 cups*** without descaling thanks to AquaClean
- LatteGo is exceptionally easy to clean: 2 parts, no tubes

PHILIPS


Highlights

6 beverages




Enjoy a wide variety of drinks to suit any occasion. Whether you crave for an espresso, a coffee or a milk based recipe, your Super-automatic machine delivers a perfect in-cup result with no hassle and in no time!

LatteGo milk system

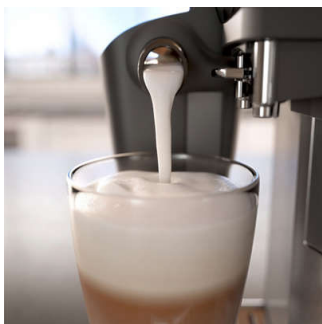


Top your coffee off with a silky-smooth layer of milk froth. The LatteGo mixes milk and air at high speed in the round frothing chamber, then adds a splash-free, creamy layer of milk froth to your cup at just the right temperature.

2 parts, no tubes milk system

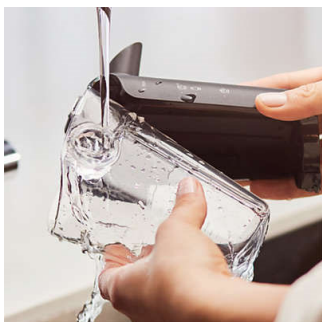

Our 2 parts milk system has no tubes or hidden parts and can be cleaned in as little as 15 seconds under tap* or in the dishwasher.

Dishwasher safe

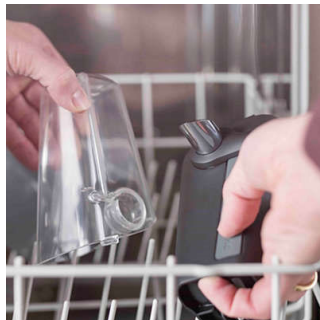

For your convenience, you can put LatteGo in the dishwasher. This will save time and ensure a hygienic cleaning.

100% ceramic grinders



Bring out the full flavor of your coffee with our hard-wearing ceramic grinder. Our sharp-edged grinders extract the best aroma and flavour from your beans. Made from 100% ceramic material which ensures they last for at least 20.000 cups.

AquaClean filter



By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups***, while enjoying clear and purified water.

Storage Lid



For easy and convenient storage in the fridge or outside you can use the dedicated storage lid for LatteGo

User Profile



To set the volume of any beverage, press and hold the button of the beverage until the display shows the MEMO icon. Press the OK button when the cup contains the desired amount. When you brew a recipe, the selected aroma strength is automatically saved.

Customize your coffees



This Fully-Automatic machine offers an abundance of indulgent options to customize your beverage to your taste. You can easily personalize and memorize length, strength and temperature for each drink. Feel free to explore, experiment and dream up any drink!

Specifications

Country of origin

- Made in: Romania

Customization

- Aroma Strength Settings: 5
- Grinder Settings: 5
- Coffee and Milk Length: Adjustable
- Pre Brew Aroma control: No
- User Profiles: 1
- Temperature settings: 3

Variety

- Beverages: Espresso, Hot water, Cappuccino, Coffee, Milk froth, Latte Macchiato, Café au Lait, Americano
- Coffee Powder Option
- Double Cup
- Milk Double Cup: No

Other features

- Auto-Rinse & Guided descaling
- Removable brew group
- Main Switch ON / OFF button
- Quick Heat Boiler

Technical specifications

- Cord length: >100 cm
- Voltage: 230 V

- Frequency: 50 Hz
- Capacity milk carafe: 0.26 L
- Capacity water tank: 1.8 L
- Capacity waste container: 15 servings
- Coffee bean capacity: 250 g
- Weight of product: 7.2 kg
- Waste container: Frontal access
- Water tank: Access from the top
- Max. cup height: 150 mm
- Color & Finishing: Stainless Steel
- Product dimensions: 221 x 340 x 430 mm

Consumer Trade Item

- Height: 49.9
- Width: 49.7
- Length: 29
- Net Weight: 9.108
- Gross Weight: 10.513
- GTIN: 8710103859246
- Country of origin: RO
- Harmonized system code: 85167100

General specifications

- Milk Solution: LatteGo
- Ease of cleaning & maintenance: AquaClean filter compatible
- Type of carafe: LatteGo
- User Interface: Basic Display



Issue date 2023-08-17

Version: 1.1.3

EAN: 87 10103 85924 6

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Based on 8 filters replacement as indicated by the machine. Actual number of cups depends on selected coffee varieties, rinsing and cleaning patterns.

* Based on consumer testing in Germany comparing leading one touch (Coffee + Milk) Full Automatic Espresso Machines (2017)