



Philips LED
Full HD Ambilight TV

80 cm (32") Ambilight TV

Philips Smart TV
Pixel Plus HD
Sharp Full HD picture



32PFS6908

Immerse in your favorites!

Full HD Ambilight TV

Whatever you're looking for, this slick Ambilight TV takes you there. The TV will search all the big streaming services for you to quickly find what you want-or make suggestions. The picture's sharp and Ambilight makes it feel even bigger.

LED Ambilight TV. Great value. Real immersion.

- Immerse in what you love. Ambilight TV.
- Sharp picture. Vibrant viewing.
- Great TV. No fuss. Philips Smart TV.
- Voice control. Works with Google Assistant* and Alexa.

Slim design. Responsible packaging.

- Slim, attractive design.
- Slim, attractive design.


Looks great, whatever you watch or play.

- Rich colors and smooth motion, for TV and more.
- Good for gaming. Low input lag on any console.

PHILIPS

Highlights

Ambilight TV

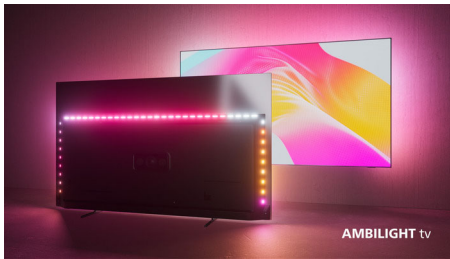

Ambilight TVs are the only TVs with LED lights behind the screen that react to what you watch, immersing you in a halo of colorful light. It changes everything: your TV seems bigger, and you'll be drawn deeper into your favorite shows, movies, and games.

Sharp picture

Love everything you watch on this Full HD LED Ambilight TV. The TV's processing engine optimizes picture quality to deliver sharp

images, rich colors, and smooth motion. You get the best possible viewing experience every time.

Philips Smart TV

You'll find it fast with our new smart TV. Enjoying a series? You can continue watching straight from the home screen. If you're looking for something new, you can browse categories like action or drama and see suggestions from the top streaming services—all in one place.

AI voice control

There's a choice of voice assistants! You can control the TV and ask Google Assistant to find shows and movies via Google smart speakers. Or ask Alexa, via Alexa-enabled devices.

Slim, attractive design.

Looking for a TV that fits with your room? The virtually bezel-free screen of this Ambilight TV always looks good, while the slim, matte-black feet make it seem as if the screen is floating. Plus, you can use Ambilight as ambient lighting with a wow effect!

Slim, attractive design.

Slim, attractive design.

Good for gaming.

Enjoy gaming? A low-input-lag setting activates automatically when you turn on your console, giving you smooth play even when the action gets intense. Whatever you play, Ambilight's gaming mode makes the thrills feel bigger.

Specifications

Ambilight

- Ambilight Version: 3-sided
- Ambilight Features: Built in Ambilight+hue, Wall colour adaptive, Lounge mode, Game Mode, Ambilight Music, AmbiSleep

Picture/Display

- Display: LED Full HD
- Diagonal screen size (metric): 80 cm
- Panel resolution: 1920 x 1080
- Native refresh rate: 60 Hz
- Picture enhancement: HDR10, HLG (Hybrid Log Gamma)

Display input resolution

- Resolution-Refresh rate: 576p-50Hz, 640x480-60Hz, 720p-50Hz,60Hz, 1366x768-60Hz, 1920x1080p-24Hz,25Hz,30Hz, ,50Hz,60Hz

Smart TV

- OS: Smart TV with new OS

Smart TV Features

- User Interaction: SimplyShare, Screen mirroring
- Interactive TV: HbbTV
- SmartTV apps*: Youtube, Philips store, Netflix, Amazon Prime Video
- Voice assistant*: Works with Alexa, Works with Google Assistant

Processing

- Processing Power: Dual Core

Tuner/Reception/Transmission

- Digital TV: DVB-T/T2/T2-HD/C/S/S2
- Video Playback: PAL, SECAM
- TV Program guide*: 8 day Electronic Program Guide
- Signal strength indication
- Teletext: 1000 page Hypertext
- HEVC support

Power

- Mains power: AC 220 - 240 V 50/60Hz
- Standby power consumption: <0.3W
- Power Saving Features: Auto switch-off timer, Picture mute (for radio), Eco mode, Light sensor
- Off mode power consumption: N/A

Sound

- Output power (RMS): 12W
- Sound Enhancement: A.I. Sound, Clear Dialogue, Dolby Atmos, Dolby Bass Enhancement, Dolby Volume Leveler, Night mode, A.I. EQ
- Codec: Dolby Digital MS12 V2.5
- Speaker configuration: 2x6W full range speaker

Connectivity

- Number of HDMI connections: 3
- Number of USBs: 2
- Wireless connection: Wi-Fi 802.11n, 2x2,Single band
- Other connections: Common Interface Plus (CI+), Ethernet-LAN RJ-45, Digital audio out (optical), Headphone out, Service connector, Satellite Connector
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, One touch play
- HDCP 2.3: Yes on all HDMI
- HDMI ARC: Yes on HDMI1
- EasyLink 2.0: HDMI-CEC for Philips TV/SB

Supported HDMI video features

- HDR: HDR10, HLG

Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, VP9, HEVC (H.265), AV1
- Subtitles Formats Support: .SML, .SRT, .SSA, .SUB, .TXT, .ASS
- Music Playback Formats: AAC, MP3, WAV, WMA (v2 up to v9.2), WMA-PRO (v9 and v10), FLAC
- Picture Playback Formats: JPEG, BMP, GIF, PNG, HEIF

Design

- Colors of TV: Anthracite grey bezel
- Stand design: Anthracite grey sticks

Dimensions

- Box dimensions (W x H x D): 843.0 x 511.0 x 145.0 mm
- Set dimensions (W x H x D): 728.0 x 433.0 x 87.0 mm
- Set dimensions with stand (W x H x D): 728.0 x 451.0 x 177.0 mm
- Product weight: 4.5 kg

- Product weight (+stand): 4.7 kg
- Weight incl. Packaging: 6.7 kg
- Wall mount compatible: 100 x 100 mm
- Stand dimensions (W x H x D): 753.7 x 22.0 x 177.0 mm
- Distance between 2 stands: 616.0 mm
- Stand height to TV bottom edge: 22.0 mm

Accessories


- Included accessories: Remote Control, 2 x AAA Batteries, Table top stand, Power cord, Quick start guide, Legal and safety brochure

EU Energy card

- EPREL registration numbers: tbc
- Energy class for SDR: F
- On mode power demand for SDR: 27 Kwh/1000h
- Energy class for HDR: G
- On mode power demand for HDR: 43 Kwh/1000h
- Off mode power consumption: n.a.
- Networked standby mode: 2.0 W
- Panel technology used: LED LCD

Connections

Side

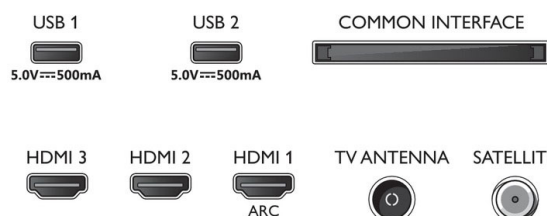

Rear



Issue date 2023-03-09

Version: 2.2.1

12 NC: 8670 001 88444
EAN: 87 18863 03734 8

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

- * EPG and actual visibility (up to 8 days) is country and operator dependent.
- * The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.
- * Philips TV Remote app and related functionalities vary per TV model, operator, and country, as well as smart device model and OS. For more details please visit: www.philips.com/TVRemoteapp.
- * Smart TV app offerings vary per TV model and country. For more details please visit: www.philips.com/smarttv.
- * This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.
- * Amazon Prime is available in selected languages and countries.
- * Netflix subscription required. Subject to terms at <https://www.netflix.com>
- * Rakuten TV is available in selected languages and countries.
- * Google Assistant is available in selected languages and countries. The list of supported countries and languages will be expanded over time. For the latest information, please contact our customer care.