

Philips 5000 series
LCD TV

81 cm (32")
HD Ready

32PFL5007



Ultimate viewing experience

with superb picture, sound & design

Philips selected for you the best performance and connectivity for the right price, today and tomorrow. This TV delivers HD pictures with an incredible sound experience, which let's you live the moment as if you were there...

Save a little everyday

- Eco mode for lower power consumption

See brilliant picture quality

- Crystal Clear improves picture depth
- HD LCD Display 1366x768p
- Dynamic contrast 30000:1 for incredible rich black details

Hear crisp and clear sound

- Hear every word with Clear Sound
- Feel 2x5w RMS with Incredible Surround & Clear Sound

Easy to connect and enjoy

- Seamless connectivity with 1 HDMI input
- Fantastic photo & music playback via USB

PHILIPS

LCD TV
81 cm (32") HD Ready

32PFL5007/V7

Highlights

Crystal Clear

Combining picture enhancements like Contrast plus and color improvement, Crystal Clear improves picture depth.

HD LCD Display 1366x768p


HD ready

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience..

Dynamic contrast ratio 30000:1

You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. Dynamic Contrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

Clear Sound

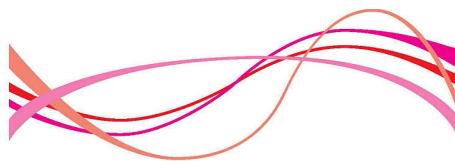

Clear Sound

Critical moments in a movie or your favourite show are too often missed. Clear Sound is an

innovative audio technology that significantly increases the intelligibility of vocalisations, whether spoken or sang. It ensures you hear every word, so you can enjoy what you're watching to the fullest

Rich & clear sound experience




"Feel the power of the music beat and the atmosphere of the movies. The powerful 10W RMS (2 x 5W RMS) amplifiers create a lifelike soundstage. The Incredible Surround Sound allows you to experience total surround with greater depth and width of sound. It gives a clear and spacious sound stage complementary to the rich viewing experience.."

1 HDMI input

HDMI

"HDMI is a single cable to carry both picture and audio signals from your devices to your TV, saving you from cable clutter. It carries uncompressed signals, ensuring that you have the highest quality from source to screen. Together with Philips Easylink, you need only one remote control to perform most operations on your TV, DVD, Blu-ray, set top box or home theatre system. Enjoy high quality picture and sound without clutter or fuss.."

USB (MP3 + JPEG)



USB

Pictures & Music

The USB connector allows access to jpeg photos and mp3 music of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access the content. You can now view and share your photos and music.

Eco mode



"Philips panel TVs intelligently adjusts backlight and are designed to use less energy - saving you money while reducing environment pollution. This is achieved by having low standby power consumption through innovatively designed standby circuitry and stringent selection of components made with high efficiency materials."



Specifications

Picture/Display

- Diagonal screen size (inch): 32 inch
- Panel resolution: 1366 x 768p
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfiter, Digital Noise Reduction, Crystal Clear
- Response time (typical): 6.5 ms

Supported Display Resolution

- Computer formats: 1024 x 768, 60, 70, 75Hz, 1280 x 1024, 60, 70, 75Hz, 640 x 480, 60, 72, 75Hz, 720 x 400, 70Hz, 800 x 600, 56, 60Hz, Via HDMI/DVI input,
- Video formats: 1080i, 50, 60Hz, 1080p, 50Hz, 1080p, 60Hz, 480i, 60Hz, 480p, 60Hz, 576i, 50Hz, 576p, 50Hz, 720p, 50, 60Hz

Convenience

- Ease of Installation: Autostore, Fine Tuning
- Ease of Use: Graphical User Interface, On Screen Display
- On-Screen Display languages: English

Sound

- Output power (RMS): 10W
- Sound System: Stereo
- Sound Enhancement: Auto Volume Leveler

Loudspeakers

- Built-in speakers: 2

Connectivity

- USB: USB
- HDMI 1: HDMI
- Other connections: Antenna F-type, Component Video (YPbPr) input, Composite video (CVBS) input

Power

- Power supply: 100-240VAC, 50/60Hz
- Power consumption: 150 W
- Standby power consumption: Less than 1 watt

Accessories

- Included accessories: 2 x AAA Batteries, Quick start guide, Remote Control, Software declaration, Tabletop swivel stand, User Manual, Warranty certificate

Dimensions

- Set Width: 784 mm
- Set Height: 498 mm
- Set Depth: 89 mm
- Product weight: 8.9 kg
- Set width (with stand): 784 mm
- Set height (with stand): 544 mm
- Set depth (with stand): 240 mm
- Product weight (+stand): 10.9 kg
- Stand width: 400 mm
- Stand depth: 240 mm



Issue date 2023-10-15

Version: 4.1.1

EAN: 87 12581 64475 8

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com