

Philips 4000 series
LCD TV

66 cm (26")
HD Ready

26PFL4306



Clearly the intelligent choice

with clear picture and sound

Whether movies, sports or games -experience great picture and sound with this HD TV. With Philips quality and its sophisticated design this TV is clearly the intelligent choice for all occasions...

Save a little everyday

- Eco mode for lower power consumption

See brilliant picture quality

- Digital Crystal Clear for detail depth and clarity
- "Dynamic contrast 100000:1 for incredible rich black details
- HD LCD Display 1366x768p

Hear crisp and clear sound

- Hear every word with Clear Sound
- Incredible Surround for enhanced audio enjoyment
- Feel 2x5w RMS with Incredible Surround & Clear Sound

Easy to connect and enjoy

- Seamless connectivity with 2 HDMI inputs
- Enjoy video, photo & music playback via USB

PHILIPS

Highlights

HD LCD Display 1366x768p



This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience..

Digital Crystal Clear



"Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes picture quality to optimal contrast, color and sharpness levels. It's like watching vivid cinema-like images. The result is extremely clear pictures from any source.."

Dynamic contrast 100000:1




"You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight-boosting technology results in vibrant images. Dynamic Contrast will increase the contrast with excellent black level and accurate rendition of dark shades and colours. It gives a bright, lifelike picture with high contrast and vibrant colours.."

Rich & clear sound experience



"Feel the power of the music beat and the atmosphere of the movies. The powerful 10W RMS (2 x 5W RMS) amplifiers create a lifelike soundstage. The Incredible Surround Sound allows you to experience total surround with greater depth and width of sound. It gives a clear and spacious sound stage complementary to the rich viewing experience.."

Clear Sound

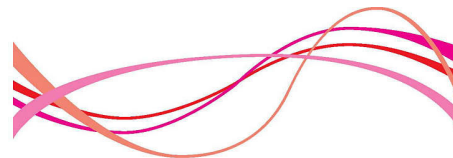

Clear Sound

Critical moments in a movie or your favourite show are too often missed. Clear Sound is an innovative audio technology that significantly increases the intelligibility of vocalisations, whether spoken or sang. It ensures you hear every word, so you can enjoy what you're watching to the fullest

Incredible Surround



"Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left

and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.."

2 HDMI inputs

HDMI™ x2

"HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 2 HDMI inputs on the back of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder.."

USB with video playback



The USB connector allows access to jpeg photos & music files of most USB-sticks (USB memory-class device).



Specifications

Picture/Display

- Diagonal screen size (inch): 26 inch
- Panel resolution: 1366 x 768p
- Picture enhancement: Digital Crystal Clear, 3/2 - 2/2 motion pull down, 3D Combfilter, Digital Noise Reduction
- Dynamic screen contrast: 100000:1
- Response time (typical): 4 ms

Supported Display Resolution

- Computer formats: 1024 x 768, 60, 70, 75Hz, 1280 x 1024, 60, 70, 75Hz, 640 x 480, 60, 72, 75Hz, 720 x 400, 70Hz, 800 x 600, 56, 60Hz, Via HDMI/DVI input,
- Video formats: 1080i, 50, 60Hz, 1080p, 50Hz, 1080p, 60Hz, 480i, 60Hz, 480p, 60Hz, 576i, 50Hz, 576p, 50Hz, 720p, 50, 60Hz

Convenience

- Ease of Installation: Autostore, Fine Tuning
- Ease of Use: Graphical User Interface, On Screen Display
- On-Screen Display languages: English

Sound

- Output power (RMS): 10 W
- Sound System: Stereo
- Sound Enhancement: Auto Volume Leveler,

Incredible Surround

Loudspeakers

- Built-in speakers: 2

Connectivity

- USB: USB
- HDMI 1: HDMI
- HDMI 2: HDMI
- Other connections: Antenna F-type, Component Video (YPbPr) input, Composite video (CVBS) input

Power

- Power supply: 100-240VAC, 50/60Hz
- Power consumption: 75 W
- Standby power consumption: less than 1 watt

Accessories

- Included accessories: 2 x AAA Batteries, Quick start guide, Remote Control, Software declaration, Tabletop swivel stand, User Manual, Warranty certificate

Dimensions

- Product weight (+stand): 6.2 kg



Issue date 2023-10-15

Version: 1.0.1

EAN: 87 12581 62125 4

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com