


PHILIPS



Professional TV

EasySuite

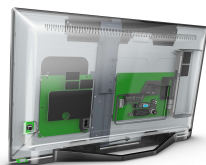

24HFL3014P

Take control

Powered by CMND

Show more with a budget-friendly standalone professional TV. The intuitive CMND solution makes it simple to deploy and manage connected displays. Benefit from simple, fast installation and an on-screen welcome page that's easy to program.

Cost-effective solution

- 3 years warranty, extendable to 5 years
- Multilingual customer support
- Low power consumption for long battery life
- Translucent backcover to uncover hidden materials

Simple set up. **ADVANCED** performance

- Instant initial USB cloning. Rapidly configure Pro TVs
- MyChoice compatible. Built-in pay-to-view solution
- Mixed channel map to combine analogue and digital channels
- CMND and Control: effortless maintenance of your TVs
- Be seen. Brand the TV's UI with your logo

Highlights

CMND&Control

CMND and Control allows for remote configuration and installation of your TVs from a central location, without the need to visit any rooms. Update and manage all your displays, with minimal effort, all without having to disturb your guests.

Built-in pay-to-view solution

Offer pay-to-view content in any situation-from a complete pay-to-access-all-channels model to selected premium content. MyChoice is an integrated solution that allows viewers to access pay-per-view channels via a code or a card.

UI branding

Your Philips Professional TV offers a clear, easy-to-navigate user interface (UI), which you can customize with your own branding. Easily add your logo or custom background to the menu to increase the visibility of your brand.

Translucent backcover

Translucent backcover will uncover hidden materials within the TV set. Ideally suited for installations within prisons and detention centers.

Instant initial USB cloning.

Provides the ability to easily copy all programming and channel programming settings from one TV into other TV sets in less than a minute. The feature ensures uniformity between TV sets and significantly reduces installation time and costs.

Specifications

Picture/Display

Diagonal screen size (inch): 24 inch

Diagonal screen size (metric): 60 cm

Display: LED HD TV, E-LED

Panel resolution: 1366 x 768p

Brightness: 250 cd/m²

Viewing angle: 178° (H) / 178° (V)

Tuner/Reception/Transmission

Digital TV: DVB-T/T2/C, HEVC FHD (up to 1080p60)

Video Playback: NTSC, PAL, SECAM

Analog TV: PAL, SECAM

Features

Ease of use: Picture Style, Sound Style, Picture Format, Independent volume control

Digital services: 8d EPG, Now&Next, MHEG, Teletext, Subtitles

Local control: On/Off switch (side)

Hospitality Features

Hotel mode: Menu lock, Installation Menu Lock, Volume limitation, Joystick Control Lock

Prison mode: high security mode, TXT/MHEG/USB/EPG/Subtitle Lock

Timer: Sleep Timer, Wake Up Alarm, Wake Up On Channel, Wake up Sounds

Switch On control: Channel, Feature, Picture Style, Picture Format, Sound Style, Volume, Menu language

Anti-Theft: Battery Anti-theft Protection, Kensington Lock

Power control: Green/fast startup

Your brand: Welcome Logo, Customizable Home Screen

Clock: Glow-in-the-Dark RC button, On-screen Clock

Cloning and Firmware update: Instant Initial Cloning, Via USB/RF

CMND&Control: Remote Management over RF, TV Group management, Off-Line Settings Editor, Off-Line Channel Editor

Control: Block Automatic Channel Update

Revenue generation: MyChoice

Languages: Guest language control

Remote Control: Cable Strap Ready, Low Battery Detection, RC Battery Door Lock, Glow-in-the-Dark Clock button

Channels: Combined List, Off-Line Channel Editor

Healthcare features

Control: Multi-Remote Control, Healthcare RC compatible

Convenience: Headphone out, Independent main speaker mute, Headphone Detection

Safety: Double isolation class II, Flame retardant

Multimedia

Video playback supported: Formats:

H.264/MPEG4 AVC, MPEG1, MPEG2, MPEG4, WMV9/VC1, MP4, MPG, TS, WMV, HEVC, Containers: AVI, MKV

Music formats supported: MP3, AAC, WAV, WMA (v2 up to v9.2)

Subtitle formats supported: SRT, ASS, SMI, SSA, SUB, TXT

Picture formats supported: BMP, JPG, PNG, GIF

Supp. Video Resolution on USB: up to

1920x1080p@60Hz

Multimedia connections: USB

Audio

Sound output Power: 6 (2x3) W

Speakers: 2.0, Down Firing

Sound Features: AVL, Dynamic Bass, Incredible surround, Dolby MS10

Power

Mains power: AC 220-240V; 50-60Hz

Ambient temperature: 0 °C to 40 °C

Standby power consumption: <0.3W

Energy Label Class: E

Eu Energy Label power: 17 W

Power Saving Features: Eco mode, Auto switch-off timer

EPREL registration number: 1069369

Accessories

Included: Edge Stand, 2x AAA batteries, Power Cord, Warranty Leaflet, Legal and Safety brochure, Remote Control 22AV1903A/12

Optional: Easy RC 22AV1601B/12, Healthcare RC 22AV1604B/12, Setup RC 22AV9574A/12

Connectivity Side

Common Interface Slot: CI+ 1.3.2

Headphone out: Mini-Jack

USB1: USB 2.0

Connectivity Rear

Scart: CVBS, RGB

DVI audio in: Mini-Jack

Antenna: IEC-75

HDMI1: ARC, HDMI 1.4

Digital Audio out: Optical

VGA input: 15 pin D-sub

HDMI2: HDMI 1.4

Connectivity Enhancements

EasyLink (HDMI CEC): One touch play, System Standby, RC pass through, system audio control

HDMI: ARC (HDMI1)

Scart: Power on scart

Design

Colour: Black

Features: Translucent backcover

Dimensions

Set Width: 560 mm

Set Height: 336 mm

Set Depth: 35/45 mm

Product weight: 3.1 kg

Set width (with stand): 560 mm

Set height (with stand): 336 mm

Set depth (with stand): 124 mm

Product weight (+stand): 3.2 kg

Wall mount compatible: M4, 75 x 75 mm

