

Philips 3000 series
LED TV

80cm (32")
HD Ready

32PFL3330



Bring entertainment to life

with super picture quality, sound & design

A perfect combination of clear picture & sound that makes this TV a best choice for your home entertainment.

"See brilliant picture quality"

- 120Hz Perfect Motion Rate (PMR) for superb motion sharpness
- HD LCD Display 1366x768p
- Pixel Plus HD for better details, depth and clarity

Hear crisp and clear sound

- Feel the power of 20 W (2x 10W) RMS

Easy to connect and enjoy

- Seamless connectivity with 2 HDMI inputs
- Fantastic video, photo and music playback via USB
- MHL technology for enjoying mobile content on big screen

PHILIPS

LED TV
80cm (32") HD Ready

Highlights

HD LCD Display 1366x768p

HD ready

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience..

Pixel Plus HD

Pixel Plus HD

Pixel Plus HD offers the unique combination of ultimate sharpness, natural detail, vivid colours and smooth natural motion on all qualities of HD, standard TV signals and multimedia content, for high definition displays. Artefacts and noise in all sources from multimedia to standard TV and also in highly compressed HD are detected and reduced ensuring that the picture is clear and razor sharp

120Hz Perfect Motion Rate



Combining the refresh rate of the panel and unique image processing, Perfect Motion Rate (PMR) creates extreme motion sharpness for clear and vibrant images even with the fastest on-screen motion.

Rich & clear sound experience



"Feel the power of the music beat and the atmosphere of the movies. The powerful 20 W RMS (2 x 10 W RMS) amplifiers create a lifelike soundstage. It gives a clear and spacious sound stage complementary to the rich viewing experience.."

2 HDMI inputs

HDMI™ x2

"HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP

32PFL3330/V7


copy protection. With 2 HDMI inputs on the back of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder."

MHL



Mobile High Definition Link (MHL) is a mobile audio/video interface for directly connecting mobile phones and other portable devices to high-definition displays/ TVs. An optional MHL cable allows you to simply connect your MHL capable mobile device to this large Philips MHL LED TV, and watch your HD videos come to life with full digital sound. Now not only you can enjoy your mobile games, photos, movies, or other apps on its big screen, you can simultaneously charge your mobile device so you never run out of power half way.

USB with Video Playback

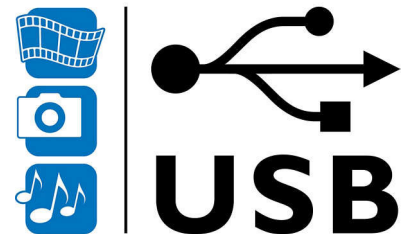

The USB connector allows access to jpeg photos, mp3 music and video files through USB drives. Plug the USB into the slot at the side of the TV and access multimedia content using the easy on screen content browser. Now view your videos, photos and music effortlessly in your TV!



Specifications

Picture/Display

- Diagonal screen size (inch): 32 inch
- Panel resolution: 1366 x 768p
- Picture enhancement: Pixel Plus HD, 3/2 - 2/2 motion pull down, 3D Combfilter, Digital Noise Reduction

Supported Display Resolution

- Computer formats: Via HDMI/DVI input, 1366 x 768, 60Hz, 1280 x 1024, 60Hz, 1280 x 720, 60Hz, 1024 x 768, 60Hz, 800 x 600, 60Hz, 720 x 480, 60Hz, 640 x 480, 60Hz
- Video formats: 1080i, 50, 60Hz, 720p, 50, 60Hz, 480p, 60Hz, 480i, 60Hz, 576p, 50Hz, 576i, 50Hz

Tuner/Reception/Transmission

- Tuner bands: UHF, VHF
- TV system: PAL B/G
- Video Playback: NTSC, PAL, SECAM

Multimedia Applications

- Playback Formats: AVI, JPEG Still pictures, MPEG1, MPEG2, MPEG4, WMA v2 up to v9.2, H.264/MPEG-4 AVC, PNG still pictures
- Music Playback Formats: MP3, WMA (v2 up to v9.2)
- Picture Playback Formats: JPEG

Convenience

- Child Protection: Child Lock
- Ease of Installation: Autostore, Fine Tuning
- Ease of Use: Graphical User Interface, On Screen Display
- Screen Format Adjustments: 16:9
- On-Screen Display languages: English

USB - File Extension

- Video: *.avi, *.mkv, *.mov, *.mp4, *.mpeg, *.mpg, *.wmv

USB - Container

- Video: ASF, AVI, MKV, MP4, PS

USB - Video Decoder

- Compression Format: H.264, MPEG 1, MPEG 2, MPEG 4

Sound

- Output power (RMS): 20W
- Sound System: Stereo
- Sound Enhancement: Auto Volume Leveler

Loudspeakers

- Built-in speakers: 2

Connectivity

- Number of AV connections: 2
- Other connections: Component Video (YPbPr) input, PC-In VGA, Antenna IEC75
- AV output: Composite (CVBS) x1
- Number of HDMI connections_: 2
- Number of USB connections: 2

Power

- Power supply: 100-240VAC, 50/60Hz
- Mains power: 110-240 V 50/60 Hz
- Power consumption: 50 W
- Standby power consumption: Less than 1 watt

Accessories

- Included accessories: 2 x AAA Batteries, Remote Control, User Manual, Warranty certificate, Power cord, Safety/legal instructions, Wall mounting bracket
- User Manual: English

Dimensions

- Set Width: 740 mm
- Set Height: 453 mm
- Set Depth: 88 mm
- Product weight: 5.1 kg
- Set width (with stand): 740 mm
- Set height (with stand): 512 mm
- Set depth (with stand): 208 mm
- Product weight (+stand): 5.5 kg

