

Philips 3000 series  
LED TV with Digital  
Crystal Clear

56 cm (22")  
HD Ready  
DVB-T/C

22PFL3206H



## Ideal for any room

with a modern design

Philips let's you enjoy great television performance at the right price, today and tomorrow. This 3000 series 22PFL3206 LED TV offers great pictures with easy to use digital TV connectors and a pure TV design.

### Modern design to fit your home décor

- Ultra slim and thin TV for perfect fit in any room

### A clear, vivid LCD picture everytime

- HD Ready with Digital Crystal Clear for depth and clarity
- Brilliant LED images with low power consumption
- Extreme colors for brilliant natural images

### Authentic and clear sound experience

- Hear every word with Clear Sound

### Complete digital connectivity made simple

- Seamless connectivity with 1 HDMI input and Easylink
- Integrated MPEG-4 tuner for HD reception without set top box
- PC-input allows you to use your TV as a PC monitor
- Enjoy photo and music playback via USB

# PHILIPS

# Highlights

## Clear Sound



Clear Sound is an innovative audio technology that significantly increases the comprehensibility of the voice, whether spoken or sung. It ensures you hear every word, so you can enjoy what you're watching to the fullest.

## 1 HDMI inputs with Easylink



HDMI is a single cable to carry both picture and audio signals from your devices to your TV, helping avoid cable clutter. It carries uncompressed signals, ensuring the highest quality from source to screen. Together with Philips Easylink, you need only one remote control to perform most operations on your TV, DVD, BluRay, set top box or home theatre system.

## PC input (HDMI and VGA)

With PC input you can use your TV as a PC monitor either using a HDMI-DVI cable/ converter (for digital signals) or VGA cable (for analog signals).

## Integrated DVB tuner MPEG-4

The integrated digital tuner lets you receive digital cable and terrestrial TV without an additional set top box. Enjoy quality TV clutter free.

## Digital Crystal Clear

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes picture quality to optimal contrast, color and sharpness levels. The result is extremely clear pictures from any source.

# Specifications

## Picture/Display

- Display: LED HD Ready
- Diagonal screen size: 22 inch / 56 cm
- Panel resolution: 1366 x 768p
- Aspect ratio: 16:9
- Brightness: 300 cd/m<sup>2</sup>
- Peak Luminance ratio: 65 %
- Dynamic screen contrast: 100.000:1
- Response time (typical): 5 ms
- Picture enhancement: Digital Crystal Clear

## Sound

- Output power (RMS): 6W (2 x 3W)
- Sound Enhancement: Auto Volume Leveller, Clear Sound, Incredible Surround, Treble and Bass Control

## Connectivity

- Number of HDMI connections: 1
- EasyLink (HDMI-CEC): System standby, One touch play
- Number of component in (YPbPr): 1
- Number of scarts (RGB/CVBS): 1
- Other connections: Antenna IEC75, Common Interface Plus (CI+), Digital audio out (coaxial), PC-in VGA + Audio L/R in, Headphone out

## Multimedia Applications

- Multimedia connections: USB
- Music Playback Formats: MP3
- Picture Playback Formats: JPEG

## Supported Display Resolution

- Computer inputs: up to 1920x1080 @ 60Hz
- Video inputs: 24, 25, 30, 50, 60 Hz, up to 1920x1080p

## Convenience

- Electronic Program Guide: 8 day Electronic Program Guide

- Ease of Installation: Channel installation wizard, Settings assistant wizard
- Ease of Use: One-stop Home button
- Screen Format Adjustments: 4:3, Autofill, Autozoom, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Teletext: 1000 page Smart Text
- Firmware upgradeable: Firmware upgradeable via USB

## Tuner/Reception/Transmission

- Digital TV: DVB-C MPEG2\*, DVB-C MPEG4\*, DVB-T MPEG2\*, DVB-T MPEG4\*
- Video Playback: NTSC, PAL, SECAM

## Power


- Mains power: AC 220-240V; 50-60Hz
- Ambient temperature: 5 °C to 40 °C
- Energy Label Class: B
- Eu Energy Label power: 33 W
- Annual energy consumption: 47 kWh
- Standby power consumption: <0.3 W
- Power Saving Features: Eco mode, Eco settings menu
- Presence of lead: Yes\*

## Dimensions

- Box dimensions (W x H x D): 576 x 426 x 133 mm
- Set dimensions (W x H x D): 520 x 340 x 43 mm
- Set dimensions with stand (W x H x D): 520 x 380 x 145 mm
- Product weight: 3.21 kg
- Product weight (+stand): 3.4 kg

## Accessories

- Included accessories: Power cord, Remote Control, 2 x AAA Batteries, Table top stand, User Manual, Quick start guide, Warranty Leaflet

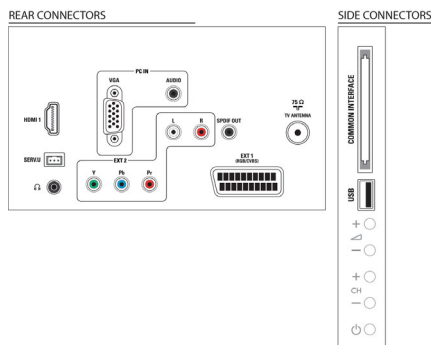

Issue date 2019-06-18

Version: 3.5.9

12 NC: 8670 000 83677  
EAN: 87 12581 62461 3

© 2019 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.

\* 8 days EPG, service not available in all countries

\* Energy consumption in kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

\* Typical on-mode power consumption measured according to IEC62087 Ed 2.

\* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.