

Philips 4000 series
LCD TV

81 cm (32")
HD Ready

32PFL4305



Ultimate viewing experience

with rich picture and superb sound

Experience brilliant performance with a HD 1366x 768p display. Combined with a Picture Enhancer and fantastic invisible sound, this Flat TV will never let you down.

Save a little everyday

- Special ECO mode tunes your TV for energy savings

Hear Every Detail

- Feel the atmosphere with 2x8w RMS with Smart Volume

A clear, vivid picture everytime

- HD TV with Picture Enhancer for depth and clarity

Complete digital connectivity made simple.

- Seamless connectivity with 2 HDMI inputs and SPDIF output
- PC input allows you to use your TV as a PC monitor
- Fantastic photo & music playback via USB

PHILIPS

LCD TV
81 cm (32") HD Ready

Specifications

Picture/Display

- Diagonal screen size (inch): 32 inch
- Panel resolution: 1366 x 768p
- Brightness: 420 cd/m²
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfiter, Digital Noise Reduction
- Dynamic screen contrast: 70000:1
- Response time (typical): 6.5 ms
- Viewing angle: 178° (H) / 178° (V)

Supported Display Resolution

- Computer formats: 640 x 480, 60, 72, 75Hz, 720 x 400, 70Hz, 800 x 600, 56, 60Hz, 1024 x 768, 60, 70, 75Hz, 1280 x 1024, 60, 70, 75Hz, Via HDMI/DVI input,
- Video formats: 480i, 60Hz, 480p, 60Hz, 576i, 50Hz,

576p, 50Hz, 720p, 50, 60Hz, 1080i, 50, 60Hz, 1080p, 50Hz, 1080p, 60Hz

Convenience

- Ease of Installation: Autostore, Fine Tuning
- Ease of Use: Graphical User Interface, On Screen Display
- On-Screen Display languages: English

Sound

- Output power (RMS): 16W
- Sound System: Stereo

Loudspeakers

- Built-in speakers: 2



32PFL4305/V7

Highlights

HD LCD Display 1366 * 768



HDTV with Picture Enhancer delivers exceptional picture quality and real movie-viewing experience that makes television more dynamic, truer than anything you've seen before. It features picture quality more than twice that of traditional analog broadcasts.

ECO Mode

The Active Control intelligently adjusts the backlight, resulting in beneficial environmental & energy conservation. TV with Active Control has greater energy savings than normal TVs.

2 HDMI Inputs




HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 2 HDMI inputs on the back of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder.

PC Input (HDMI + VGA)

With PC input you can use your TV as a PC monitor either using a HDMI-DVI cable (for digital signals) or VGA cable (for analog signals).

USB (MP3 + JPEG)

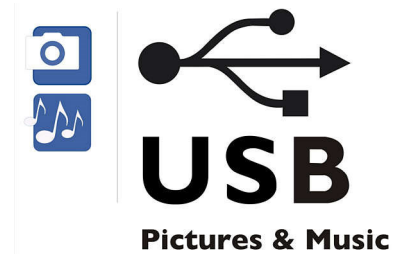

The USB connector allows access to jpeg photos and mp3 music of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access the content. You can now view and share your photos and music.

Smart Volume

Philips preset modes for Smart Sound provide you with direct access via a single key on the remote control. You can select optimized sound settings for the various sound modes.



Issue date 2023-10-15

Version: 1.3.1

EAN: 87 12581 57445 1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com