

PHILIPS




Professional TV

24"

EasySuite

LED HD TV

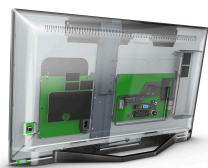

24HFL3014P

Take control

Powered by CMND

Show more with a budget-friendly standalone professional TV. The intuitive CMND solution makes it simple to deploy and manage connected displays. Benefit from simple, fast installation and an on-screen welcome page that's easy to program.

Cost-effective solution

- 3 year warranty, extendable to 5 years
- Multilingual customer support
- Low power consumption for long battery life
- Translucent back cover to uncover hidden materials

Simple setup. **ADVANCED** performance

- Instant initial USB cloning. Rapidly configure Pro TVs
- MyChoice compatible. Built-in pay-to-view solution
- Mixed channel map to combine analogue and digital channels
- CMND&Control: effortless maintenance of your TVs
- Be seen. Brand the TV's UI with your logo

Highlights

CMND&Control

CMND&Control allows for remote configuration and installation of your TVs from a central location, without the need to visit any rooms.

Update and manage all your displays with minimal effort, all without having to disturb your guests.

Built-in pay-to-view solution

Offer pay-to-view content in any situation - from a complete pay-to-access-all-channels model to selected premium content. MyChoice is an integrated solution that allows viewers to access pay-per-view channels via a code or a card.

UI branding

Your Philips Professional TV offers a clear, easy-to-navigate user interface (UI) that you can customise with your own branding. Easily add your logo or custom background to the menu to increase the visibility of your brand.

Translucent back cover

The translucent back cover will uncover hidden materials within the TV set. Ideally suited for installations within prisons and detention centres.

Instant initial USB cloning.

Provides the ability to easily copy all programming and channel programming settings from one TV into other TV sets in less than a minute. The feature ensures uniformity between TV sets and significantly reduces installation time and costs.

Specifications

Picture/Display

Diagonal screen size (inch): 24 inch
Diagonal screen size (metric): 60 cm
Display: LED HD TV, E-LED
Panel resolution: 1366 x 768p
Brightness: 250 cd/m²
Viewing angle: 178° (H)/178° (V)

Tuner/Reception/Transmission

Digital TV: DVB-T/T2/C, HEVC FHD (up to 1080p60)
Video Playback: NTSC, PAL, SECAM
Analogue TV: PAL, SECAM

Features

Ease of use: Picture Style, Sound Style, Picture Format, Independent volume control
Digital services: 8d EPG, Now and Next, MHEG, Teletext, Subtitles
Local control: On/Off switch (side)

Hospitality Features

Hotel mode: Menu lock, Installation Menu Lock, Volume limitation, Joystick Control Lock
Prison mode: high-security mode, TXT/MHEG/USB/EPG/Subtitle Lock
Timer: Sleep Timer, Wake Up Alarm, Wake Up On Channel, Wake Up Sounds
Switch On control: Channel, Feature, Picture Style, Picture Format, Sound Style, Volume, Menu language
Anti-Theft: Battery Anti-theft Protection, Kensington Lock
Power control: Green/fast start-up
Your brand: Welcome Logo, Customisable Home Screen
Clock: Glow-in-the-Dark RC button, On-screen Clock
Cloning and Firmware update: Instant Initial Cloning, Via USB/RF

CMND&Control: Remote Management over RF, TV Group management, Off-Line Settings Editor, Off-Line Channel Editor
Control: Block Automatic Channel Update
Revenue generation: MyChoice
Languages: Guest language control
Remote Control: Cable Strap Ready, Low-Battery Detection, RC Battery Door Lock, Glow-in-the-Dark Clock button
Channels: Combined List, Off-Line Channel Editor

Healthcare features

Control: Multi-Remote Control, Healthcare RC compatible
Convenience: Headphone out, Independent main speaker mute, Headphone Detection
Safety: Double isolation class II, Flame retardant

Multimedia

Video playback supported: Formats: H.264/MPEG4 AVC, MPEG1, MPEG2, MPEG4, WMV9/VC1, MP4, MPG, TS, WMV, HEVC, Containers: AVI, MKV
Music formats supported: MP3, AAC, WAV, WMA (v2 up to v9.2)
Subtitle formats supported: SRT, ASS, SMI, SSA, SUB, TXT
Picture formats supported: BMP, JPG, PNG, GIF
Supp. Video Resolution on USB: up to 1920x1080p@60Hz
Multimedia connections: USB

Audio

Sound output Power: 6 (2 x 3) W
Speakers: 2.0, Down Firing
Sound Features: AVL, Dynamic Bass, Incredible surround, Dolby MS10

Power

Mains power: AC 220-240 V; 50-60 Hz
Ambient temperature: 0 °C to 40 °C
Standby power consumption: <0.3W
Energy Label Class: E
EU Energy Label power: 17 W
Power Saving Features: Eco mode, Auto switch-off timer
EPREL registration number: 1069369

Accessories

Included: Edge Stand, 2 x AAA batteries, Power Cord, Warranty Leaflet, Legal and Safety brochure, Remote Control 22AV1903A/12
Optional: Easy RC 22AV1601B/12, Healthcare RC 22AV1604B/12, Setup RC 22AV9574A/12

Side Connectivity

Common Interface Slot: CI+ 1.3.2
Headphone out: Mini-Jack
USB1: USB 2.0

Rear Connectivity

Scart: CVBS, RGB
DVI audio in: Mini-Jack
Antenna: IEC-75
HDMI1: ARC, HDMI 1.4
Digital Audio out: Optical
VGA input: 15 pin D-sub
HDMI 2: HDMI 1.4

Connectivity Enhancements

EasyLink (HDMI CEC): One touch play, System Standby, RC pass through, system audio control
HDMI: ARC (HDMI1)
Scart: Power on scart

Design

Colour: Black
Features: Translucent back cover

Dimensions

Set Width: 560 mm
Set Height: 336 mm
Set Depth: 35/45 mm
Product weight: 3.1 kg
Set width (with stand): 560 mm
Set height (with stand): 336 mm
Set depth (with stand): 124 mm
Product weight (+stand): 3.2 kg
Wall-mount compatible: M4, 75 x 75 mm

