

Philips 8000 series
Ultra Slim Smart LED TV
with Ambilight 3-sided XL
and Perfect Pixel HD

140 cm (55")

3D Max
DVB-T/T2/C/S/S2

55PFL8008S



Elevating entertainment

The high end Ultra Slim LED TV with Ambilight

Unrivalled performance is in the details: Philips high performance 8000 series anticipates your needs and desires by fully integrating the ultimate in technology into one sleek machine. Your TV.

The ultimate performance engine

- Perfect Pixel HD—our Award winning picture quality engine
- 1400Hz Perfect Motion Rate (PMR) for superb motion sharpness
- 3D Max—a powerful 3D experience in Full HD resolution
- Ambilight 3-sided XL intensifies your viewing experience

A world of online content at your fingertips

- Integrated TV camera for easy Skype™ video calls on your TV
- Integrated Wi-Fi to connect easily to the world online
- Smart TV—a world of online entertainment

Control how you share and record on the big screen

- MyRemote app—control your TV with your phone or tablet
- Wi-Fi Miracast™—mirror from your devices onto your TV
- Keyboard remote control with pointer—more control than ever

Industrial design meets provocative lines

- Stainless-steel ultra narrow bezel radiates craftsmanship



PHILIPS

Highlights

Perfect Pixel HD

Designed to deliver our most advanced flicker-free pictures with unrivaled sharpness and clarity. Each pixel that composes the picture is enhanced to better match the surrounding pixels. The result is a unique combination of sharpness, natural detail, vivid colors, superior contrast and smooth natural motion.

1400Hz Perfect Motion Rate

For picture movement that looks precise, smooth and natural, Philips created PMR—our standard for measuring moving image sharpness. Perfect Motion Rate is the combined result of our unique video processing, number of frames per second and refresh rate of each frame, perfection in dimming capabilities, and backlighting technology. A higher PMR number contributes to higher contrast and better motion clarity—which means a superior image for you.

3D Max

Using active 3D technology and high-speed displays to create incredible depth, contrast and realism for an unrivaled 3D viewing experience. 3D depth adjustment makes choosing the level of 3D effect that best suits you easy. Convert 2D content into vivid and flawless 3D. The ultimate 3D experience.

Ambilight 3-sided XL

This patented Philips technology makes your screen seem much wider—and your viewing experience more immersive—by projecting an extra wide glow from three-sides of the TV screen onto the surrounding wall. The color automatically adjusts to match the TV picture. Thanks to a wall-adaptive function, the color of the light is perfectly aligned with the TV picture, regardless of the wall color. You can customize the experience using various settings to suit your viewing preference.

Integrated Skype™ and camera

Add a new dimension to your calls and share experiences with the people that matter to you, wherever they are. With Skype™ on your TV, make voice and video calls from your living room with an integrated camera in your TV. Enjoy excellent video and sound quality from the comfort of your couch.

Integrated Wi-Fi

Integrated Wi-Fi on your Philips Smart TV makes connecting to your home network quick and easy, allowing you to access a world of content or share wirelessly at home.

Smart TV online apps

Explore the boundaries that lie beyond traditional TV. Rent and stream movies, videos, games and more, directly onto your TV from online video stores. Watch catch-up TV from your favorite channels and enjoy a rich selection of online apps with Smart TV. Connect to family and friends with Skype™ or social networking. Or... just browse the Internet!

Pointer with keyboard remote

Our totally intuitive remote control has all the usual perks like cursor keys, volume control and short cut buttons. And, for something extra, simply click and hold the OK key for easy navigation. The pointer operates as a mouse allowing you to point, click, and scroll easily onscreen. Flip this remote over and there's a full keyboard for easy text entry on the other side! Best of all, our intelligent remote has gyroscopic sensors, so it knows up from down—which means you can text without worrying about changing channels.

Wi-Fi Miracast™*

Watch what you want, where you want, when you want. Mirror the content on your devices and view it on the big screen. Share photos from your smartphone, laptop screen and more. Connections are easy to set up and the technology works across multiple devices.

MyRemote*

Control your TV and record on the go without a remote control using one easy app. Transform your tablet or smart phone into a universal remote with all the options of your original remote plus extra features like text entry. The SimplyShare function beams content onto your TV. Push digital broadcast TV onto your devices using the Wi-Fi smart screen. Stay up to date by recording your favorite programs on-the-go using MyRemote recording. Simply flip through the content on the TV Program Guide to choose which shows

to record and view later. A Smart TV deserves a truly smart app.

Stainless-steel ultra narrow

Good design tells a story. Take for example the precision crafted front panel made from one piece of polished high gloss, black sheen stainless steel. Or the ultra-thin bezel designed to create a sleeker profile. Together these speak volumes about the high performance and accuracy we deliver—inside and out.



Smart TV

Smart TV—a world of online apps, videos to rent and catch-up

Explore the boundaries that lie beyond traditional TV. Rent and stream movies, videos, games and more, directly onto your TV from online video stores. Watch catch-up TV from your favorite channels and enjoy a rich selection of online apps with Smart TV. Connect to family and friends with Skype™ or social networking. Or... just browse the Internet!



Dual Core

Dual Core processor for super-fast smart functionality.

Philips TV's feature a dual-core processor with Smart TV functionality that's fast and intuitive to use. It increases overall speed for programs allowing parallel computing across many applications, so you can make video calls, watch TV and chat super fast—all at the same time on your TV!



Specifications

Ambilight

- Ambilight Version: 3 sided XL
- Ambilight Features: Wall colour adaptive, Lounge light mode

Picture/Display

- Display: LED Full HD
- Diagonal screen size: 55 inch / 140 cm
- Panel resolution: 1920x1080p
- 3D: 3D Max*, 2 Player Full Screen Gaming*, 3D Depth adjustment, 2D to 3D conversion
- Aspect ratio: 16:9
- Brightness: 450 cd/m²
- Dynamic screen contrast: 500,000 : 1
- Picture enhancement: Perfect Pixel HD Engine, Micro Dimming, 1400 Hz Perfect Motion Rate, Local contrast, Perfect 3D Natural Motion, Super Resolution

Smart TV

- Interactive TV: HbbTV*
- SmartTV apps*: Catch-up TV, Netflix*, Online apps, Online Video stores, Open Internet browser, YouTube
- Social TV: Facebook, Skype, Twitter
- TV programme guide*: 8 day Electronic Program Guide

Smart Interaction

- User interaction: SimplyShare, MultiRoom Client and Server*, Smart text remote control, Pointer remote control*, Wi-fi Miracast Certified*
- Program: Pause TV, USB Recording*
- Ease of Installation: Auto detect Philips devices, Device connection wizard, Network installation wizard, Settings assistant wizard
- Ease of Use: One-stop Home button, Onscreen Usermanual
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB, Online firmware upgrade
- Screen Format Adjustments: Autofill, Autozoom, Movie expand 16:9, Super Zoom, Unscaled, Widescreen
- Signal strength indication
- Teletext: 1200 page Hypertext
- My Remote App*: Control, MyRemote Recording, Simply Share, TV Guide, Wi-fi Smart Screen

CPU

- Processor type: Dual-Core

Sound

- Output power (RMS): 30W (2x 15W)
- Sound Features: 3D wOOx, HD Stereo
- Sound Enhancement: Auto Volume Leveller, Clear Sound, Incredible Surround, Pure Bass

Connectivity

- Number of HDMI connections: 4
- Number of component in (YPbPr): 1
- Number of scarts (RGB/CVBS): 1
- Number of USBs: 3
- Wireless connections: Integrated Wi-Fi 11n, Wi-Fi Miracast Certified
- Other connections: Antenna IEC75, Common Interface Plus (CI+), Ethernet-LAN RJ-45, Digital audio out (optical), Audio L/R in, Headphone out, Service connector
- HDMI features: 3D, Audio Return Channel
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, Plug & play add to Homescreen, Auto subtitle shift (Philips), Pixel Plus link (Philips), One touch play

Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1
- Music Playback Formats: AAC, MP3, WMA (v2 up to v9.2)
- Picture Playback Formats: JPEG

Supported Display Resolution

- Computer inputs: up to 1920x1080 @ 60Hz
- Video inputs: 24, 25, 30, 50, 60 Hz, up to 1920x1080p

Tuner/Reception/Transmission

- Digital TV: Astra HD+ support, Freeview HD*, DVB-T/T2/C/S/S2
- MPEG Support: MPEG2, MPEG4
- Video Playback: NTSC, PAL, SECAM

Power

- Mains power: AC 220 - 240 V 50/60Hz
- Ambient temperature: 5 °C to 35 °C
- Energy Label Class: A+

- Eu Energy Label power: 90 W
- Annual energy consumption: 125 kW h
- Standby power consumption: < 0.1 W
- Power Saving Features: Auto switch-off timer, Eco mode, Light sensor, Picture mute (for radio)
- Off mode power consumption: < 0.1 W


Dimensions

- Box dimensions (W x H x D): 1376 x 904 x 158 mm
- Set dimensions (W x H x D): 1235 x 723 x 32.5 mm
- Set dimensions with stand (W x H x D): 1235 x 785 x 280 mm
- Product weight: 19.5 kg
- Product weight (+stand): 21.5 kg
- Weight incl. Packaging: 27.5 kg
- VESA wall mount compatible: 400 x 400 mm

Accessories

- Included accessories: 2 x 3D active Glasses, Remote Control, 2 x AAA Batteries, Tabletop swivel stand, Power cord, SCART Adaptor, Component cable adaptor, Quick start guide, Legal and safety brochure, Warranty Leaflet
- Optional accessories: 3D Glasses PTA518, 3D Glasses PTA508

Connections

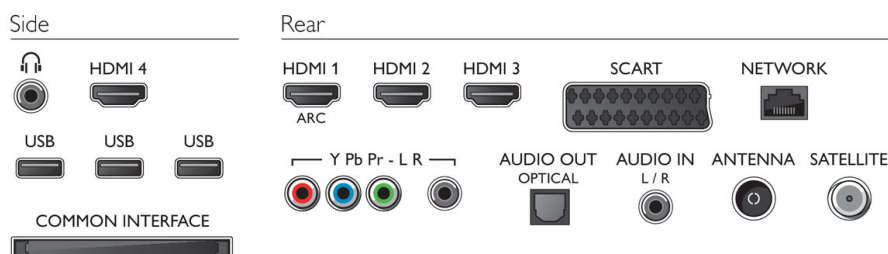

Issue date 2019-06-25

Version: 9.1.9

12 NC: 8670 000 98415
EAN: 87 12581 67014 6

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* MyRemote app and related functionalities varies per TV model and country, as well as smart device model and OS. For more detail, please visit: www.philips.com/TV.

* Compatibility depends on wifi miracast certification Android 4.2 or later. For more details please refer to your device documentation.

* For smart TV app, visit www.philips.com/TV to discover the services offering in your country

* USB recording for digital channels only, recordings may be limited by broadcast copy protection (CI+). Country and channel restrictions may apply.

* Parents should monitor their children during 3D viewing and ensure they do not experience any discomfort as mentioned above.

Watching 3D is not recommended for children under 6 years of age as their visual system is not fully developed yet.

* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.

* Energy consumption in kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

* EPG and actual visibility (up to 8 days) is country and operator dependent.

* Software upgrade required for HbbTV, Multiroom client and server, Netflix and myRemote app.