

Philips 3000 series
Slim LED TV

81 cm (32")
HDTV

32PFL3008S



Pure Entertainment

Slim LED TV

Enjoy the Philips 3008 series LED TV powered by Digital Crystal Clear for extremely vivid images combined with a minimalist TV design. Take one home for a memorable viewing experience in any room.

Control how you share and record on the big screen

- PC Input lets you use your TV as a PC monitor

Brings entertainment to life

- LED TV for images with incredible contrast
- 100Hz Perfect Motion Rate (PMR) for clear motion sharpness
- Digital Crystal Clear to enhance picture quality
- Two HDMI input for integrated connectivity
- USB for multimedia playback
- Hear every word with Clear Sound

PHILIPS

Slim LED TV
81 cm (32") HDTV

32PFL3008S/98

Highlights

PC input

Use your TV as a monitor. Simply connect using an HDMI-DVI cable/converter and you are ready to go.

LED TV



With LED backlight you can enjoy low power consumption and beautiful lines combined with high brightness, incredible contrast and vibrant colors. On top of that, LED lighting technology does not contain any hazardous materials, making it a greener choice too.

100Hz PMR



For picture movement that looks precise, smooth and natural, Philips created PMR—our

standard for measuring moving image sharpness. Perfect Motion Rate is the combined result of our unique video processing, number of frames per second and refresh rate of each frame, perfection in dimming capabilities, and backlighting technology. A higher PMR number contributes to higher contrast and better motion clarity—which means a superior image for you.

Digital Crystal Clear

Enjoy extremely clear pictures from any source. This package of picture innovations digitally adjusts and optimizes picture quality to optimal contrast, color and sharpness levels.

Two HDMI input



Avoid cable clutter with a single cable to carry both picture and audio signals from your devices to your TV. HDMI uses uncompressed signals, ensuring the highest quality from source to screen.

USB (photos, music, video)



Connect your USB memory-stick, digital camera, mp3 player or other multimedia device to the USB port at the side of your TV to enjoy photos, videos and music with the easy to use on screen content browser.

Clear Sound TV



This innovative audio technology significantly increases the comprehensibility of the voice, whether spoken or sung. It ensures you hear every word, so you can enjoy what you're watching to the fullest.



Specifications

Picture/Display

- Aspect ratio: 16:9
- Diagonal screen size (inch): 32 inch
- Diagonal screen size (metric): 81 cm
- Display: LED HD TV
- Panel resolution: 1366 x 768p
- Brightness: 300 cd/m²
- Picture enhancement: Digital Crystal Clear, 100 Hz Perfect Motion Rate
- Dynamic screen contrast: 100,000 : 1

Supported Display Resolution

- Computer inputs: up to 1920x1080 @ 60Hz
- Video inputs: 24, 25, 30, 50, 60 Hz, up to 1920x1080p

Tuner/Reception/Transmission

- Video Playback: PAL, SECAM, NTSC

Multimedia Applications

- Video Playback Formats: Motion JPEG, Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, RealMedia (.rm, .rmvb, RV8-10)
- Music Playback Formats: MP3
- Picture Playback Formats: JPEG

User Interaction

- Ease of Use: One-stop Home button
- Firmware upgradeable: Firmware upgradeable via USB
- Screen Format Adjustments: 4:3, 16:9, Zoom 1, Zoom 2
- Teletext: 1000 page Smart Text

Sound

- Output power (RMS): 20W (2 x 10W)
- Sound Enhancement: Auto Volume Leveler, Clear

Sound, Treble and Bass Control, Equalizer

Connectivity

- Number of AV connections: 1
- Number of HDMI connections: 2
- Number of component in (YPbPr): 1
- Number of USBs: 1
- Other connections: Antenna IEC75, Headphone out, PC-in VGA + Audio L/R in, Service connector

Power

- Mains power: AC 220 - 240 V 50/60Hz
- Ambient temperature: 5 °C to 35 °C
- Power consumption: 64 W
- Standby power consumption: < 0.5 W
- Power Saving Features: Auto switch-off timer


Accessories

- Included accessories: Remote Control, 2 x AAA Batteries, Table top stand, Quick start guide, Legal and safety brochure, Warranty Leaflet, User Manual


Dimensions

- Set Width: 732 mm
- Set Height: 454 mm
- Set Depth: 75 mm
- Product weight: 6.6 kg
- Set width (with stand): 732 mm
- Set height (with stand): 503 mm
- Set depth (with stand): 220 mm
- Product weight (+stand): 8.5 kg
- Box width: 802 mm
- Box height: 566 mm
- Box depth: 151 mm
- Compatible wall mount: 100 x 100mm
- Weight incl. Packaging: 10.3 kg

Side

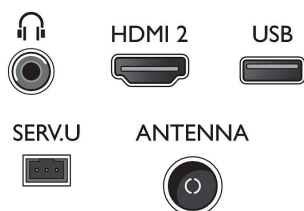

Rear

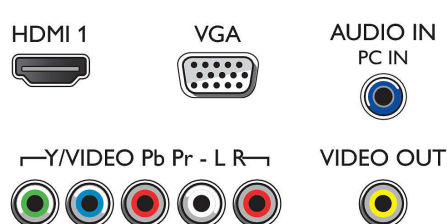

Issue date 2023-10-16

Version: 5.0.2

EAN: 87 12581 68392 4

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.

* Energy consumption in kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

* EPG and actual visibility (up to 8 days) is country and operator dependent.