



Philips  
LCD TV with Ambilight  
Spectra 2 and Perfect Pixel  
HD Engine

**94 cm (37")**  
integrated digital

**37PFL9603D**



## Excite your senses

Immerse yourself in a captivating Ambilight experience. Featuring Perfect Pixel HD Engine, this TV combines Perfect Motion Sharpness, 2250 trillion Colors and Perfect Contrast with Ambilight Spectra 2 - lighting up your viewing experience

### **Elevate your viewing experience**

- Ambilight Spectra 2 enhances the viewing experience

### **Perfect LCD Picture**

- Perfect Pixel HD Engine for unrivalled sharpness and clarity
- HD ready 1080p for highest quality display of Full HD images
- Perfect Natural Motion for ultra smooth Full HD movies
- 100Hz Clear LCD, 2ms performance for superb motion sharpness
- 2250 trillion colors processing
- Dynamic contrast 30000:1 for incredible rich black details

### **Easy to connect and enjoy**

- DLNA PC network link to browse PC and Home network content
- 4 HDMI inputs with Easylink for a full HD connection

### **Ready for digital**

- Integrated Digital Tuner for DVB-T reception

# PHILIPS

# Highlights

## Ambilight Spectra 2

Add a new dimension to your viewing experience with Ambilight Spectra 2. This patented Philips technology enlarges the screen further by projecting a glow of light from the back of the screen onto the surrounding wall. Ambilight adjusts automatically the colour and brightness of the light surrounding the TV to match with the picture, creating an immersive viewing experience. With Ambilight Spectra 2 movies truly come to life!

## Perfect Pixel HD Engine

Experience unrivalled sharpness and clarity with Perfect Pixel HD Engine. Each pixel of the picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. The result is a unique combination of sharpness, natural detail, vivid colors superior contrast and smooth natural motion whatever you are watching. Clean and razor sharp images result from artifact and noise detection and reduction in all content sources - from multimedia to standard TV.

## Full HD LCD display 1920x1080p

Enjoy the exceptional picture quality of Full High Definition TV signals of HD sources like HDTV broadcast, or Blu-ray DVD. HD ready 1080p is a protected label that offers picture quality far beyond that of ordinary HD Ready. It conforms to strict standards laid out by EICTA to offer a Full HD screen that displays

the benefits of resolution and picture quality of a Full HD 1920x1080p High Definition TV signal. It has a universal connection for both analog YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 1080p progressive signals at 24, 50 and 60Hz.

## Perfect Natural Motion

Enjoy the action without any judder. Perfect Natural Motion estimates motion in the picture and corrects juddering movements in both broadcast and pre-recorded movie material (including 1080p movies and 24p True Cinema on Blu-ray and DVD). The result is even smoother and quieter pictures with excellent sharpness. Enjoy motion performance that surpasses cinema quality!

## 100Hz Clear LCD (2ms)

100Hz Clear LCD creates extreme motion sharpness. The Double Frame Rate Insertion increases the sharpness of motion reproduction to more than twice that of conventional LCD, resulting in a performance with a response time of 2 milliseconds. Now you can enjoy clear images even with fast on-screen motion.

## 2250 trillion color processing

Vibrant and natural images from most advanced color processing. The 17 bit color booster optimises each of the 3 color channels (RGB), a total processing power of 2250

trillion colors. It produces more vibrant colors while retaining excellent sharpness. The advanced algorithms detect skin tones and subtle color shades, and processes these to give most natural colors.

## Dynamic contrast ratio 30000:1

You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. Dynamic Contrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

## 4 HDMI inputs with EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With Easylink only one remote control is needed to operate main functionalities on your TV and connected devices. HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 3 HDMI inputs on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder.



# Specifications

## Picture/Display

- Aspect ratio: Widescreen
- Brightness: 500 cd/m<sup>2</sup>
- Dynamic screen contrast: 30000:1
- Response time (typical): 2 (BEW equiv.) ms
- Viewing angle: 176° (H) / 176° (V)
- Diagonal screen size: 37 inch / 94 cm
- Display screen type: LCD Full HD W-UXGA Act. matrix
- Panel resolution: 1920x1080p
- Picture enhancement: Perfect Pixel HD Engine, Perfect Natural Motion, Perfect Contrast, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, 100Hz Clear LCD, Jagged Line Suppression, Progressive scan, 1080p 24/25/30Hz processing, 1080p 50/60Hz processing
- Screen enhancement: Anti-Reflection coated screen
- Color processing: 2250 trillion colors 17bit RGB
- Color cabinet: High gloss decofront with black backcover

## Ambilight

- Ambilight Features: Ambilight Spectra 2, Lounge light mode
- Dimming Function: Manual and via Light Sensor
- Ambilight light system: LED wide color

## Supported Display Resolution

### Computer formats

Resolution	Refresh rate
640 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz
1280 x 768	60Hz
1360 x 768	60Hz
1920 x 1080i	60Hz
1920 x 1080p	60Hz

### Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz
1080p	24, 50, 60Hz
1080p	24, 25, 30Hz

## Sound

- Output power (RMS): 2 x 15W
- Sound Enhancement: Auto Volume Leveler, Digital

- Signal Processing, Dynamic Bass Enhancement, Graphic Equaliser, Smart Sound
- Sound System: Virtual Dolby Digital, BBE

## Loudspeakers

- Built-in speakers: 2
- Loudspeaker types: 2 integrated subwoofers, Dome tweeter

## Convenience

- Child Protection: Child Lock+Parental Control
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug & Play
- Ease of Use: 4 favorite lists, Auto Volume Leveller (AVL), Delta Volume per preset, Graphical User Interface, On Screen Display, Program List, Settings assistant Wizard, Side Control
- Electronic Program Guide: Now + Next EPG, 8 day Electronic Program Guide
- Picture in Picture: Text dual screen
- Remote Control: Universal
- Remote control type: RC4492
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 14:9, Movie expand 16:9, Subtitle and Heading Shift, Super Zoom, Widescreen, unscaled (1080p dot by dot)
- Teletext: 1200 page Hypertext
- Teletext enhancements: Habit Watch, Program information Line
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB
- Multimedia: Digital media reader (browser), USB autobreak-in
- Smart mode: Game, Movie, Personal, Energy saving, Standard, Vivid

## Multimedia Applications

- Multimedia connections: USB
- Playback Formats: MP3, Slideshow files (.alb), JPEG Still pictures, MPEG1, MPEG2

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: DVB COFDM 2K/8K
- Video Playback: NTSC, SECAM, PAL
- Digital TV: DVB Terrestrial \*
- Tuner bands: Hyperband, S-Channel, UHF, VHF

## Connectivity

- Ext 1 Scart: Audio L/R, CVBS in, RGB

- Ext 2 Scart: Audio L/R, CVBS in, RGB
- Ext 3: YPbPr, Audio L/R in, VGA PC-in
- Ext 4: HDMI v1.3
- Ext 5: HDMI v1.3
- Ext 6: HDMI v1.3
- EasyLink (HDMI-CEC): One touch play, System audio control, System standby
- Front / Side connections: HDMI v1.3, S-video in, CVBS in, Audio L/R in, Headphone Out, USB
- PC network link: DLNA 1.0 certified
- Other connections: Analog audio Left/Right out, S/PDIF out (coaxial), Common Interface

## Power


- Ambient temperature: 5 °C to 35 °C
- Mains power: AC 220 - 240 V +/- 10%
- Power consumption: 186 W
- Power (energy saving mode): 144 W
- Standby power consumption: 0,15 W

## Dimensions

- Set dimensions (W x H x D): 953 x 604 x 101 mm
- Set dimensions with stand (H x D): 677 x 242 mm
- Stand width: 520 mm
- Weight incl. Packaging: 29 kg
- Product weight: 19.2 kg
- Product weight (+stand): 23.2 kg
- Box dimensions (W x H x D): 1067 x 819 x 300 mm
- VESA wall mount compatible: 200 x 200 mm

## Accessories

- Included accessories: RF antenna cable, Power cord, Quick start guide, User Manual, Warranty certificate, Remote Control, Batteries for remote control

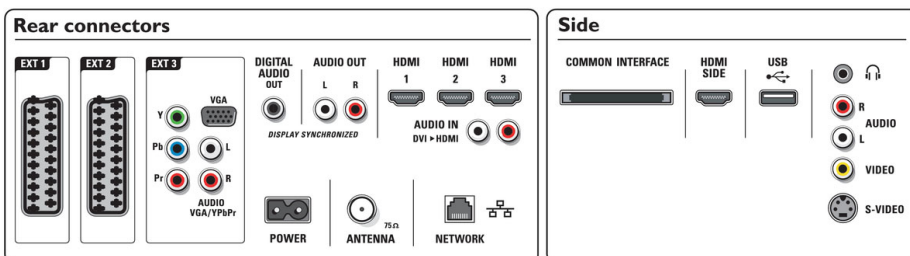

Issue date 2020-05-07

Version: 4.0.8

12 NC: 8670 000 34191  
EAN: 87 12581 36568 4

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)