

Quick Use Guide

LCD TV

Thank you for purchasing this Philips LCD Television set. You are now the proud owner of a Streamium LCD TV set which promises full value to you as a customer.

Before you proceed to install the LCD TV, please follow the steps and diagrams as shown to familiarise yourself with the correct and safe way of setting up the TV.

For details on normal LCD TV operation, making adjustments to the settings and features, please refer to the LCD TV User Manual.

For details on using the Streamium operation, making adjustments to the settings and features, please refer to the Streamium LCD TV User Manual.

Note: Images are for illustrations purpose only.

Note: This Quick Use Guide is designed to help you connect and install your Streamium TV to enable you to enjoy the streaming functions that this set offers. We strongly recommend you to read the instructions thoroughly.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS UNIT TO RAIN OR EXCESSIVE MOISTURE.

System Requirements

- **PC-Link (Home Link)**
 - PC with 233 MHz Pentium, 64MB RAM, HDD (with 50MB of free space), CD-ROM drive and running Windows 98/98SE/2000/ME/XP or MAC OS X.
 - Wireless USB adapter (USB V1.1 or higher) or wired/wireless (WiFi 802.11b/g compliant) home network.
- **Internet services or online upgrades:**
 - Direct Broadband (minimal 256 kbps, 512 kbps recommended for video streaming) Internet connection (e.g. DSL, cable Modem or Satellite broadband) via (wireless) base station or PC with Internet Connection Sharing (supported from Windows 98SE onwards).
- **My.philips.com**
 - PC with internet access, browser and e-mail address. Support only the following Media Formats.
- **MUSIC:** MP3, MP3pro, PCM
- **PICTURES:** JPG (RGB), GIF, BMP
- **MOVIES:** MPG1, MPG2, MPG4, DivX 4.0/5.03

For more information go to: www.philips.com/streamium

A) Listing the accessories

TV aerial cable

TV mains cord (two-pin)

TV mains cord (three-pin)

Mini Jack to cinch


FM radio aerial lead

Philips Media Manager Software

Remote Control




B) Positioning the LCD TV

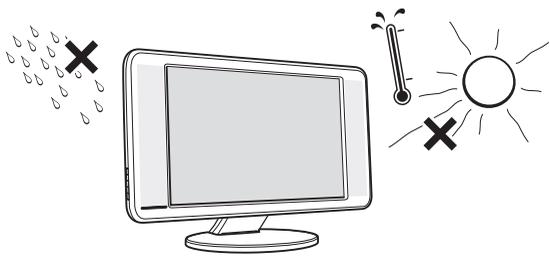


Place your LCD TV on a solid stable surface that can support the LCD TV weight.
Do not expose the LCD TV to water or heat source (e.g. lamp, candle, radiator).
Do not obstruct the ventilation grid at the rear.

C) Remote control battery installation

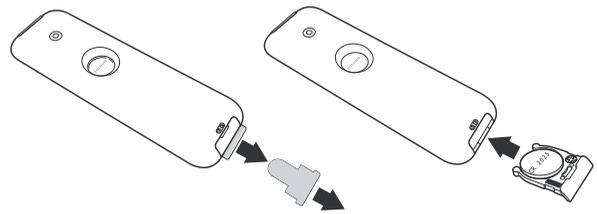


- 1) Pull out the plastic insulation sheet from the battery to enable the remote control to operate.
- 2) If the plastic insulation sheet was removed but the remote control is not functioning, check battery placement by pulling out the battery cover and ensure the lithium battery (3V) is placed correctly. The words on the battery should face you when you remove the battery cover.


D) Basic Installation of the Streamium LCD TV

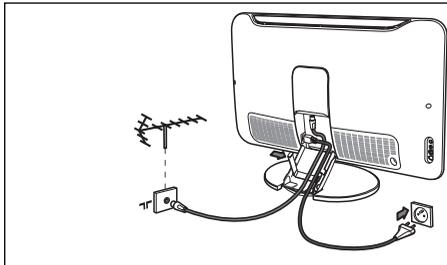

1) Use the aerial connection lead supplied to connect the aerial socket of the TV to the **T** socket.

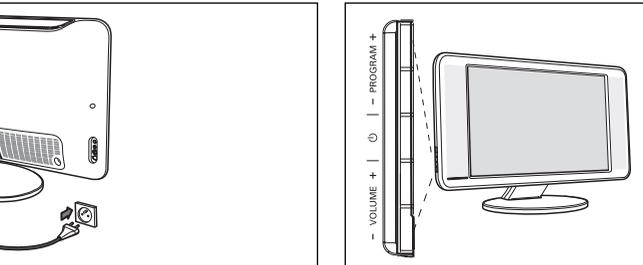

2) Connect the mains cord to the television power inlet and the mains plug to the wall socket.

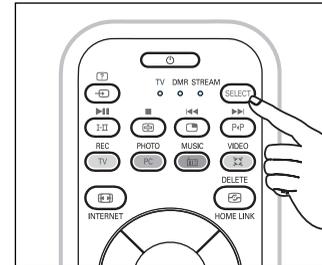


3) Press the \odot button to switch ON or OFF the LCD TV.

4) Press the SELECT button repeatedly on the remote control until the indicator is lighted up at TV.

E) Install Philips Media Manager software

Start by installing Philips Media Manager software onto your PC

This software enables the transfer of video, music and photo files in your computer to your LCD TV.

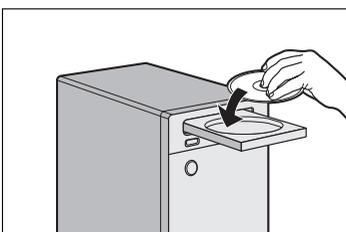

1) Place the Philips Media Manager CD in your CD or DVD's drive and install the Philips Media Manager software.



2) In the menu that appears on your computer screen, click on 'Install Philips Media Manager' and follow the on-screen instructions.



3) Add files to the Media Manager.


Only the files that you see in the Media Manager will be accessible from the Streamium TV.

Note: Refer to the Streamium User Manual on 'Installing the Software' for more details on how to install the Philips Media Manager software.


F1) Installing the Streamium LCD TV on a wireless home network

For this option, you already have a wireless home computer network installed and working properly.

Refer to the user manual that came with your wireless network adaptor/base station on installing a wireless home network.

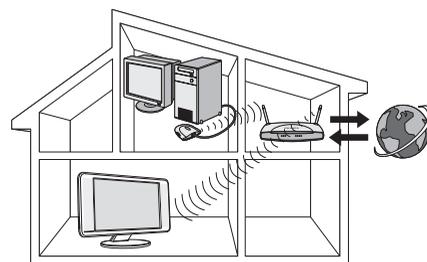

Check the:
NETWORK NAME (SSID)
.....
and
ENCRYPTION KEY
.....
of your wireless network

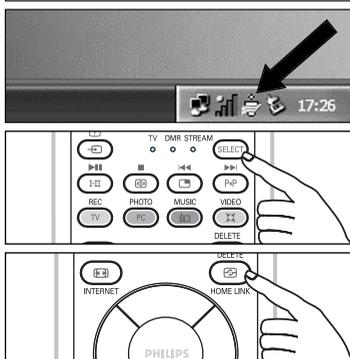

- 1) Check your existing wireless network settings and record down the Wireless Network Name (SSID) and encryption key*. You may need to enter this information in STEP 5 of this procedure.

Note: Refer to the user manual that came with your wireless network adaptor/base station for instructions on obtaining the Wireless Network Name (SSID) and encryption key.

- 2) Make sure the PC is switched on and the Philips Media Manager software is installed and active (an icon will appear at the lower right hand corner of your PC monitor).

- 3) Switch on the Streamium LCD TV. Press the **SELECT** button on the remote control repeatedly until STREAM indicator lights up.

- 4) Press the **HOME LINK** button on the remote control.

Note: Do not press the **INTERNET** button at this time.

- 5) Select your Wireless Network Name (SSID) and then use the remote control to enter the encryption key* you found in step 1. Explore the Home Link menu on the TV screen.

Note:
- If there is only one wireless network, it will be used and you will not be asked to select one.
- You will not be asked to input the encryption key if the wireless network is not encrypted.

*) The encryption key is case sensitive, meaning 'ABC' is not the same as 'abc'.
You must input the encryption key in the correct case.

G) Connecting to the Internet for the first time

When the Streamium TV connects to the Internet for the first time, the Streamium TV will prompt you to register.

Note: You need to subscribe to broadband internet connection services (min. 256 kbps) with your local Internet Service Provider.



- 1) Press the **INTERNET** button on the remote control to open the Navigation View on your TV screen.

Note: Make sure the PC is switched on and the Philips Media Manager software is installed and active.

- 2) With the remotecontrol, use the SMS TEXT-style keys* for inputting your email address. SMS TEXT-style entry can be used to enter alphanumeric information. In this mode, text is entered by a method similar to that used for entering text messages on a cellular telephone.

Note: You can also use the remote control cursor Left/Right/Up/Down keys to input your email address.

- 3) Within a short time, you will receive an email with instructions on how to create an account at my.philips.com. Check your email.

- 4) Double-click the website address that is in the email. Fill in the requested data to create an account. After registration you can access the INTERNET service of the Streamium TV. You can manage your user account at 'my.philips.com' by opening this website in your Internet browser program or by clicking the MyPhilips button in Philips Media Manager.

Note: Please remember your password. You will need it if you want to re-register.



- 5) After creating a MyPhilips account, press the **INTERNET** button again. The Streamium TV will now have access to the Internet services of your MyPhilips account.

*) See the chapter 'Enabling broadband Internet entertainment' in the User Manual for details.

F2) Installing the Streamium LCD TV without a wireless home network

For this option, you do not have a wireless home computer network installed but you want to connect the Streamium LCD TV to your PC.


Note: Internet access is not available if the Streamium LCD TV is connected directly to PC using this method.

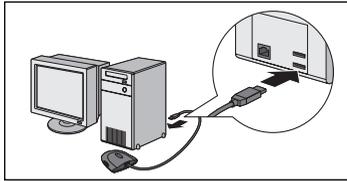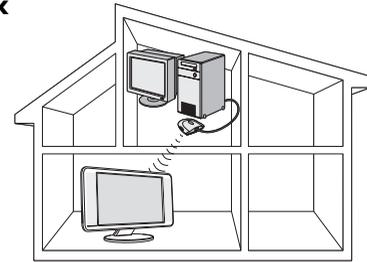


1) Install a USB Wireless Network Adaptor (USB V.1.1 or higher) to your PC (not included).



2) Make sure the PC is switched on and the Philips Media Manager software is installed and active (an icon will appear at the lower right hand corner of your PC monitor).

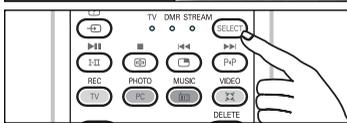

3) Switch on the Streamium LCD TV. Press the **SELECT** button on the remote control repeatedly until STREAM indicator lights up.

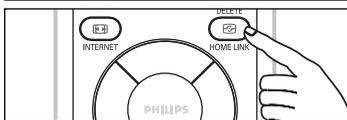

4) Press the **HOME LINK** button on the remote control.

Note: Do not press the **INTERNET** button at this time.



5) If asked, select from the list of wireless network names (SSID) presented to you on the TV screen. Select 'Philips' only if Philips adaptor CPWUA054 is used. Explore the Home Link menu on the TV screen.

F3) Installing the Streamium LCD TV to your PC using a network cable

For this option, you want to connect the Streamium LCD TV to your PC using a CAT.5 shielded ethernet cable* (STP).

Note:


- Your PC must have a Ethernet connector (RJ45) available.
- Internet access is not available if the Streamium LCD TV is connected directly to PC using the cable.
- Internet connection is available if the Streamium LCD TV is connected via cable or wireless onto a network that has internet connection.

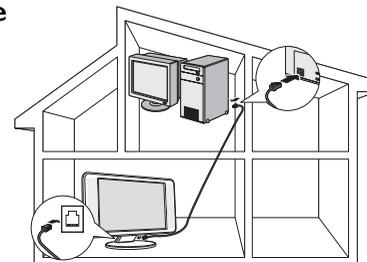


1) Use a crossover Ethernet cable* if you want to connect the Streamium TV directly to your computer or use a straightthrough Ethernet cable* if you want to connect the Streamium TV to an existing computer network.



2) Make sure the PC is switched on and the Philips Media Manager software is installed and active (an icon will appear at the lower right hand corner of your PC monitor).

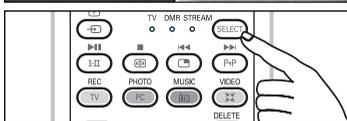

3) Switch on the Streamium LCD TV. Press the **SELECT** button on the remote control repeatedly until STREAM indicator lights up.

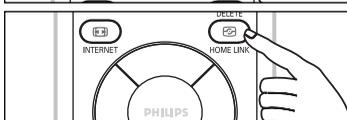

4) Press the **HOME LINK** button on the remote control.

Note: Do not press the **INTERNET** button at this time.

5) Explore the Home Link menu on the TV screen.

*) Cables not included.