



Philips 9000 series
4K Curved OLED Smart
TV with Ambilight 3-sided
and Perfect Pixel Ultra HD

164 cm (65")
4K Ultra HD OLED TV
DTMB



65POD901C

4K Curved OLED Smart TV

with Ambilight 3-sided

Introducing the Philips 901C OLED TV. Now you can enjoy deeper blacks, impressive colors in 4K Ultra HD resolution, breath-taking motion and a wider viewing angle so that you can experience movies just as the film director intended.

Visible Lightness

- Ambilight changes the way you look at TV forever
- Make a statement with Philips Curved TV

Just as the director intended

- OLED TV: Only perfect black creates perfect colors
- 4K Ultra HD is unlike any resolution you've ever seen before
- Perfect Pixel Ultra HD for the ultimate Picture Quality
- The ultimate in contrast, color & sharpness with HDR Perfect
- Perfect Color unlocks all the possibilities of color

See how beautiful sound can be

- Visible sound articulation lets you see the beauty of sound
- Powerful sound processing for uncompromised 20W sound power

Connect, communicate, record and share

- Smart TV: a whole new world to explore

PHILIPS

4K Curved OLED Smart TV
164 cm (65") 4K Ultra HD OLED TV, DTMB

65POD901C/30

Highlights

Ambilight 3-sided


You've created a home that's more than just a house, so why not choose a TV that is warm and inviting too? Philips unique Ambilight technology makes your screen much wider—and your viewing experience more immersive—by emitting an extra wide glow from three-sides of your TV screen onto the surrounding wall. Color, vibrancy and excitement move beyond the screen and into your living room to bring you a viewing experience beyond the ordinary.

OLED TV



Philips OLED is the next generation of TV technology. Unlike conventional LED TVs, OLED doesn't need a backlight. Each pixel makes its own color and light. When they are turn off, they are completely black. With such deeper blacks, you get enhanced colors and astonishing contrast that allow you to enjoy the purest, most lifelike image produced from a Philips TV yet.

4K Ultra HD

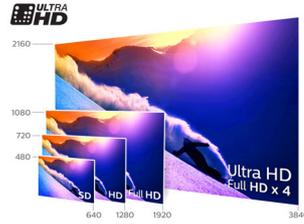

Ultra HD TV has four times the resolution of a conventional Full HD TV. With over 8 million pixels and our unique Ultra Resolution Upscaling technology, you'll experience the best possible picture quality. The higher the quality of your original content, the better images and resolution you will be able to experience. Enjoy improved sharpness, increased depth perception, superior contrast, smooth natural motion, and flawless details.

Perfect Pixel Ultra HD



Building on our award winning UHD Picture Quality heritage, we've taken High Definition Picture Quality to a whole new level. With the advanced picture processing software in our Perfect Pixel Ultra HD engine, your picture is converted into crisp 4K Ultra HD resolution.

So you'll enjoy the deepest blacks, brightest whites, and the most vivid colors with natural skin tones. And all this comes to life with our most fluid, razor sharp image quality – every time, and from any source.

Perfect Color

Philips Perfect Color technology unlocks lifelike color realism with trillions of shades. Experience an astonishingly wide color spectrum in combination with our most sophisticated color processing. Perfect Color is the combination of 100% wide color gamut panel and 2.250 Trillion color processing, resulting in picture quality that looks like a window to the world.

Powerful sound 20W

Powerful sound processing for uncompromised 20W sound power

Smart TV (w/o Youtube)

Discover a Smarter experience that lies beyond traditional TV. Rent and stream movies, videos or games from online video stores. Watch catch-up TV from your favorite channels and enjoy a growing selection of online apps..



Specifications

Ambilight

- Ambilight Version: 3 sided
- Ambilight Features: Ambilight Music, Game Mode, Wall colour adaptive, Lounge mode

Picture/Display

- Diagonal screen size (inch): 65 inch
- Panel resolution: 3840x2160
- Aspect ratio: 16:9
- Pixel engine: Perfect Pixel Ultra HD
- Picture enhancement: Ultra Resolution, Perfect Natural Motion, Micro Dimming Premium

Smart TV Features

- User Interaction: MultiRoom Client and Server, SimplyShare
- SmartTV apps*: Online Video Stores, Open Internet Browser, Social TV
- Ease of Installation: Auto detect Philips devices, Device connection wizard, Network installation wizard, Settings assistant wizard
- Ease of Use: One-stop Smart Menu button, Onscreen Usermanual
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB, Online firmware upgrade
- Screen Format Adjustments: Basic - Fill Screen, Fit to Screen, Advance - Shift, Zoom, Stretch
- Philips TV Remote app*: Apps, Channels, Control, NowOnTV, TV Guide, Video On Demand

Processing

- Processing Power: Hex Core

Sound

- Output power (RMS): 20W
- Sound Features: Triple ring technology
- Sound Enhancement: DTS Premium Sound, Clear Sound, Smart Sound, Auto Volume Leveller, Incredible Surround, Virtual Surround

Connectivity

- Number of HDMI connections: 2
- Number of USBs: 2
- Wireless connections: Dual Band, Wi-Fi 11ac 2x2 integrated
- Other connections: Ethernet-LAN RJ-45, Antenna

- IEC75, Digital audio out (coaxial)
- HDMI features: 4K, Audio Return Channel
- HDCP 2.2: Yes on all HDMI
- EasyLink (HDMI-CEC): One touch play, Remote control pass-through, System audio control, System standby

Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1, HEVC
- Music Playback Formats: AAC, MP3, WAV, WMA (v2 up to v9.2), WMA-PRO (v9 and v10), MPEG1 L1/2
- Picture Playback Formats: JPEG, BMP, PNG

Supported Display Resolution

- Computer inputs on all HDMI: up to 4K UHD 3840x2160 @60Hz
- Video inputs on all HDMI: up to 4K UHD 3840x2160 @60Hz

Tuner/Reception/Transmission

- Digital TV: DTMB
- MPEG Support: MPEG2, MPEG4
- TV Program guide*: 8 day Electronic Program Guide

Power

- Mains power: AC 220 - 240 V 50/60Hz
- Ambient temperature: 5 °C to 45 °C
- Standby power consumption: <=0.5
- Power Saving Features: Auto switch-off timer, Light sensor

Dimensions

- Box dimensions (W x H x D): 1616 x 1072 x 384 mm
- Set dimensions with stand (W x H x D): 1450.42 x 939.48 x 271.94 mm
- Product weight (+stand): 23.78 kg
- Weight incl. Packaging: 35.5 kg

Accessories

- Included accessories: Remote Control, Table top stand, Power cord, Quick start guide, Legal and safety brochure, 2 x AAA Batteries

Connections

Rear



Issue date 2018-04-27

Version: 4.2.1

12 NC: 8670 001 43218
EAN: 87 18863 01094 5

© 2018 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com



* Smart TV app offerings vary per TV model and country. For more details please visit: www.philips.com/smarttv.
* Please be informed that your HDR function in your TV currently can be supported via Streaming and USB only.