

Philips Professional LED TV

40" EasySuite
LED
DVB-T2/T/C

40HFL3010T

## Incredible functionality for your guests

## With smart hotel info pages

With this energy efficient LED TV, you enjoy the benefits of a dedicated Hospitality TV. Allow your guests to buy premium content, inform them via hotel info pages and use the latest remote technology for effortless installation and control

## Great viewing experience and guest comfort

- Full HD LED TV—brilliant LED images with incredible contrast
- · Eco-friendly design & flame retardant housing
- Low power consumption

## Advanced hotel features and future proof

- · SmartInstall for easy remote installation and maintenance
- MyChoice compatibility for recurring revenues
- Serial Xpress Protocol Easy for interactive systems
- Full Hotel, Healthcare and Prison Modes
- Prevent unauthorized use by joystick control locking

## Differentiating guest experience

- SmartInfo for branded, interactive hotel info pages
- · Additional headphone connection for personal listening
- Nurse-call compatibility optimized for the Healthcare sector
- On-screen clock display for optimal guest convenience





# Highlights

#### **Full HD LED TV**


Picture Quality matters. Regular HDTVs deliver quality, but you expect more. Imagine crisp detail paired with high brightness, incredible contrast and realistic colors for a true to life picture.

## **MyChoice** compatible



MyChoice offers a simple and low-cost way to offer your guests premium TV channels. At the same time it delivers an additional revenue stream which allows you to recover your initial TV investment.

#### **SmartInstall**

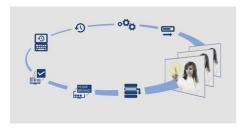

SmartInstall makes installation and maintenance of your TVs effortless. With a simple to use web tool, you can now remotely configure and install your TVs without visiting any rooms! This saves you time and makes sure your guests are not disturbed. Whether it

is updating the hotel info pages or installing new channels, SmartInstall can handle all.

#### **SmartInfo**



SmartInfo allows you to provide hotel or city information to your guests. Your guests have access to this interactive hotel webpage even when the TV is not connected to your intranet or internet. You can change the information regularly and easily to keep your guests up to date with all the latest developments in your hotel.

## **SXP** Easy



With Serial Xpress Protocol Easy the TV can be connected to external decoders and set-top boxes of all major interactive system providers.

#### **Nurse-call compatibility**

Nurse-call system compatibility makes Philips Healthcare TVs a highly integrated tool that

provides not only entertainment options for the user/patient but also gives convenient access to help in medical emergencies.

## On-screen clock display

With our new on-screen clock display, guests can easily access the current time. At a push of a button the clock is being displayed on the TV screen combining enhanced visibility and lower power consumption.

#### **Eco-friendly design**

Sustainability is integral to the way Philips does business. Philips TVs are designed and produced according to our EcoDesign principles aimed at minimizing overall environmental impact, through lower power consumption, removal of hazardous substances, lower weight, more efficient packaging and better recyclability. Philips TVs also have a special housing of flame retardant material. Independent tests carried out by emergency fire services have shown that whereas TVs can sometimes intensify fires caused by external sources, Philips TVs will not contribute to the fire.

#### **Joystick control locking**

By disabling or enabling the joystick control locking, the administrator can prevent unauthorized use of the TV via the joystick, saving the hotelier overheads.

## Low power consumption

Philips TVs are desgined to minimize power consumption. This will not only reduce environmental impact but also lower operating costs.

## Specifications

#### Picture/Display

- · Display: LED Full HD
- Diagonal screen size: 40 inch / 100 cm
- Aspect ratio: 16:9
- Panel resolution: 1920x1080p
- Brightness: 280 cd/m²
- Viewing angle: 176° (H) / 176° (V)
- Picture enhancement: Pixel Plus HD, 200Hz Perfect Motion Rate

#### **Audio**

- Sound output Power: 20 (2x10) W
- Speakers: 2.0, Down Firing
- Bathroom speaker out: 1.5W Mono 8Ohm
- Sound Features: AVL, Incredible surround, Dynamic Bass, Dolby MS10

#### Design

· Colour: Black

## Tuner/Reception/Transmission

- Digital TV: DVB-T/T2/C
- · Analog TV: PAL
- Video Playback: NTSC, PAL, SECAM

### **Connectivity Rear**

- Antenna: IEC-75
- HDMI1: HDMI 1.4
- · Digital Audio out: Optical
- Scart: RGB, CVBS, SVHS
- VGA input: 15 pin D-sub
- · AV input: CVBS shared with YPbPr
- Component: YPbPr + L/R cinch
- DVI audio in: Mini-Jack
- External Control: RJ-48
- · Bathroom speaker out: Mini-Jack

## **Connectivity Side**

- HDMI2: HDMI 1.4
- USB1: USB 2.0
- Common Interface Slot: CI+ 1.3
- Headphone out: Mini-Jack

#### **Connectivity Enhancements**

- HDMI: ARC (all ports), DVI (all ports)
- EasyLink (HDMI CEC): One touch play, System Standby, RC pass through, system audio control
- Scart: Power on scart
- RJ48: IR-In/Out, Serial Xpress interface

903.5mm

#### **Features**

 Digital services: 8d EPG, Now&Next, MHEG, Teletext, HbbTV

- Ease of use: Picture Style, Sound Style, Picture Format
- · Local control: Joystick

#### **Hospitality Features**

- Hotel mode: Joystick Control Lock, Menu lock, Installation Menu Lock, Volume limitation
- Prison mode: high security mode, TXT/MHEG/ USB/EPG/Subtitle Lock
- SmartInfo: HTML5 Browser, Interactive Templates, Picture Slide Show
- CMND Create & Control: Off-Line Channel Editor, Off-Line Settings Editor, Remote Management over RF, Content Creation
- Your brand: SmartInfo, Welcome Logo, Welcome Message, Customizable Dashboard (HTML)
- · Revenue generation: MyChoice
- Cloning and Firmware update: Instant Initial Cloning, Via USB/RF
- Timer: Sleep Timer, Wake Up Alarm, Wake Up On Channel, Wake up Sounds
- Clock: Clock in Standby Mode, Glow-in-the-Dark RC button, On-screen Clock, Optional External Clock
- · Channels: Combined List
- Interactive DRM: VSecure
- Control: Block Automatic Channel Update, Serial Xpress Protocol
- Power control: Auto Power ON, Green/fast startup
- Switch On control: Channel, Feature, Picture Format, Volume
- Remote Control: Cable Strap Ready, Low Battery Detection, RC Battery Door Lock
- Anti-Theft: Battery Anti-theft Protection, Kensington Lock

## **Healthcare features**

- Control: Multi-Remote Control, Healthcare RC compatible, Nurse call system compatible
- Convenience: Headphone out, Independent main speaker mute
- Safety: Double isolation class II, Flame retardant

### Multimedia

- Multimedia connections: USB
- Video playback supported: Formats: H.264/MPEG4 AVC, MPEG1, MPEG2, MPEG4, WMV9/VC1, Containers: AVI, MKV, 3GP, ASF, M2TS, M4V, MP4, MPG, PS, Quicktime, TS, WMV
- Subtitle formats supported: SRT, ASS, SMI, SSA SUB, TXT
- Music formats supported: MP3, AAC, WAV, WMA

(v2 up to v9.2)

- $\bullet$  Picture formats supported: BMP, JPG, PNG, GIF
- Supp. Video Resolution on USB: up to 1920x1080p@60Hz

#### **Accessories**

- Included: Remote Control 22AV1409A/12, Tabletop Stand, 2xAAA Batteries, Warranty Leaflet, Legal and Safety brochure, Power Cord
- Optional: External Clock 22AV1120C/00, Healthcare RC 22AV1109H/12, Setup RC 22AV9573A

#### Power

- Mains power: AC 220-240V; 50-60Hz
- Energy Label Class: A++
- Eu Energy Label power: 30 W
- · Annual energy consumption: 44 kW h
- Standby power consumption: <0.3W
- Power Saving Features: Eco mode
- Ambient temperature: 0 °C to 40 °C

## **Dimensions**

- Set dimensions (W  $\times$  H  $\times$  D): 904  $\times$  512  $\times$  64/77 mm
- Set dimensions with stand (W  $\times$  H  $\times$  D): 904  $\times$  577  $\times$  222 mm
- Product weight: 7.6 kg
- Product weight (+stand): 9.5 kg
- VESA wall mount compatible: M4, 200 x 200 mm



Issue date 2017-03-16

63.6mm

13.2mm

Version: 1.0.1

12 NC: 8670 001 25778 EAN: 87 18863 00400 5 © 2017 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com

- $\ensuremath{^{*}}$  Availability of features will depend on implementation chosen by integrator.
- \* Typical on-mode power consumption measured according to IEC62087 Ed 2. The actual energy consumption will depend on how the television is used.
- \* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.