

Philips Professional LED TV

26" EasySuite LED DVB-T/C MPEG 2/4

26HFL3007D

Great value in a modern design

with thin and powersaving LED technology

With this thin and energy efficient Hospitality LED LCD TV, you will enjoy all the benefits of digital television. Allow your guests to buy premium content and use the latest remote technology for effortless installation.

Advanced hotel features and future proof

- Brilliant LED images with low power consumption
- MyChoice compatibility for recurring revenues
- SmartInstall for easy remote installation and maintenance
- Integrated Connectivity Panel
- Full Hotel, Healthcare and Prison Modes

Differentiating guest experience

- · SmartInfo for branded hotel info pages even offline
- · Additional headphone connection for personal listening
- ThemeTV Lite for easy channel navigation

Sustainable and safe

- Low power consumption
- Eco-friendly design & flame retardant housing
- · Green Button allows guest to save even more energy

PHILIPS

Highlights

MyChoice compatible



MyChoice offers a simple and low-cost way to offer your guests premium TV channels. At the same time it delivers an additional revenue stream which allows you to recover your initial TV investment.

Integrated Connectivity Panel

The Integrated Connectivity Panel allows your guests to seamlessly connect their personal devices to your TV without the need of any external Connectivity Panel.

LED



The most advanced LED lighting technology in this TV combines an eye-catching minimalistic design with stunning image quality as well as the lowest power consumption in its category. On top of that, LED lighting technology does not contain any hazardous materials. Thus, with LED backlight you can enjoy low power consumption, high brightness, incredible contrast, sharpness and vibrant colors.

Eco-friendly design

Sustainability is integral to the way Philips does business. Philips TVs are designed and produced according to our EcoDesign principles aimed at minimizing overall environmental impact, through lower power consumption, removal of hazardous substances, lower weight, more efficient packaging and better recyclability. Philips TVs also have a special housing of flame retardant material. Independent tests carried out by emergency fire services have shown that whereas TVs can sometimes intensify fires caused by external sources, Philips TVs will not contribute to the fire.

ThemeTV Lite

ThemeTV Lite offers an easy user interface that gives your guests the opportunity to navigate in the guest menu to find their own country channels, news and hotel information easily without the need of an interactive entertainment system.

Green Button

With the Green Button guests have the possibility to save even more energy on the TV by opting for a higher backlight dimming or by switching off the screen when listening to radio. Another way to reduce a hotel's operating cost while involving guests directly.

SmartInstall



SmartInstall makes installation and maintenance of your TVs effortless. With a simple to use web tool, you can now remotely configure and install your TVs without visiting any rooms! This saves you time and makes sure your guests are not disturbed. Whether it is updating the hotel info pages or installing new channels, SmartInstall can handle all.

SmartInfo

SmartInfo allows you to provide hotel or city information to your guests through Hotel Info. Your guests have access to hotel info pages which can be changed regularly and easily to keep your guests up to date with all the latest developments in your hotel.





🗡 Smart**Power**







Specifications

Picture/Display

- Display: LED HD TV
- Diagonal screen size: 26 inch / 66 cm
- Aspect ratio: 16:9
 Panel resolution: 1366 x 768p
- Panel resolution: 1366 x 768
- Brightness: 300 cd/m²
- Viewing angle: 160° (H) / 150° (V)
- Picture enhancement: Digital Crystal Clear
- Dynamic screen contrast: 100.000:1
- Color cabinet: high gloss black cabinet
- Response time (typical): 4 ms

Supported Display Resolution

Computer inputs: up to 1920x1080 @ 60Hz
Video inputs: 24, 25, 30, 50, 60 Hz, up to 1920x1080p

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
 Digital TV: DVB-C MPEG4*, DVB-T MPEG4*,
- DVB-C MPEG2*, DVB-T MPEG2*
- TV system: PAL, SECAM
- Video Playback: PAL, SECAM, NTSC

Sound

- Output power (RMS): 6W (2 x 3W)
- Sound Enhancement: Auto Volume Leveler, Incredible Surround, Treble and Bass Control, Clear Sound

Connectivity

- Number of AV connections: 1
- Number of USBs: 1
- Number of HDMI connections: 3
- Number of component in (YPbPr): 1
- Number of scarts (RGB/CVBS): 1
- HDMI features: Audio Return Channel
- EasyLink (HDMI-CEC): One touch play, System standby, Remote control pass-through, System audio control
- Other connections: Antenna IEC75, Headphone out, PC-in VGA + Audio L/R in, Common Interface Plus (Cl+), Digital audio out (coaxial)

Convenience

 Ease of Installation: Plug & Play, Advanced Hotel Mode, Automatic Tuning System (ATS), PLL Digital Tuning, Automatic Channel Install(ACI), Auto Program Naming, Autostore, Cloning of TV settings via USB, Cloning of TV settings via RF, Installation menu locking, Security menu access, Keyboard lock-out

- Ease of Use: Auto Volume Leveller (AVL), 1 channel list analog/digital, On Screen Display, Program List, Side Control, Graphical User Interface
- Comfort: Hotel Guest features, Welcome message, Switch on channel, Volume limitation, Sleep timer
- Interactive hotel features: Block automatic channel update, MyChoice, ThemeTV Lite
- Prison mode: Txt, MHEG, USB, EPG, Sub block
- Clock Enhancements: Synchro Time via TXT/DVB
- Teletext: 1000 page Smart Text
- Electronic Program Guide: 8 day Electronic Program Guide, Now + Next EPG
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Widescreen, Subtitle Zoom, Super Zoom, Auto Format
- Remote control type: 22AV1108A (RC6)
 Remote Control: low battery detection, battery
- anti-theft protection
- Firmware upgradeable: Firmware upgradeable via USB, Firmware upgradeable via RF
- Other convenience: Kensington lock
- Clock: Sleep Timer

Healthcare


- Control: Multi remote control
- Convenience: Headphone out, Independent main speaker mute
- Safety: Double isolation Class II

Multimedia Applications

- Multimedia connections: USB
- Video Playback Formats: H264/MPEG-4 AVC, MPEG-1, MPEG-2, Containers: AVI, MKV, MPEG-4, WMV9/VC1
- Music Playback Formats: AAC, MP3
- Picture Playback Formats: JPEG

Power

- Mains power: 220-240V, 50/60Hz
- Eu Energy Label power: 30 W
- Energy Label Class: A
- Annual energy consumption: 44 kW h
- Standby power consumption: <0.3W
- Ambient temperature: 5 °C to 35 °C

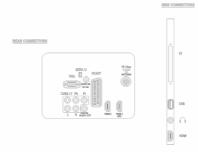



lssue date 2022-04-21	

© 2022 Koninklijke Philips N.V. All Rights reserved.

www.philips.com

Version: 5.2.4

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

12 NC: 8670 000 91923 EAN: 87 12581 65057 5 **Green Specifications**

- Safety: Flame retardant housing
- Low Power Standby
- SmartPower Eco

Dimensions

- Set dimensions (W x H x D):
- 632.6 x 406.1 x 40.4 mm • Set dimensions with stand (W x H x D):
- 632.6 x 452.4 x 164.3 mm • Box dimensions (W x H x D):
- 715 x 508 x 115 mm
- Product weight: 4.66 kg
- Product weight (+stand): 4.99 kg
- Weight incl. Packaging: 6.5 kg
- VESA wall mount compatible: 100 x 100 mm

Accessories

- Included accessories: Remote Control, Batteries for remote control, Power cord, Table top stand, Warranty Leaflet
- Optional accessories: Set up remote 22AV8573/00

Loudspeakers

Built-in speakers: 2

26HFL3007D/10