



Philips Cineos
Widescreen flat TV with
Pixel Plus 2 HD and
Ambilight 2 channel

107 cm (42")
LCD
integrated digital

CINEOS

42PF9641D



Turn up your viewing experience

with Pixel Plus 2 HD and Ambilight

Enjoy the ultimate viewing experience with this Philips Cineos Flat TV with Full HD display, Pixel Plus 2 HD and Ambilight 2 Channel. The USB Digital Media Reader gives you full access to multimedia content.

Immersive viewing experience

- Full HD LCD display, 1920 x 1080p
- Integrated Digital Tuner for DVB-T reception
- HD Ready for the highest quality display of HD signals
- Pixel Plus 2 HD for great details, depth and clarity
- Dynamic contrast enhancer delivering rich black details
- 2-channel active Ambilight enhances the viewing experience

True beauty lies in the details

- Matching stand with elegant design included

Perfect picture quality from your digital photos

- USB Connector for easy, instant multimedia playing

For advanced performance

- 2 HDMI inputs for full digital HD connection in one cable

PHILIPS

widescreen flat TV
107 cm (42") LCD, integrated digital

42PF9641D/10

Highlights

Full HD LCD display 1920 x 1080p

This display has a resolution that is referred to as Full HD. The state-of-the-art LCD screen technology has the full high definition widescreen resolution of 1080 progressive lines, each with 1920 pixels. This allows the best possible picture quality for HD input signals with up to 1080 lines. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colours. This vibrant and sharp image will provide you with an enhanced viewing experience.

Integrated Digital DVB-T tuner

The integrated Digital DVB-T tuner lets you receive digital terrestrial TV without an additional set top box. Enjoy quality TV clutter free.

HD Ready

Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV set-top boxes and Blu-ray discs. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer an HD screen that displays the benefits of the resolution and picture quality of a High Definition signal. It has a universal connection for both analogue YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60 Hz.

Pixel Plus 2 HD

Pixel Plus 2 HD offers the unique combination of ultimate sharpness, natural detail, increased depth, vivid colours and smooth and natural motion from standard TV, High Definition signals and multimedia sources. Each pixel of the incoming picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. Artefacts in compressed multimedia content are detected and reduced, ensuring that the picture is clean and razor sharp. Digital noise reduction ensures that the picture is perfectly smooth yet razor sharp.

Dynamic contrast enhancer

You want the LCD flat display with the highest contrast and most vibrant images even at a wide viewing angle. The Philips dynamic contrast enhancer uses video processing and unique dimming backlight technology. This delivers deep rich black levels with increased detail. The dimming backlight increases the contrast up to 5 times* and at the same time improves the viewing angle. It gives a bright, lifelike picture with high contrast and vibrant colours (* factor between 2 and 5, depending on screen type and picture content).

Ambilight 2 channel

Ambilight makes an impressive contribution to the overall viewing experience by producing ambient light to complement the colours and light intensity of the on-screen image. It adds a new dimension to the viewing experience, completely immersing you into the content

you are watching. It creates ambience, stimulates more relaxed viewing and improves perceived picture detail, contrast and colour. Ambilight automatically and independently adapts its colours according to the changing content on the screen.

Tabletop stand included

A tabletop stand with matching design is packed with the set.

USB Multimedia Connector

The USB connector allows access to multimedia jpg, mp3 and alb files of most USB sticks and most digital cameras (USB 1.1 memory-class device). Plug the USB into the slot at the side of the TV and access your photos or music files. This makes it easy to view and share your photos and music.

2 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analogue signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backwards-compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection. With 2 HDMI inputs you can connect multiple HD sources, for instance an HD set-top box and a Blu-ray player. Your TV is fully prepared for the HD future.



Specifications

Picture/Display

- Aspect ratio: 16:9
- Brightness: 550 cd/m²
- Dynamic screen contrast: 4000:1
- Response time (typical): 8 ms
- Viewing angle: 176° (H)/176° (V)
- Diagonal screen size: 42 inch / 107 cm
- Display screen type: LCD Full HD W-UXGA Act. matrix
- Panel resolution: 1920 x 1080p
- Picture enhancement: Pixel Plus 2 HD, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Digital Natural Motion, Dynamic contrast enhancement, Jagged Line Suppression, Progressive scan, Pulse Killer Chip, Widescreen Plus
- Screen enhancement: Anti-Reflection coated screen
- Colour cabinet: High Gloss Black

Ambilight

- Ambilight Features: Ambilight 2 Channel, Auto adaptive to video content, Efficient low energy lamp
- Colour Settings: Full Multi-Colour
- Dimming Function: Manual and via Light Sensor

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60 Hz
800 x 600	60 Hz
1024 x 768	60 Hz

Video Formats

Resolution	Refresh rate
640 x 480i	1Fh
640 x 480p	2Fh
720 x 576i	1Fh
720 x 576p	2Fh
1280 x 720p	3Fh
1920 x 1080i	2Fh

Sound

- Output power (RMS): 2 x 15 W
- Sound Enhancement: Digital Signal Processing, Dynamic Bass Enhancement, Graphic Equalizer
- Sound System: Virtual Dolby Digital

Loudspeakers

- Built-in speakers: 4
- Loudspeaker types: Integrated woofers with wOOx, Dome tweeter

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Smart Clock
- Ease of Installation: Auto Programme Naming, Automatic Channel Install (ACI), Automatic Tuning System (ATS), Autostore, PLL Digital Tuning, Plug and Play
- Ease of Use: 4 favourite lists, Auto Volume Leveller (AVL), Delta Volume per preset, Graphical User Interface, On-Screen Display, Programme List, Side Control
- Electronic Programme Guide: Now + Next EPG
- Picture in Picture: Text dual screen
- Remote Control: Amp, Aux, DVD, Sat, STB (Set-Top Box), VCR, Multi-functional
- Remote control type: RC4401
- Screen Format Adjustments: 4:3, 6 Widescreen Modes, Auto Format, Movie expand 14:9, Movie expand 16:9, Subtitle and Heading Shift, Super Zoom, Widescreen
- Teletext: 1200-page Hypertext
- Teletext enhancements: Habit Watch, Programme information Line
- VESA Mount: Vesa compliant

Multimedia Applications

- Digital Content Management: Digital Media Reader
- Multimedia connections: USB (streaming video capable)
- Playback Formats: MP3, Slideshow files (.alb), JPEG Still pictures, MPEG1, MPEG2

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: DVB COFDM 2K/8K
- Video Playback: NTSC, SECAM, PAL
- Digital TV: DVB Terrestrial*
- Tuner bands: Hyperband, S-Channel, UHF, VHF

Connectivity

- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, RGB, S-video in, S-video out
- Ext 3: YPbPr

- Ext 4: HDMI
- Ext 5: HDMI
- Ext 6: VGA PC-in, Audio L/R in
- Front/Side connections: Audio L/R in, CVBS in, Headphones Out, S-video in, USB
- Other connections: Analogue audio Left/Right out, S/PDIF in (coaxial), S/PDIF out (coaxial), Common Interface

Power


- Ambient temperature: 5°C to 40°C
- Mains power: AC 220-240 V +/- 10%
- Power consumption: 248 W
- Standby power consumption: <1 W

Dimensions

- Set dimensions (W x H x D): 1095 x 764 x 114 mm
- Set dimensions with stand (H x D): 824 x 290 mm
- Weight incl. Packaging: 59 kg
- Product weight: 35 kg
- Box dimensions (W x H x D): 1292 x 1064 x 323 mm
- VESA wall mount compatible: 800 x 400 mm

Accessories

- Included accessories: Tabletop stand, RF antenna cable
- Optional accessories: Floor stand

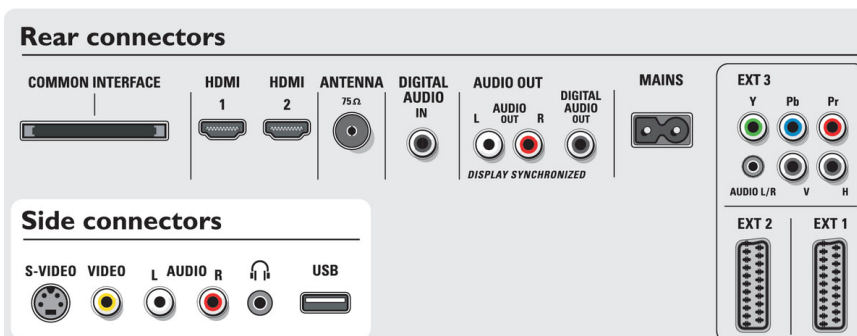

Issue date 2019-06-26

Version: 4.0.5

12 NC: 8670 000 24344
EAN: 87 10895 98894 0

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com