




Philips  
Professional TV

EasySuite

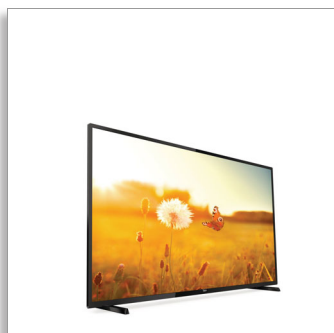

32HFL3014

## Take control

Powered by CMND

Show more with a budget-friendly standalone professional TV. The intuitive CMND solution makes it simple to deploy and manage connected displays. Benefit from simple, fast installation and an on-screen welcome page that's easy to program.

### Simple set up. **ADVANCED** performance

- CMND and Control: effortless maintenance of your TVs
- MyChoice compatible. Built-in pay-to-view solution
- Be seen. Brand the TV's UI with your logo
- Instant initial USB cloning. Rapidly configure Pro TVs
- Mixed channel map to combine analogue and digital channels
- USB auto playback. Music, movies, and more

### Cost-effective solution

- 3 years warranty, extendable to 5 years
- Multilingual customer support

### Sustainable and safe

- Low power consumption

# PHILIPS

# Highlights

## **CMND&Control**

CMND and Control allows for remote configuration and installation of your TVs from a central location, without the need to visit any rooms. Update and manage all your displays, with minimal effort, all without having to disturb your guests.

## **Built-in pay-to-view solution**

Offer pay-to-view content in any situation - from a complete pay-to-access-all-channels model to selected premium content. MyChoice is an integrated solution that allows viewers to access pay-per-view channels via a code or a card.

## **UI branding**

Your Philips Professional TV offers a clear, easy-to-navigate user interface (UI), which you can customize with your own branding. Easily add your logo or custom background to the menu to increase the visibility of your brand.

## **Instant initial USB cloning.**

Provides the ability to easily copy all programming and channel programming settings from one TV into other TV sets in less than a minute. The feature ensures uniformity between TV sets and significantly reduces installation time and costs.

## **Mixed channel map**

One integrated channel list for digital and analogue channels. This allows the guest to flick seamlessly between Analogue and Digital channels.

## **USB auto playback.**

Share the fun. Connect your USB memory-stick, digital camera, mp3 player or other multimedia device to the USB port on your TV to enjoy photos, videos and music with the easy to use onscreen content browser.

# Specifications

## Picture/Display

- Display: LED HD TV, D-LED
- Diagonal screen size: 32 inch / 80 cm
- Panel resolution: 1366 x 768p
- Brightness: 250 cd/m<sup>2</sup>
- Viewing angle: 178° (H) / 178° (V)

## Audio

- Sound output Power: 16 (2x8) W
- Speakers: 2.0, Down Firing
- Sound Features: AVL, Dynamic Bass, Incredible surround, Dolby MS10

## Design

- Colour: Black

## Tuner/Reception/Transmission

- Digital TV: DVB-T/T2/C, HEVC FHD (up to 1080p60)
- Analog TV: PAL, SECAM
- Video Playback: NTSC, PAL, SECAM

## Connectivity Rear

- Antenna: IEC-75
- HDMI1: ARC, HDMI 1.4
- HDMI2: HDMI 1.4
- Digital Audio out: Optical
- DVI audio in: Mini-Jack
- VGA input: 15 pin D-sub
- Scart: CVBS, RGB

## Connectivity Side

- Common Interface Slot: CI+ 1.3.2
- Headphone out: Mini-Jack
- USB1: USB 2.0

## Connectivity Enhancements

- HDMI: ARC (HDMI1)
- EasyLink (HDMI CEC): One touch play, System Standby, RC pass through, system audio control
- Scart: Power on scart

## Features

- Digital services: 8d EPG, Now&Next, MHEG, Teletext, Subtitles
- Ease of use: Picture Style, Sound Style, Picture Format, Independent volume control
- Local control: Joystick

## Hospitality Features

- Hotel mode: Joystick Control Lock, Menu lock, Installation Menu Lock, Volume limitation
- Prison mode: high security mode, TXT/MHEG/USB/EPG/Subtitle Lock
- CMND&Control: Remote Management over RF, TV Group management, Off-Line Settings Editor, Off-Line Channel Editor
- Your brand: Welcome Logo, Customizable Home Screen
- Revenue generation: MyChoice
- Cloning and Firmware update: Instant Initial Cloning, Via USB/RF
- Timer: Sleep Timer, Wake Up Alarm, Wake Up On Channel, Wake up Sounds
- Clock: Glow-in-the-Dark RC button, On-screen Clock
- Channels: Combined List, Off-Line Channel Editor
- Control: Block Automatic Channel Update
- Power control: Green/fast startup
- Switch On control: Channel, Feature, Picture Style, Picture Format, Sound Style, Volume, Menu language
- Remote Control: Cable Strap Ready, Low Battery Detection, RC Battery Door Lock, Glow-in-the-Dark Clock button
- Anti-Theft: Battery Anti-theft Protection, Kensington Lock
- Languages: Guest language control

## Healthcare features

- Control: Multi-Remote Control, Healthcare RC compatible
- Convenience: Headphone out, Independent main speaker mute, Headphone Detection
- Safety: Double isolation class II, Flame retardant

## Multimedia

- Multimedia connections: USB
- Video playback supported: Formats: H.264/MPEG4 AVC, MPEG1, MPEG2, MPEG4, WMV9/VC1, MP4, MPG, TS, WMV, HEVC, Containers: AVI, MKV
- Subtitle formats supported: SRT, SMI, SSA SUB, TXT
- Music formats supported: MP3, AAC, WAV, WMA (v2 up to v9.2)
- Picture formats supported: BMP, JPG, PNG, GIF
- Supp. Video Resolution on USB: up to 1920x1080p@60Hz

## Accessories


- Included: Edge Stand, 2x AAA batteries, Power Cord, Warranty Leaflet, Legal and Safety brochure, Remote Control 22AV1903A/12
- Optional: Easy RC 22AV1601B/12, Healthcare RC 22AV1604B/12, Setup RC 22AV9574A/12

## Power

- Mains power: AC 220-240V; 50-60Hz
- Energy Label Class: E
- EPREL registration number: 345104
- Eu Energy Label power: 28 W
- Standby power consumption: <0.3W
- Power Saving Features: Eco mode, Auto switch-off timer
- Ambient temperature: 0 °C to 40 °C

## Dimensions

- Set dimensions (W x H x D): 732 x 432 x 77 mm
- Set dimensions with stand (W x H x D): 732 x 455 x 166 mm
- Product weight: 4.6 kg
- Product weight (+stand): 4.7 kg
- Wall mount compatible: 100 x 100 mm, M6

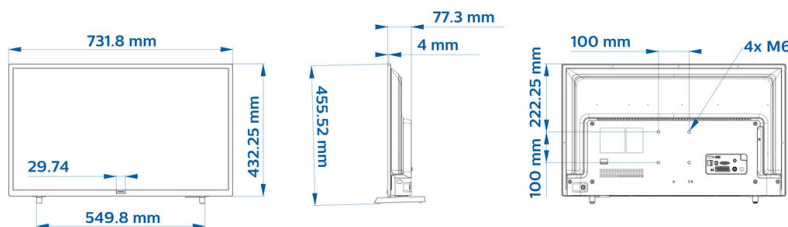

Issue date 2022-07-14

Version: 5.0.1

12 NC: 8670 001 63221  
EAN: 87 18863 02191 0

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Availability of features will depend on implementation chosen by integrator.

\* Typical on-mode power consumption measured according to IEC62087 Ed 2. The actual energy consumption will depend on how the television is used.

\* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.