



Philips
LCD TV with Ambilight
and Pixel Plus 3 HD

81 cm (32")
integrated digital

32PFL7603D



Light up your experience.

Immerse yourself in a captivating Ambilight experience. Featuring a HD Ready display and Pixel Plus 3HD engine, this Flat TV combines HD Natural Motion, exciting invisible sound and Ambilight - lighting up your experience for years to come.

Elevate your viewing experience

- Ambilight enhances the viewing experience with ambient light

Pictures come alive

- Pixel Plus 3 HD for most sharp and clear pictures
- HD LCD display, with a 1366 x 768p resolution
- HD Natural Motion for ultra smooth motion in Full HD movies
- 4 trillion colors processing for vivid and brilliant images
- Dynamic contrast 30000:1 for incredible rich black details

Connect, install and enjoy

- Integrated Digital Tuner for DVB-T reception
- Enjoy photo and music playback via USB
- 4 HDMI inputs for full digital HD connection in one cable
- EasyLink: easy control of TV & connected device via HDMI CEC

PHILIPS

Highlights

Ambilight

Ambilight makes an impressive contribution to the overall viewing experience by producing ambient light to complement the colors and light intensity of the on-screen image. It adds a new dimension to the viewing experience, completely immersing you into the content you are watching. It creates ambiance, stimulates more relaxed viewing, and improves perceived picture detail, contrast and color. Ambilight automatically and independently adapts its colors according to the changing content on the screen.

Pixel Plus 3 HD

Pixel Plus 3 HD offers the unique combination of ultimate sharpness, natural detail, vivid colors and smooth natural motion on all qualities of HD, standard TV signals and multimedia content, for high definition displays. Each pixel of the incoming picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. Artifacts and noise in all sources from multimedia to standard TV and also in highly compressed HD are detected and reduced ensuring that the picture is clean and razor sharp.

LCD display, 1366 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

HD Natural Motion

Philips invented HD Natural Motion to minimize juddering effects that are visible with movie based picture content. The award winning algorithm estimates motion in the picture and corrects juddering movements in both broadcast and recorded movie material (such as DVD and Blu-ray Disc). The resulting smooth motion reproduction and excellent sharpness take the viewing experience to a higher level.

Integrated Digital DVB-T tuner

The integrated Digital DVB-T tuner lets you receive digital terrestrial TV without an additional set top box. Enjoy quality TV clutter free.

4 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources and includes digital audio. HDMI uses HDCP copy protection. With 3 HDMI inputs on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and game console or digital Camcorder. Your TV is fully prepared for the HD future.

EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With EasyLink only one remote control is needed to operate main functionalities on your TV and connected devices. EasyLink uses the standard HDMI cable to transfer system commands. It works between all electronic devices equipped with HDMI CEC.



Specifications

Picture/Display

- Aspect ratio: Widescreen
- Brightness: 500 cd/m²
- Dynamic screen contrast: 30000:1
- Response time (typical): 6 ms
- Viewing angle: 176° (H) / 176° (V)
- Diagonal screen size: 32 inch / 81 cm
- Display screen type: LCD WXGA Active Matrix TFT
- Panel resolution: 1366 x 768p
- Picture enhancement: Pixel Plus 3 HD, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Color Enhancement, Color Transient Improvement, Digital Noise Reduction, Dynamic contrast enhancement, Luminance Transient Improver, 1080p 24/25/30Hz processing, 1080p 50/60Hz processing, HD Natural Motion
- Screen enhancement: Anti-Reflection coated screen
- Color cabinet: Black colour deco front & white colour back cover

Ambilight

- Ambilight Features: Ambilight 2 Channel
- Preset modes: 4 Active Adaptive modes

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60, 72, 75, 85Hz
800 x 600	60, 72, 75, 85Hz
1024 x 768	60, 70, 75, 85Hz
1920 x 1080i	60Hz
Via HDMI/DVI input	

Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz

1080p	24, 50, 60Hz
1080p	24, 25, 30Hz

Sound

- Equalizer: 5-bands
- Output power (RMS): 2 x 15W
- Sound Enhancement: Auto Volume Leveler, Graphic Equaliser
- Sound System: Nicam Stereo, Virtual Dolby Digital, BBE

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer, Wake up Clock
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug & Play
- Ease of Use: 4 favorite lists, Auto Volume Leveller (AVL), Delta Volume per preset, Graphical User Interface, On Screen Display, Program List, Settings assistant Wizard, Side Control
- Electronic Program Guide: Now + Next EPG
- Picture in Picture: Text dual screen
- Remote Control: TV
- Remote control type: RCPF03E08B
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Teletext: 1200 page Hypertext
- Teletext enhancements: 4 favourite pages, Program information Line
- Smart mode: Movie, Standard, Vivid

Multimedia Applications

- Multimedia connections: USB
- Playback Formats: MP3, Slideshow files (.alb), JPEG Still pictures

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, SECAM L/L', DVB COFDM 2K/8K
- Video Playback: NTSC, SECAM, PAL

- Digital TV: DVB Terrestrial *
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Tuner Display: PLL

Connectivity

- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, RGB
- Ext 3: YPbPr, Audio L/R in
- Ext 4: HDMI v1.3
- Ext 5: HDMI v1.3
- Ext 6: HDMI v1.3
- EasyLink (HDMI-CEC): One touch play, System standby
- Front / Side connections: HDMI v1.3, S-video in, CVBS in, Audio L/R in, Headphone Out, USB
- Other connections: Analog audio Left/Right out, PC Audio in, S/PDIF out (coaxial), Common Interface

Power

- Ambient temperature: 5 °C to 35 °C
- Mains power: 220 - 240V, 50/60Hz
- Power consumption: 140 W
- Standby power consumption: 0.15 W


Dimensions

- Set dimensions (W x H x D): 819 x 518 x 123 mm
- Set dimensions with stand (W x H x D): 819 x 579 x 220 mm
- Weight incl. Packaging: 21 kg
- Product weight: 14 kg
- Product weight (+stand): 17 kg
- Box dimensions (W x H x D): 918 x 629 x 282 mm
- Wall mount compatible: 200 x 300 mm

Accessories

- Included accessories: Tabletop swivel stand, Power cord, Quick start guide, User Manual, Warranty certificate, Remote Control, Batteries for remote control

Stereo system					Transmission system				
2CS DK	NICAM DK	2CS BG	NICAM I	NICAM LL	PAL BG	PAL D/K	PAL I	SECAM BG	SECAM DK
•	•	•	•	•	•	•	•	•	•

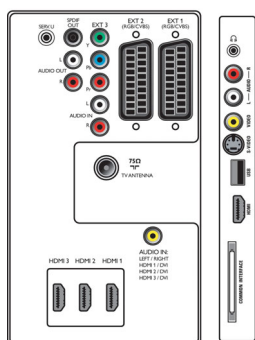

Issue date 2022-07-14

Version: 4.0.21

12 NC: 8670 000 36242
EAN: 87 12581 38869 0

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com