



#### Professional TV

- 32" Studio
- DVB-T2/T/C HEVC

32HFL2869T/12

## Delight your guests

with pure taste

Show your guests how much you care with this affordable Hospitality TV. You will enjoy dedicated hospitality features like a branded welcome page, installation via USB and menu and control locking.

### Benefits

#### Great viewing experience and guest comfort

- LED TV for images with incredible contrast
- USB for multimedia playback
- Low power consumption

#### Advanced hotel features and future proof

- Greet your guests with a customizable welcome page
- USB cloning of all settings for quick installation

- Ideally suited for prisons
- Off-line channel editor to edit a channel list on a PC
- One combined channel list for Analog and Digital channels
- Advanced volume control to avoid guest disturbance
- Prevent unauthorized use by joystick control locking
- Installation menu locking

# PHILIPS


## Features

### Welcome page



A welcome page is displayed each time the TV set is switched on. The welcome page can be branded and customized easily at the time of installation via a simple welcome image in .png format.

### USB Cloning

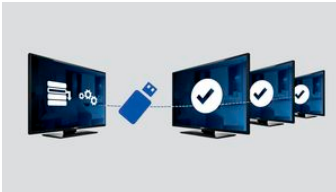

Provides the ability to easily copy all programming and channel programming settings from one TV into other TV sets in less than a minute. The feature ensures uniformity between TV sets and significantly reduces installation time and costs.

### PrisonMode

To control communication, this Hospitality TV is equipped with a specific PrisonMode setting. This Advanced Security Mode switches off certain settings not demanded by the detention market like Teletext, Electronic Programme Guide, Subtitles and USB ports.

### USB (photos, music, video)



Share the fun. Connect your USB memory-stick, digital camera, mp3 player or other multimedia device to the USB port on your TV to enjoy photos, videos and music with the easy to use onscreen content browser.

## Specifications

[field not found 'disclaimer\_text']

### Picture/Display

Display	LED HD TV
Diagonal screen size (metric)	80 cm
Diagonal screen size (inch)	32 inch
Aspect ratio	16:9
Panel resolution	1366 x 768p
Brightness	300 cd/m <sup>2</sup>
Viewing angle	178° (H) / 178° (V)
Contrast ratio (typical)	4000

### Audio

Sound output Power	12 (2x6) W
Speakers	2.0 Down Firing
Sound Features	Equalizer Balance

AVL  
Incredible surround  
Dynamic Bass

### Design

Colour	Black
--------	-------

### Tuner/Reception/Transmission

Digital TV	DVB-T/T2/C HEVC FHD (up to 1080p60)
Analog TV	PAL SECAM

### Connectivity Rear

Antenna	IEC-75
HDMI1	HDMI 1.4 ARC
HDMI2	HDMI 1.4

### One combined channel list

One integrated channel list for digital and analogue channels. This allows the guest to zapp seamless between Analogue and Digital channels.

### Advanced volume control

With advanced volume control you can install the start-up volume of the TV and predifine the volume range with which the TV set is allowed to operate, preventing excessive volume adjustments and avoiding disturbance of next door guests.

### Joystick control locking

By disabling or enabling the joystick control locking, the administrator can prevent unauthorized use of the TV via the joystick, saving the hotelier overheads.

### Installation menu locking

Prevents unauthorized access to installation and configuration settings, to ensure maximum guest convenience and avoid unnecessary reinstalling costs.

### Low power consumption

Philips TVs are designed to minimize power consumption. This will not only reduce environmental impact but also lower operating costs.

Digital Audio out Scart	Optical CVBS RGB SVHS
VGA input	15 pin D-sub

#### Connectivity Side

Common Interface Slot	CI+ 1.3
AV input	CVBS+L/R (Cinch)
Headphone out	Mini-Jack
USB1	USB 2.0

#### Connectivity Enhancements

EasyLink (HDMI CEC)	One touch play System Standby RC pass through
---------------------	---

#### Features

Digital services	Subtitles Teletext MHEG Now&Next 8d EPG
Ease of use	Picture Style Sound Style
Local control	Joystick

#### Hospitality Features

Hotel mode	Joystick Control Lock Menu lock Installation Menu Lock Volume limitation (incl. HP)
Prison mode	high security mode TXT/MHEG/USB/EPG/Subtitle Lock
Your brand Cloning and Firmware update	Welcome Logo via USB Instant Initial Cloning
Switch On control	Channel/Source Picture Style Volume (incl. HP)
Timer	Sleep Timer Wake Up Alarm
Channels	Combined List Off-Line Channel Editor
Control	Block Automatic Channel Update
Power control	Green/fast startup
Remote Control	Cable Strap Ready RC Battery Door Lock
Anti-Theft	Kensington Lock

#### Healthcare features

Control Convenience	Multi-Remote Control Headphone out
---------------------	---------------------------------------

#### Multimedia

Multimedia connections	USB
Video playback supported	Containers: AVI, MKV Formats: H.264/MPEG4 AVC MPEG1 MPEG2 MPEG4 HEVC TS

Subtitle formats supported	SRT SSA SUB ASS SMI TXT
Music formats supported	MP3 AAC WAV WMA (v2 up to v9.2)
Picture formats supported	BMP JPG PNG
Supp. Video Resolution on USB	up to 1920x1080p@30Hz

#### Accessories

Included	Remote Control 22AV1407A/12 2xAAA Batteries Tabletop Stand Warranty Leaflet Legal and Safety brochure
Optional	Setup RC 22AV9573A Remote Control 22AV1601A/12 [Easy remote control]

#### Power

Mains power	AC 220-240V; 50-60Hz
Energy Label Class	A+
Eu Energy Label power	31 W
Annual energy consumption	45 kW h
Standby power consumption	<0.3 W
Power Saving Features	Eco mode
Ambient temperature	5 °C to 45 °C

#### Dimensions

Set Width	735 mm
Set Height	438 mm
Set Depth	77/89 mm
Set width (with stand)	735 mm
Set height (with stand)	476 mm
Set depth (with stand)	185 mm
Product weight	5.1 kg
Product weight (+stand)	5.6 kg
VESA wall mount compatible	M4 200 x 100 mm

- \* Availability of features will depend on implementation chosen by integrator.
- \* Typical on-mode power consumption measured according to IEC62087 Ed 2. The actual energy consumption will depend on how the television is used.
- \* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.



data subject to change  
2019, July 9

Version: 1.0.1  
EAN: 8718863013779

© 2019 Koninklijke Philips N.V.  
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)