



Philips 3000 series
LCD TV with Digital
Crystal Clear

107 cm (42")

Full HD 1080p digital TV



42PFL3604H

Clearly a smart choice

With easy-to-use and future-proof technology

Experience great picture and sound quality with this Full HD 1080p display. So easy to enjoy, with high quality as standard, you can be sure that you make the right choice with this Philips Flat TV.

Vivid and razor sharp pictures

- Digital Crystal Clear for detail depth and clarity
- Full HD LCD display, with a 1920 x 1080p resolution
- 28.9 billion colours for brilliant natural images

Crisp and Clear sound

- Incredible Surround for enhanced audio enjoyment
- 2 x 10 W RMS audio power

Easy to connect and enjoy

- Enjoy photo and music playback via USB
- 2 HDMI inputs with Easylink for a full HD connection
- PC input (HDMI)
- Smart Picture and Smart Sound to personalise your viewing

Ready for the future

- MPEG4 HDTV reception via DVB-T tuner*



NL/22/001

PHILIPS

sense and simplicity

Highlights

Digital Crystal Clear

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimises picture quality to optimal contrast, colour and sharpness levels. It's like watching vivid cinema-like images.

Full HD LCD display 1920 x 1080p

The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future-proof as it supports 1080p signals from all sources, including the most recent sources such as Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colours.

28.9 billion colours

Vibrant and natural images from most advanced colour processing. The 3 colour channels (RGB) are optimised for a total processing power of 28.9 billion colours. The advanced algorithms detect subtle colour

shades and skin tones and process these to give most natural colours.

Incredible Surround

Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

USB for photo and music playback

The USB connector allows access to jpeg photos and mp3 music of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access your photos or music files using the easy onscreen content browser. You can now easily view and share your photos and music.

2 HDMI inputs with EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With Easylink, only one remote control is needed to operate main functionalities on your TV and connected devices. HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 1 HDMI input on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, such as an HD set-top box, a Blu-ray player and a Game Console or Digital Camcorder.

PC input (HDMI)

With PC input you can use your TV as a PC monitor via an HDMI-DVI cable/converter.

MPEG4 HDTV on DVB-T tuner*

HDTV allows you to watch TV with the best possible picture and sound quality, without needing an additional set-top box. Thanks to the built-in tuner that supports a DVB-Terrestrial signal for both MPEG-2 and MPEG-4 formats, you receive high definition TV programmes in exceptional quality.



ECO Flower

Over the last 10 years we have worked hard to lower our environmental impact and will continue to do so. Our eco-design

process aims to create Philips televisions that are increasingly eco-friendly and that have significantly less impact on the environment. Philips has been awarded the EU ECO label (the flower) on the majority of its models because of the televisions' high energy efficiency, ultra low standby power (up to 50% less than the required EU ECO label level), absence of hazardous substances (e.g. lead) and the fact that Philips has designed televisions that can be easily recycled.



Specifications

Picture/Display

- Aspect ratio: Widescreen
- Brightness: 500 cd/m²
- Dynamic screen contrast: 30,000:1
- Response time (typical): 5 ms
- Viewing angle: 178° (H)/178° (V)
- Diagonal screen size: 42 inch / 107 cm
- Display screen type: LCD WXGA+ Active Matrix TFT
- Panel resolution: 1920 x 1080p
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, 3D MA deinterlacing, Active Control, Colour Enhancement, Colour Transient Improvement, Digital Crystal Clear, Digital Noise Reduction, Dynamic contrast enhancement, Luminance Transient Improver, Progressive scan, Sharpness Adjustment, Automatic skin tone correction, 1080p 24/25/30 Hz processing, 1080p 50/60 Hz processing
- Screen enhancement: Semi-glare
- Colour cabinet: High gloss black deco front with black cabinet

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60 Hz
800 x 600	60 Hz
1024 x 768	60 Hz
1280 x 720	60 Hz
1280 x 768	60 Hz
1280 x 1024	60 Hz
1360 x 768	60 Hz
1440 x 900	60 Hz
1680 x 1050	50 Hz, 60 Hz

Via HDMI/DVI input

Video formats

Resolution	Refresh rate
480i	60 Hz
480p	60 Hz
576i	50 Hz
576p	50 Hz
720p	50, 60 Hz
1080i	50, 60 Hz
1080p	24, 50, 60 Hz
1080p	24, 25, 30, 50, 60 Hz

Sound

- Output power (RMS): 2 x 10 W
- Sound Enhancement: Auto Volume Leveller, Incredible Surround, Smart Sound
- Sound System: Nicam Stereo

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer, Wake-up Clock, Wake-Up Timer
- Connection Enhancement: Easy link
- Ease of Installation: Auto Programme Naming, Automatic Channel Install (ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug and Play
- Ease of Use: Auto Volume Leveller (AVL), Graphical User Interface, On-Screen Display, Settings assistant Wizard, Side Control
- Electronic Programme Guide: Now + Next EPG, 8-day Electronic Programme Guide*
- Remote Control: TV
- Remote control type: RCPF01E09B
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Teletext: 1000-page Hypertext
- Teletext enhancements: Fast text, Programme information Line
- Smart mode: Game, Movie, Personal, Energy saving, Standard, Vivid

Multimedia Applications

- Multimedia connections: USB
- Playback Formats: MP3, JPEG Still pictures

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, SECAM B/G, SECAM L/L', DVB COFDM 2K/8K
- Video Playback: NTSC, SECAM, PAL
- Digital TV: DVB-T MPEG4*
- Tuner bands: Hyperband, S-Channel, UHF, VHF

Connectivity

- Ext 1 Scart: Audio L/R, RGB
- Ext 2 Scart: Audio L/R
- Number of Scarts: 2
- Ext 3: YPbPr, Audio L/R in
- Front/Side connections: HDMI v1.3, CVBS in,

- Audio L/R in, USB 2.0
- Audio Output - Digital: Coaxial (cinch)
- Other connections: S/PDIF out (coaxial), Common Interface
- HDMI 1: HDMI v1.3
- EasyLink (HDMI-CEC): One touch play, EasyLink, System standby

Power

- Ambient temperature: 5°C to 40°C
- Mains power: 220–240 V, 50 Hz
- Power consumption (typical): 125 W
- Standby power consumption: 0.30 W


Dimensions

- Set dimensions (W x H x D): 1026 x 667.4 x 82.4 mm
- Set dimensions with stand (W x H x D): 1026 x 727.4 x 261.5 mm
- Weight incl. Packaging: 23.6 kg
- Product weight: 17.38 kg
- Product weight (+stand): 19.5 kg
- Box dimensions (W x H x D): 1170 x 787 x 260 mm
- VESA wall mount compatible: 400 x 400 mm

Accessories

- Included accessories: Tabletop stand, Power cord, Quick start guide, User Manual, Warranty certificate, Remote Control, 2 x AAA Batteries, Software declaration

Rear connectors

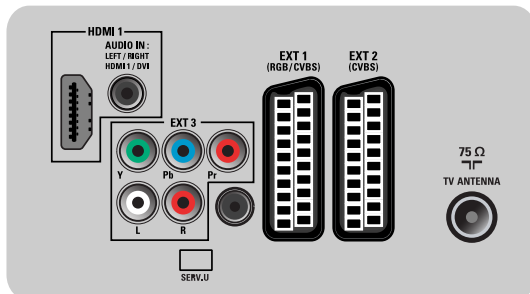

Side



Issue date 2011-07-15

Version: 11.4.2

12 NC: 8670 000 54945
EAN: 87 12581 49373 8

© 2011 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* DVB-T, supported in selected countries only