

Philips
Professional LED TV

40" EasySuite

LED
DVB-T2/T/C

40HFL3010T



Incredible functionality for your guests

With smart hotel info pages

With this energy-efficient LED TV, you can enjoy the benefits of a dedicated Hospitality TV. Allow your guests to buy premium content, inform them via hotel info pages and use the latest remote technology for effortless installation and control

Differentiating guest experience

- Additional headphone connection for personal listening
- Nurse-call compatibility optimised for the Healthcare sector
- On-screen clock display for optimal guest convenience
- SmartInfo for branded, interactive hotel info pages

Advanced hotel features and future proof

- MyChoice compatibility for recurring revenues
- SmartInstall for easy remote installation and maintenance
- Full Hotel, Healthcare and Prison Modes
- Serial Xpress Protocol Easy for interactive systems
- Prevent unauthorised use by joystick control locking

Great viewing experience and guest comfort

- Full HD LED TV—brilliant LED images with incredible contrast
- Low power consumption
- Eco-friendly design and flame-retardant housing

PHILIPS

Highlights

Full HD LED TV

Picture Quality matters. Regular HDTVs deliver quality, but you expect more. Imagine crisp detail paired with high brightness, incredible contrast and realistic colours for a true to life picture.

Hotel, Hospital, Prison Mode


All required features for professional use in environments where more is required than in a living room. From volume and menu locking to more rigorous material testing, energy saving, anti-theft remote controls and dedicated Healthcare and Prison features to allow for niche market applications.

MyChoice compatible



MyChoice offers a simple and low-cost way to offer your guests premium TV channels. At the same time it delivers an additional revenue stream which allows you to recover your initial TV investment.

SmartInstall

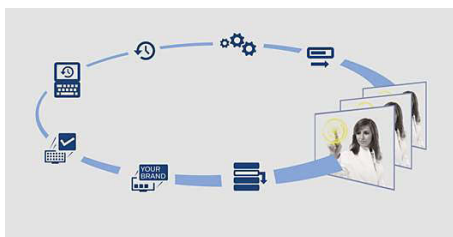

SmartInstall makes the installation and maintenance of your TVs effortless. With a simple to use web tool, you can now remotely

configure and install your TVs without visiting any rooms! This saves you time and makes sure your guests are not disturbed. Whether it is updating the hotel info pages or installing new channels, SmartInstall can handle all.

SmartInfo



SmartInfo allows you to provide hotel or city information to your guests. Your guests have access to this interactive hotel webpage even when the TV is not connected to your intranet or the Internet. You can change the information regularly and easily to keep your guests up to date with all the latest developments at your hotel.

SXP Easy



With Serial Xpress Protocol Easy the TV can be connected to external decoders and set-top boxes from all major interactive system providers.

Headphone connection

This speaker system features an additional headphone connection. Connect your own headphones for a more personal listening experience whenever you want it.

Nurse-call compatibility

Nurse-call system compatibility makes Philips Healthcare TVs a highly integrated tool that provides not only entertainment options for the user/patient but also gives convenient access to help in medical emergencies.

On-screen clock display

With our new on-screen clock display, guests can easily access the current time. At the push of a button the clock is displayed on the TV screen combining enhanced visibility and lower power consumption.

Eco-friendly design

Sustainability is integral to the way Philips does business. Philips TVs are designed and produced according to our EcoDesign principles aimed at minimising overall environmental impact, through lower power consumption, removal of hazardous substances, lower weight, more efficient packaging and better recyclability. Philips TVs also have a special housing of flame-retardant material. Independent tests carried out by emergency fire services have shown that whereas TVs can sometimes intensify fires caused by external sources, Philips TVs will not contribute to a fire.

Joystick control locking

By disabling or enabling joystick control locking, the administrator can prevent unauthorised use of the TV via the joystick, saving the hotelier overheads.

Low power consumption

Philips TVs are designed to minimise power consumption. This will not only reduce environmental impact but also lower operating costs.

Specifications

Picture/Display

- Aspect ratio: 16:9
- Diagonal screen size (inch): 40 inch
- Diagonal screen size (metric): 100 cm
- Display: LED Full HD
- Panel resolution: 1920 x 1080p
- Brightness: 280 cd/m²
- Picture enhancement: Pixel Plus HD, 200 Hz Perfect Motion Rate
- Viewing angle: 176° (H)/176° (V)

Tuner/Reception/Transmission

- Digital TV: DVB-T/T2/C
- Video Playback: NTSC, PAL, SECAM
- Analogue TV: PAL

Features

- Ease of use: Picture Style, Sound Style, Picture


Format

- Digital services: 8d EPG, Now and Next, MHEG, Teletext, HbbTV
- Local control: Joystick

Hospitality Features

- Hotel mode: Joystick Control Lock, Menu lock, Installation Menu Lock, Volume limitation
- Prison mode: high-security mode, TXT/MHEG/USB/EPG/Subtitle Lock
- Timer: Sleep Timer, Wake Up Alarm, Wake Up On Channel, Wake Up Sounds
- Switch On control: Channel, Feature, Picture Format, Volume
- Anti-Theft: Battery Anti-theft Protection, Kensington Lock
- Power control: Auto Power ON, Green/fast start-up

- Your brand: SmartInfo, Welcome Logo, Welcome Message, Customisable Dashboard (HTML)
- Clock: Clock in Standby Mode, Glow-in-the-Dark RC button, On-screen Clock, Optional External Clock
- SmartInfo: HTML5 Browser, Interactive Templates, Picture Slide Show
- Cloning and Firmware update: Instant Initial Cloning, Via USB/RF
- CMND&Control: Off-Line Channel Editor, Off-Line Settings Editor, Remote Management over RF, CMND&Create
- Control: Block Automatic Channel Update, Serial Xpress Protocol
- Interactive DRM: VSecure
- Revenue generation: MyChoice
- Remote Control: Cable Strap Ready, Low-Battery

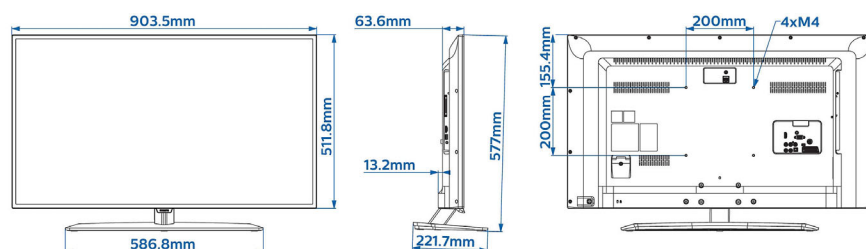

Specifications

- Detection, RC Battery Door Lock
- Channels: Combined List

Healthcare features

- Control: Multi-Remote Control, Healthcare RC compatible, Nurse call system compatible
- Convenience: Headphone out, Independent main speaker mute
- Safety: Double isolation class II, Flame retardant

Multimedia

- Video playback supported: Formats: H.264/MPEG4 AVC, MPEG1, MPEG2, MPEG4, WMV9/VC1, Containers: AVI, MKV, 3GP, ASF, M2TS, M4V, MP4, MPG, PS, Quicktime, TS, WMV
- Music formats supported: MP3, AAC, WAV, WMA (v2 up to v9.2)
- Subtitle formats supported: SRT, ASS, SMI, SSA, SUB, TXT
- Picture formats supported: BMP, JPG, PNG, GIF
- Supp. Video Resolution on USB: up to 1920x1080p@60Hz
- Multimedia connections: USB

Audio

- Sound output Power: 20 (2x10) W
- Bathroom speaker out: 1.5 W Mono 8 ohm
- Speakers: 2.0, Down Firing
- Sound Features: AVL, Incredible surround, Dynamic Bass, Dolby MS10

Power

- Mains power: AC 220-240 V; 50-60 Hz
- Ambient temperature: 0 °C to 40 °C
- Standby power consumption: <0.3 W
- Energy Label Class: A++
- EU Energy Label power: 30 W
- Power Saving Features: Eco mode
- Annual energy consumption: 44 kWh

Accessories

- Included: Remote Control 22AV1409A/12, Tabletop Stand, 2 x AAA batteries, Warranty

- Leaflet, Legal and Safety brochure, Power Cord
- Optional: External Clock 22AV1120C/00, Healthcare RC 22AV1109H/12, Setup RC 22AV9573A

Side Connectivity

- Common Interface Slot: CI+ 1.3
- HDMI 2: HDMI 1.4
- Headphone out: Mini-Jack
- USB1: USB 2.0

Rear Connectivity

- Scart: RGB, CVBS, SVHS
- Bathroom speaker out: Mini-Jack
- Component: YPbPr + L/R cinch
- AV input: CVBS shared with YPbPr
- DVI audio in: Mini-Jack
- External Control: RJ-48
- Antenna: IEC-75
- HDMI1: HDMI 1.4
- Digital Audio out: Optical
- VGA input: 15 pin D-sub

Connectivity Enhancements

- RJ48: IR-In/Out, Serial Xpress interface
- EasyLink (HDMI CEC): One touch play, System Standby, RC pass through, system audio control
- HDMI: ARC (all ports), DVI (all ports)
- Scart: Power on scart

Design

- Colour: Black

Dimensions

- Set Width: 904 mm
- Set Height: 512 mm
- Set Depth: 64/77 mm
- Product weight: 7.6 kg
- Set width (with stand): 904 mm
- Set height (with stand): 577 mm
- Set depth (with stand): 222 mm
- Product weight (+stand): 9.5 kg
- Wall-mount compatible: M4, 200 x 200 mm



Issue date 2024-04-01

Version: 1.0.1

EAN: 87 18863 00400 5

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Availability of features will depend on implementation chosen by integrator.

* Typical on-mode power consumption measured according to IEC62087 Ed 2. The actual energy consumption will depend on how the TV is used.

* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.