



Philips 6700 series
4K UHD LED Smart TV
with Ambilight 3-sided

108 cm (43") Ambilight TV
1200 Picture Performance Index
HDR 10+
Pixel Precise Ultra HD



43PUS6754

4K UHD LED Smart TV with Ambilight 3-sided

Bring the emotion into any room with the Philips TV that's designed to fit right in. Picture quality is so sharp you'll think you're there. 4K performance is bright and vibrant. Ambilight sets the mood for movies, music, or gaming.

Looks great wherever you place it.

- 4K UHD LED TV. Rich color, beautiful detail.
- Ambilight. Take the emotion beyond the screen.

Philips picture precision.

- Dolby Vision and Dolby Atmos. Cinematic vision and sound.
- HDR10+ supported. See more of what the director intended.
- Pixel Precise Ultra HD. Smooth motion, noticeable depth.

SAPHI. The smart way to enjoy your TV.

- One-button access to a clear icon-based menu.
- Philips TV Collection. Netflix, Prime Video, and more.


Clear sound. Hear every word.

- Clear audio from full-range speakers.
- Crisp, clear dialogue. Punchy bass.

PHILIPS

Highlights

Ambilight 3-sided

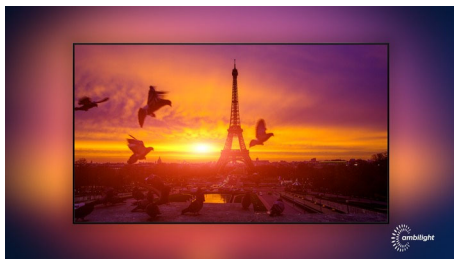


With Philips Ambilight, movies and games feel more immersive. Music gets a light show. And your screen will feel bigger than it is. Intelligent LEDs around the edges of the TV cast on-screen colours onto the walls, and into the room, in real time. You get perfectly tuned ambient lighting. And one more reason to love your TV.

4K LED TV


With four times the resolution of conventional Full HD, Ultra HD lights up your screen with over 8 million pixels and our unique Ultra Resolution Upscaling technology. Experience improved images regardless of the original content, and enjoy a sharper picture with superior depth, contrast, natural motion and vivid details.

Dolby Vision and Dolby Atmos

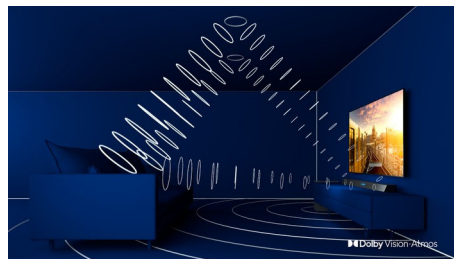

Support for Dolby's premium sound and video formats means the HDR content you watch will look-and sound-gloriously real. Whether it's the latest streaming series or a Blu-Ray disc set, you'll enjoy contrast, brightness, and color that reflect the director's original intentions. And hear spacious sound with clarity, detail, and depth.

HDR10+ supported

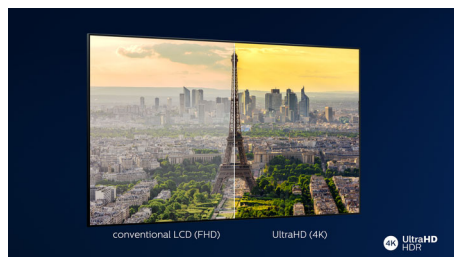


Your Philips TV is primed to get the most out of the HDR10+ video format. Contrast, color, and brightness levels are adjusted from frame to frame. Whether it's a must-watch series or

the new blockbuster, shadows will be deeper. Bright surfaces will shine. Colors will be truer.

Pixel Precise Ultra HD

The beauty of 4K Ultra HD TV is in savoring every detail. Philips Pixel Precise Ultra HD engine converts any input picture into stunning UHD resolution on your screen. Enjoy a smooth, yet sharp moving image and exceptional contrast. Discover deeper blacks, whiter whites, vivid colors and natural skin tones-every time, and from any source.

Saphi Smart TV

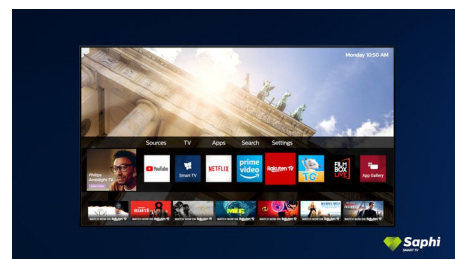

SAPHI is a fast, intuitive operating system that makes your Philips Smart TV a real pleasure to use. Enjoy great picture quality and one-button access to a clear icon-based menu. Operate your TV with ease, and quickly navigate to popular Philips Smart TV apps including YouTube, Netflix, and more.

Specifications

Ambilight

- Ambilight Version: 3-sided

Picture/Display

- Display: 4K Ultra HD LED
- Diagonal screen size (metric): 108 cm
- Panel resolution: 3840x2160
- Aspect ratio: 16:9
- Picture enhancement: Micro Dimming, Pixel Precise Ultra HD, Ultra Resolution, 1200 PPI

Supported Display Resolution

- Computer inputs on all HDMI: up to 4K UHD 3840x2160 @60Hz
- Video inputs on all HDMI: up to 4K UHD 3840x2160@60Hz, HDR supported, HDR10/HLG (Hybrid Log Gamma), HDR10+/Dolby Vision

Smart TV Features

- User Interaction: SimplyShare, Wi-Fi Miracast certified*
- Interactive TV: HbbTV
- Program: Pause TV, USB recording*
- SmartTV apps*: Online video stores, Open internet browser, TV on demand, Youtube
- Ease of Installation: Auto detect Philips devices, Network installation wizard, Settings assistant wizard
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB, Online firmware upgrade
- Screen Format Adjustments: Advance - Shift, Basic - Fill Screen, Fit to screen, Zoom, stretch, Wide screen
- Philips TV Remote app*: Apps, Channels, Control, NowOnTV, TV Guide, Video On Demand
- Ease of Use: One-stop smart menu button, Onscreen usermanual

Processing

- Processing Power: Quad Core

Tuner/Reception/Transmission

- Digital TV: DVB-T/T2/T2-HD/C/S/S2
- MPEG Support: MPEG2, MPEG4
- Video Playback: NTSC, PAL, SECAM
- TV Program guide*: 8 day Electronic Program Guide
- Signal strength indication
- Teletext: 1000 page Hypertext
- HEVC support

Connectivity

- Number of HDMI connections: 3
- Number of USBs: 2
- Number of component in (YPbPr): 1
- Wireless connection: Wi-Fi 802.11n 2x2 integrated, Dual Band
- Other connections: Satellite Connector, Common Interface Plus (CI+), Digital audio out (optical), Ethernet-LAN RJ-45, Audio L/R in, Headphone out
- HDMI features: Audio Return Channel, 4K
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, One touch play
- HDCP 2.2: Yes on all HDMI
- Number of CVBS: 1

Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1, HEVC (H.265), VP9
- Subtitles Formats Support: .SML, .SRT, .SUB, .TXT, .ASS
- Music Playback Formats: AAC, MP3, WAV, WMA (v2 up to v9.2), WMA-PRO (v9 and v10)
- Picture Playback Formats: JPEG, BMP, GIF, PNG, HEIF, 360 photo

Power

- Mains power: AC 220 - 240 V 50/60Hz
- Ambient temperature: 5 °C to 35 °C
- Standby power consumption: <0.3W
- Power Saving Features: Auto switch-off timer, Picture mute (for radio)
- Energy Label Class: A
- Eu Energy Label power: 71 W
- Annual energy consumption: 104 kW h
- Mercury content: 0 mg
- Presence of lead: Yes*
- Off mode power consumption: N/A

Sound

- Output power (RMS): 20W
- Sound Enhancement: Auto Volume Leveler, Dolby Atmos, 5 Band Equalizer, A.I. Sound, Bass Enhancement, Clear Dialogue
- Speaker configuration: 2x10W full range speaker

Dimensions

- Box dimensions (W x H x D): 1070.0 x 680.0 x 140.0 mm
- Set dimensions (W x H x D):

- 967.0 x 570.9 x 76.9 mm
- Set dimensions with stand (W x H x D): 967.0 x 590.0 x 188.0 mm
- Stand dimensions (W x H x D): 785.0 x 20.9 x 188.0 mm
- Product weight: 9.0 kg
- Product weight (+stand): 9.1 kg
- Weight incl. Packaging: 11.5 kg
- Wall mount compatible: 200 x 200 mm

Accessories

- Included accessories: Remote Control, 2 x AAA Batteries, Power cord, Quick start guide, Legal and safety brochure, Table top stand


Color & Finishing

- TV Front: Mid Silver



Connections

Side

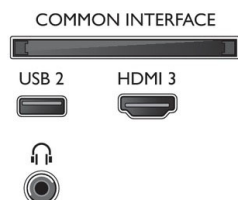

Rear



Bottom



Issue date 2022-07-14

Version: 7.2.1

12 NC: 8670 001 57657
EAN: 87 18863 01885 9

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* 55 inch, 65 inch, 70 inch, and 75 inch screen sizes boast a stand with adjustable width.

* EPG and actual visibility (up to 8 days) is country and operator dependent.

* Energy consumption in kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.

* Philips TV Remote app and related functionalities vary per TV model, operator, and country, as well as smart device model and OS. For more details please visit: www.philips.com/TVRemoteapp.

* Smart TV app offerings vary per TV model and country. For more details please visit: www.philips.com/smarttv.

* USB recording for digital channels only, recordings may be limited by broadcast copy protection (CI+). Country and channel restrictions may apply.

* Compatibility depends on Wifi Miracast certification & Android 4.2 or later. For more details please refer to your device documentation.

* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.