



Philips
Flat TV with Digital Crystal
Clear

51 cm (20")
LCD
integrated digital

20PFL5522D



Turn up your viewing experience

with Integrated Digital Tuner

Here is a wonderful new TV that not only gives you a great picture and sound but also modern styling and quality finish. It features Digital Crystal Clear for natural, vivid images and Incredible Surround for superb audio.

Vivid, natural and razor sharp images

- Enhanced-definition LCD VGA display, 640 x 480p
- Integrated Digital Tuner for DVB-T reception
- Digital Crystal Clear provides vivid cinema-like images
- 3D combfilter separates colors for a razor-sharp image

Exciting and lifelike sound

- Incredible Surround™ for enhanced audio enjoyment

Slim, stylish design to complement your interior

- Compact and slim design that fits in every room

Designed for your convenience

- 1000 page Hypertext for instant fast access to teletext

For advanced performance

- 2 HDMI inputs for full digital HD connection in one cable

PHILIPS

Flat TV
51 cm (20") LCD, integrated digital

20PFL5522D/12

Highlights

LCD VGA display, 640 x 480p

This VGA display with state-of-the-art LCD screen technology has an enhanced resolution of 640 x 480p.

Integrated Digital DVB-T tuner

The integrated Digital DVB-T tuner lets you receive digital terrestrial TV without an additional set top box. Enjoy quality TV clutter free.

3D Combfilter

The 3D comb filter separates brightness and color signals better in 3D domain to eliminate cross-color, cross-luminance and dot-crawl distortion - all of which detract from your viewing pleasure. The 3D digital comb filter performs field-by-field comparisons of the television image to accurately separate the

color from the black-and-white information and remove both horizontally and vertically hanging dots, as well as dot crawl. The result is a razor sharp image.

Incredible Surround™

Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

Compact and slim design

This design style emphasizes a slim, compact look that saves space and fits in anywhere.

2 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analog signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection. With 2 HDMI inputs you can connect multiple HD sources, for instance an HD settop box, and a Blu-ray player. Your TV is fully prepared for the HD future.



Specifications

Picture/Display

- Color cabinet: Black High Gloss
- Aspect ratio: 4:3
- Brightness: 300 cd/m²
- Contrast ratio (typical): 800:1
- Response time (typical): 25 ms
- Viewing angle (H / V): 178 / 178 degree
- Diagonal screen size: 20 inch / 51 cm
- Display screen type: LCD VGA Active Matrix TFT
- Panel resolution: 640 x 480p
- Picture enhancement: Digital Crystal Clear, Luminance Transient Improver, Color Transient Improvement, Contrast Plus, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control, Digital Noise Reduction, Jagged Line Suppression, Progressive scan, Sharpness Adjustment
- Screen enhancement: Anti-Reflection coated screen

Supported Display Resolution

- **Computer formats**

Resolution	Refresh rate
720 x 400	70Hz
1024 x 768	60, 75Hz
- **Video Formats**

Resolution	Refresh rate
720 x 576i	1Fh
720 x 576p	2Fh

Sound

- Equalizer: 7-bands
- Output power (RMS): 2 x 5W
- Sound Enhancement: Auto Volume Leveller, Incredible Surround, Dynamic Bass Enhancement
- Sound System: Nicam Stereo, Stereo

Loudspeakers

- Built-in speakers: 2

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer, Wake up Clock
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning

- System (ATS), Autostore, Fine Tuning, Plug & Play, Program Name, Sorting
- Ease of Use: Auto Volume Leveller (AVL), Easy toggle Dig/Analog modes, Menu Control, On Screen Display, Program List, Smart Picture, Smart Sound, Top Controls
- Electronic Program Guide: 8 day Electronic Program Guide
- Remote Control: TV
- Remote control type: RC2034301/01
- Screen Format Adjustments: 16:9 compress, 4:3, 4:3 expand
- Picture in Picture: Text dual screen
- Teletext: 1000 page Smart Text
- Teletext enhancements: 4 favourite pages, Program information Line

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, SECAM L/L', DVB COFDM 2K/8K
- Video Playback: NTSC, SECAM, PAL
- Digital TV: DVB Terrestrial *
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Number of Preset Channels: 100
- Tuner Display: PLL


Connectivity

- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, S-video in
- Number of Scarts: 2
- Ext 3: S-video in, CVBS in, Audio L/R in
- Ext 4: YPbPr, Audio L/R in
- Ext 5: HDMI
- Ext 6: HDMI
- Number of AV connections: 7
- Other connections: Headphone out, Common Interface

Power

- Ambient temperature: 5 °C to 40 °C
- Mains power: 220 - 240V, 50/60Hz
- Power consumption: < 58 W
- Standby power consumption: <1 W

Stereo system				Transmission system						
2CS DK	NICAM DK	2CS BG	NICAM I	NICAM LL'	PAL BG	PAL D/K	PAL I	SECAM BG	SECAM DK	SECAM LL'
•	•	•	•	•	•	•	•	•	•	•

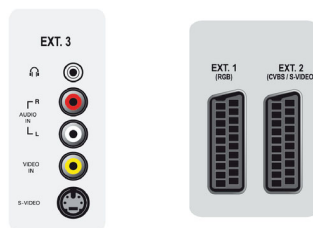

Issue date 2022-07-14

Version: 9.0.12

12 NC: 8670 000 29839
EAN: 87 12581 33385 0

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Registration card, Warranty certificate, Remote Control, Batteries for remote control

Dimensions

- Set dimensions (W x H x D): 495 x 419 x 92 mm
- Set dimensions with stand (W x H x D): 495 x 467 x 193 mm
- Product weight: 7.3 kg
- Product weight (+stand): 8.8 kg
- Box dimensions (W x H x D): 602 x 552 x 202 mm
- Wall mount compatible: 100 x 100 mm