



Philips Cineos  
digital widescreen flat TV  
with Pixel Plus 2 HD and  
Ambilight 2 channel

107cm (42")

plasma  
integrated digital

**CINEOS**

**42PF9631D**



## Turn up your viewing experience

with Pixel Plus 2 HD and Ambilight 2

Enjoy the ultimate viewing experience of this Philips Cineos Flat TV with Pixel Plus 2 HD, Ambilight 2, the latest PDP technology and table top stand. The Digital Media Reader via USB gives you full access to multimedia content.

### **Immersive viewing experience**

- HD Plasma panel, 1024 x 1080i
- Integrated Digital Tuner for DVB-T reception
- HD Ready for the highest quality display of HD signals
- Pixel Plus 2 HD for great details, depth and clarity
- 2-channel active Ambilight enhances the viewing experience

### **Superb sound reproduction**

- Virtual Dolby Digital for a true life audio experience

### **True beauty lies in the details**

- Matching stand with elegant design included

### **Perfect picture quality from your digital photos**

- USB Connector for easy, instant multimedia playing

### **For advanced performance**

- 2 HDMI inputs for full digital HD connection in one cable

**PHILIPS**

# Highlights

## HD Plasma panel, 1024 x 1080i

This state-of-the-art plasma screen technology gives you widescreen HD resolution of 1024 x 1080i pixels. It produces brilliant flicker-free pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

## Integrated Digital DVB-T tuner

The integrated Digital DVB-T tuner lets you receive digital terrestrial TV without an additional set top box. Enjoy quality TV clutter free.

## HD Ready

Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV settop box or Blu-ray disc. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer a HD screen that displays the benefits of resolution and picture quality of a High Definition signal. It has a universal connection for both analog YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60Hz.

## Pixel Plus 2 HD

Pixel Plus 2 HD offers the unique combination of ultimate sharpness, natural detail, increased depth, vivid colors and smooth and natural motion from standard TV, High Definition signals and multimedia sources. Each pixel of the incoming picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. Artifacts in compressed multimedia content are detected and reduced, ensuring that the picture is clean and razor sharp. Digital noise reduction ensures that the picture is perfectly smooth yet razor sharp.

## Ambilight 2 channel

Ambilight makes an impressive contribution to the overall viewing experience by producing ambient light to complement the colors and light intensity of the on-screen image. It adds a new dimension to the viewing experience, completely immersing you into the content you are watching. It creates ambiance, stimulates more relaxed viewing, and improves perceived picture detail, contrast and color. Ambilight automatically and independently adapts its colors according to the changing content on the screen.

## Virtual Dolby Digital

Virtual Dolby Digital is a processing technology for enhancing surround sound effects. It will create the sensation of Dolby Pro Logic

without the necessity of additional rear speakers. You become totally immersed in your television experience.

## Bypacked tabletop stand

A table-top stand with matching design is packed with the set.

## USB Multimedia Connector

The USB connector allows access to multimedia jpg, mp3 and alb files of most USB-sticks and most digital cameras (USB 1.1 memory-class device). Plug the USB into the slot at the side of the TV and access your photos or music files. This makes you easily viewing and sharing your photos and music.

## 2 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analog signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection. With 2 HDMI inputs you can connect multiple HD sources, for instance an HD settop box, and a Blu-ray player. Your TV is fully prepared for the HD future.



# Specifications

## Picture/Display

- Aspect ratio: 16:9
- Brightness: 1400 cd/m<sup>2</sup>
- Contrast ratio (typical): 10000:1
- Viewing angle: 160° (H) / 160° (V)
- Diagonal screen size: 42 inch / 107 cm
- Display screen type: Plasma HD panel
- Panel resolution: 1024 x 1080i
- Color cabinet: High Gloss Black
- Picture enhancement: 3D Combfilter, Digital Natural Motion, Jagged Line Suppression, Pixel Plus 2 HD, Progressive scan, Pulse Killer Chip, Widescreen Plus, Active Control + Light sensor, 3/2 - 2/2 motion pull down
- Screen enhancement: Anti ageing circuit, Anti-Reflection coated screen

## Ambilight

- Ambilight Features: Ambilight 2 Channel, Auto adaptive to video content, Efficient low energy lamp
- Color Settings: Full Multi Color
- Dimming Function: Manual and via Light Sensor

## Supported Display Resolution

### Computer formats

Resolution	Refresh rate
640 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz

### Video Formats

Resolution	Refresh rate
640 x 480i	1Fh
640 x 480p	2Fh
720 x 576i	1Fh
720 x 576p	2Fh
1280 x 720p	3Fh
1920 x 1080i	2Fh

## Sound

- Output power (RMS): 2x15W
- Sound Enhancement: Digital Signal Processing, Dynamic Bass Enhancement, Graphic Equaliser
- Sound System: Virtual Dolby Digital

## Loudspeakers

- Built-in speakers: 4
- Loudspeaker types: Integrated woofers with wOOx, Dome tweeter

## Multimedia Applications

- Digital Content Management: Digital Media Reader
- Multimedia connections: USB (streaming video capable)
- Playback Formats: JPEG Still pictures, MP3, MPEG2, Slideshow files (.alb), MPEG1

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Digital TV: DVB Terrestrial \*
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: PAL, DVB COFDM 2K/8K, SECAM
- Video Playback: NTSC, PAL, SECAM

## Connectivity

- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, RGB, Y/C
- Ext 4: HDMI
- Ext 5: HDMI
- Front / Side connections: Audio L/R in, CVBS in, Headphone Out, S-video in, USB
- Other connections: Analog audio Left/Right out, Common Interface, S/PDIF in (coaxial), S/PDIF out (coaxial), PC-In VGA
- Ext 3: YPbPr, VGA-in (5x cinch RGB+H/V), Audio L/R in

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Smart Clock
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, PLL Digital Tuning, Plug & Play
- Ease of Use: Auto Volume Leveller (AVL), Delta Volume per preset, Graphical User Interface, On Screen Display, Side Control, Program List, 4 favorite lists
- Electronic Program Guide: Now + Next EPG
- Picture in Picture: Text dual screen
- Remote Control: Amp, DVD, Sat, STB (Set-Top Box), VCR, Multi-functional
- Remote control type: RC4401
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 14:9, Movie expand 16:9, Subtitle and Heading Shift, Super Zoom, Widescreen, 6 Widescreen Modes
- Teletext: 1200 page Hypertext
- Teletext enhancements: Habit Watch, Program

- information Line
- VESA Mount: Vesa compliant

## Accessories


- Included accessories: Table top stand, RF antenna cable
- Optional accessories: Floor stand

## Dimensions

- Set dimensions (W x H x D): 1138 x 796 x 114 mm
- Set dimensions with stand (H x D): 856 x 290 mm
- Weight incl. Packaging: 67 kg
- Product weight: 44 kg
- Wall mount compatible: 600 x 200 mm
- Box dimensions (W x H x D): 1292 x 1121 x 323 mm

## Power

- Ambient temperature: 5 °C to 40 °C
- Mains power: AC 110 - 240 V +/- 10%
- Power consumption: 365 W
- Standby power consumption: 1W

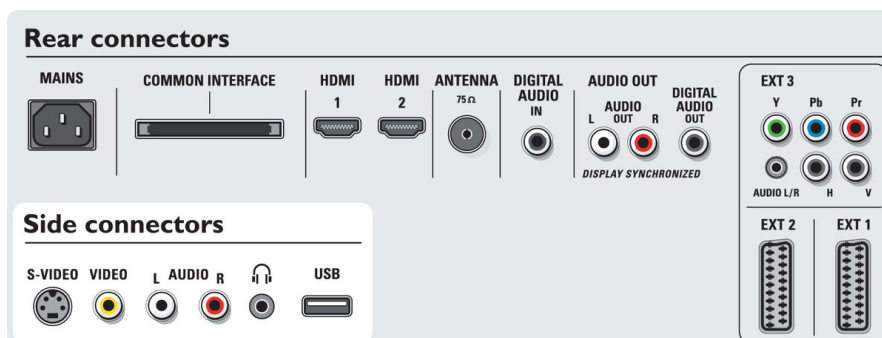

Issue date 2022-07-14

Version: 10.0.18

12 NC: 8670 000 23289  
EAN: 87 10895 92053 7

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DVB-T, supported in selected countries only