



Philips  
LCD TV with Digital  
Crystal Clear

66 cm (26")  
HD Ready  
digital TV

26PFL3404H



## Clearly a smart choice

With easy to use and future proof technology

Experience great picture and sound quality with this HD 1366 x 768p display. So easy to enjoy, with high quality standard, you can be sure that you make the right choice with this PHILIPS Flat TV.

### **Vivid and razor sharp pictures**

- Digital Crystal Clear for detail depth and clarity
- HD LCD display, with a 1366 x 768p resolution
- 28.9 billion colors for brilliant natural images
- Active Control optimizes picture quality whatever the source

### **Crisp and Clear sound**

- Incredible Surround for enhanced audio enjoyment
- 2x5W RMS audio power

### **Easy to connect and enjoy**

- Enjoy photo and music playback via USB
- 2 HDMI inputs with Easylink for a full HD connection
- PC input (HDMI)
- Smart Picture and Smart Sound to personalize your viewing

### **Ready for the future**

- MPEG4 HDTV reception via DVB-T tuner\*

# PHILIPS

# Highlights

## Digital Crystal Clear

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes picture quality to optimal contrast, color and sharpness levels. It's like watching vivid cinema-like images.

## LCD display, 1366 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

## 28.9 billion colors

Vibrant and natural images from the most advanced color processing. The 3 color channels (RGB) are optimized for a total processing power of 28.9 billion colors. The advanced algorithms detect even the subtlest

shades and skin tones, creating the best color possible.

## Incredible Surround

Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

## USB for photo & music playback

The USB connector allows access to jpeg photos and mp3 music of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access the

multimedia content using the easy on screen content browser. You can now view and share your photos and music.

## 2 HDMI inputs with EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With Easylink only one remote control is needed to operate main functionalities on your TV and connected devices. HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 1 HDMI input on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder.

## PC input (HDMI)

With PC input you can use your TV as a PC monitor via a HDMI-DVI cable/converter.

# Specifications

## Picture/Display

- Aspect ratio: Widescreen
- Brightness: 400 cd/m<sup>2</sup>
- Dynamic screen contrast: 4000:1
- Response time (typical): 5 ms
- Viewing angle: 178° (H) / 178° (V)
- Diagonal screen size: 26 inch / 66 cm
- Display screen type: LCD WXGA+ Active Matrix TFT
- Panel resolution: 1366 x 768p
- Picture enhancement: Crystal Clear III, 3/2 - 2/2 motion pull down, 3D Combfilter, 3D MA deinterlacing, Active Control, Color Enhancement, Color Transient Improvement, Digital Noise Reduction, Dynamic contrast enhancement, Luminance Transient Improver, Progressive scan, Sharpness Adjustment, Automatic skin tone correction, 1080p 24/25/30Hz processing, 1080p 50/60Hz processing
- Screen enhancement: Anti-Reflection coated screen
- Color cabinet: High gloss black deco front with black cabinet

## Supported Display Resolution

### Computer formats

Resolution	Refresh rate
640 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz
1280 x 720	60Hz
1280 x 768	60Hz
1280 x 1024	60Hz
1360 x 768	60Hz

Via HDMI/DVI input

### Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz
1080p	24, 50, 60Hz
1080p	24, 25, 30, 50, 60Hz

## Sound

- Output power (RMS): 2 x 5W

- Sound Enhancement: Auto Volume Leveler, Incredible Surround, Smart Sound
- Sound System: Nicam Stereo

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer, Wake up Clock
- Connection Enhancement: Easy link
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug & Play
- Ease of Use: Auto Volume Leveller (AVL), Graphical User Interface, On Screen Display, Program List, Settings assistant Wizard, Side Control
- Electronic Program Guide: Now + Next EPG, 8day Electronic Program Guide\*
- Picture in Picture: Text dual screen
- Remote Control: TV
- Remote control type: RCPF01E09B
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Teletext: 1000 page Hypertext
- Teletext enhancements: Fast text, Program information Line
- Smart mode: Game, Movie, Personal, Energy saving, Standard, Vivid

## Multimedia Applications

- Multimedia connections: USB
- Playback Formats: MP3, JPEG Still pictures

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, SECAM B/G, SECAM L/L', DVB COFDM 2K/8K
- Video Playback: NTSC, SECAM, PAL
- Digital TV: DVB-T MPEG4\*
- Tuner bands: Hyperband, S-Channel, UHF, VHF

## Connectivity

- Ext 1 Scart: Audio L/R, RGB
- Ext 2 Scart: Audio L/R
- Number of Scarts: 2
- Ext 3: YPbPr, Audio L/R in
- Front / Side connections: HDMI v1.3, CVBS in, Audio L/R in, USB 2.0

- Audio Output - Digital: Coaxial (cinch)
- Other connections: S/PDIF out (coaxial), Common Interface
- HDMI 1: HDMI v1.3
- EasyLink (HDMI-CEC): One touch play, EasyLink

## Power

- Ambient temperature: 5 °C to 40 °C
- Mains power: 220-240V, 50Hz
- Power consumption (typical): 67 W
- Standby power consumption: 0.30 W


## Dimensions

- Set dimensions (W x H x D): 671.8 x 458.7 x 77 mm
- Set dimensions with stand (W x H x D): 671.8 x 520 x 220 mm
- Product weight: 6.9 kg
- Product weight (+stand): 8.4 kg
- Box dimensions (W x H x D): 800 x 210 x 580 mm
- Wall mount compatible: 200 x 100 mm

## Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Warranty certificate, Remote Control, 2 x AAA Batteries, Software declaration

## Rear connectors

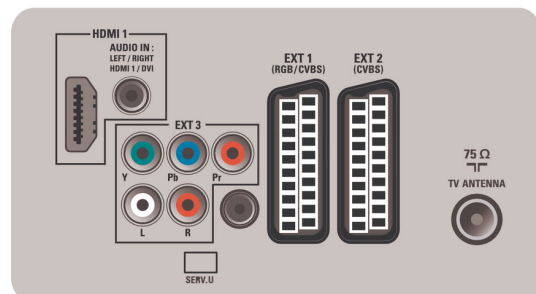

## Side



Issue date 2022-07-14

Version: 6.1.8

12 NC: 8670 000 49022  
EAN: 87 12581 46090 7

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)