



Philips
LCD TV with Crystal Clear
III

48 cm (19")
HD Ready

19PFL3403



Clearly the smart choice

Designed for ease of use, this Flat TV features modern design, 2 HDMI connections, a powerful and brilliant Crystal Clear III engine. Making the smart choice in total picture quality has never been easier.

Superb picture quality

- Crystal Clear III for natural images with enhanced quality
- HD LCD display, with a 1440 x 900p resolution
- HD Ready for the highest quality display of HD signals
- Up to 5ms response time for clear, fast moving action

Hear crisp and clear sound

- Incredible Surround for enhanced audio enjoyment

Connect, install and enjoy

- 2 HDMI inputs for full digital HD connection in one cable
- EasyLink: easy control of TV & connected device via HDMI CEC
- PC-input allows you to use your TV as a PC monitor
- Smart Picture and Smart Sound to personalize your viewing

PHILIPS

Highlights

Crystal Clear III

Crystal Clear III combines a whole range of enhancements to provide a better picture. They include a 2D Comb filter, Dynamic contrast, Blue stretch and Green enhancement so that you always get the most natural looking colors.

LCD display, 1440 x 900p

This WXGA+ display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1440 x 900p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

HD Ready

Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV settop box or Blu-ray disc. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer a HD screen that displays the benefits of resolution and picture quality of a

High Definition signal. It has a universal connection for both analog YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60Hz.

Incredible Surround

Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

2 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully

backward compatible with DVI sources and includes digital audio. HDMI uses HDCP copy protection. With one HDMI inputs on the back and one HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and game console or digital Camcorder. Your TV is fully prepared for the HD future.

EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With EasyLink only one remote control is needed to operate main functionalities on your TV and connected devices. EasyLink uses the standard HDMI cable to transfer system commands. It works between all electronic devices equipped with HDMI CEC.

Smart Picture and Smart Sound

Philips preset modes for Smart Picture and Smart Sound provide you with direct access via a single key on the remote control. You can select optimized picture and sound settings for the various picture and sound modes.

Specifications

Picture/Display

- Aspect ratio: Widescreen
- Brightness: 300 cd/m²
- Contrast ratio (typical): 1000:1
- Response time (typical): 5 ms
- Viewing angle: 170° (H) / 160° (V)
- Diagonal screen size: 19 inch / 48 cm
- Display screen type: LCD WXGA+ Active Matrix TFT
- Panel resolution: 1440 x 900p
- Picture enhancement: Crystal Clear III, 2D Combfilter, 3/2 - 2/2 motion pull down, White stretch, Progressive scan, Smart Picture
- Screen enhancement: Anti-Reflection coated screen

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz
1280 x 1024	60Hz

Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz
1080p	24, 50, 60Hz

Sound

- Output power (RMS): 2 x 3W
- Sound Enhancement: Auto Volume Leveler, Incredible Surround, Smart Sound
- Sound System: Mono, Stereo

Convenience

- Clock: Sleep Timer, Start timer, Stop timer
- Connection Enhancement: Easy link
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, Plug & Play
- Ease of Use: Auto Volume Leveller (AVL), On Screen Display, Program List, Side Control, Smart Picture, Smart Sound

- Picture in Picture: Text dual screen
- Remote Control: TV
- Remote control type: RCPF01E08B
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Teletext: 100 page Smart Text

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, SECAM L/L'
- Video Playback: NTSC, SECAM, PAL
- Tuner bands: Hyperband, S-Channel, UHF, VHF

Connectivity

- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2: S-video in, CVBS in, Audio L/R in
- Ext 3: YPbPr, Audio L/R in
- HDMI 1: HDMI v1.3
- HDMI 2: HDMI v1.3
- EasyLink (HDMI-CEC): One touch play, System standby
- Other connections: Headphone out, PC Audio in, PC-In VGA

Power


- Ambient temperature: 5 °C to 35 °C
- Mains power: 100-240V, 50/60Hz
- Power consumption: 46.5 W
- Standby power consumption: <0.3 W

Dimensions

- Set dimensions (W x H x D): 468 x 349 x 69 mm
- Set dimensions with stand (W x H x D): 468 x 392 x 166 mm
- Weight incl. Packaging: 5.84 kg
- Product weight: 3.9 kg
- Product weight (+stand): 4.4 kg
- Box dimensions (W x H x D): 512 x 458 x 136 mm
- Wall mount compatible: 100 x 100 mm

Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Warranty certificate, Remote Control, Batteries for remote control

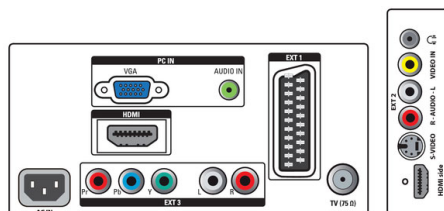

Issue date 2022-07-14

Version: 3.0.8

12 NC: 8670 000 35165
EAN: 87 12581 37657 4

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com