



Philips
LCD TV with Digital
Crystal Clear

107cm (42")
Full HD 1080p
digital TV

42PFL3604D



Clearly a smart choice

With easy to use and future proof technology

Experience great picture and sound quality with this Full HD 1080p display. So easy to enjoy, with high quality standard, you can be sure that you make the right choice with this Philips Flat TV.

Vivid and razor sharp pictures

- Digital Crystal Clear for detail depth and clarity
- Full HD LCD display, with a 1920x1080p resolution
- 28.9 billion colors for brilliant natural images
- Active Control optimizes picture quality whatever the source

Crisp and Clear sound

- Incredible Surround for enhanced audio enjoyment
- 2x10W RMS audio power

Easy to connect and enjoy

- Enjoy photo and music playback via USB
- 2 HDMI inputs with Easylink for a full HD connection
- PC input (HDMI)
- Smart Picture and Smart Sound to personalize your viewing

Ready for the future

- Integrated Digital Tuner for DVB-T reception

PHILIPS

Highlights

Digital Crystal Clear

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes picture quality to optimal contrast, color and sharpness levels. It's like watching vivid cinema-like images.

Full HD LCD display 1920x1080p

The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

28.9 billion colors

Vibrant and natural images from the most advanced color processing. The 3 color channels (RGB) are optimized for a total processing power of 28.9 billion colors. The advanced algorithms detect even the subtlest

shades and skin tones, creating the best color possible.

Incredible Surround

Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

USB for photo & music playback

The USB connector allows access to jpeg photos and mp3 music of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access the multimedia content using the easy on screen content browser. You can now view and share your photos and music.

2 HDMI inputs with EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With Easylink only one remote control is needed to operate main functionalities on your TV and connected devices. HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 1 HDMI input on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder.

PC input (HDMI)

With PC input you can use your TV as a PC monitor via a HDMI-DVI cable/converter.

Integrated Digital DVB-T tuner

The integrated Digital DVB-T tuner lets you receive digital terrestrial TV without an additional set top box. Enjoy quality TV clutter free.



Specifications

Picture/Display

- Aspect ratio: Widescreen
- Brightness: 500 cd/m²
- Dynamic screen contrast: 30,000:1
- Response time (typical): 5 ms
- Viewing angle: 178° (H) / 178° (V)
- Diagonal screen size: 42 inch / 107 cm
- Display screen type: LCD WXGA+ Active Matrix TFT
- Panel resolution: 1920x1080p
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, 3D MA deinterlacing, Active Control, Color Enhancement, Color Transient Improvement, Digital Crystal Clear, Digital Noise Reduction, Dynamic contrast enhancement, Luminance Transient Improver, Progressive scan, Sharpness Adjustment, Automatic skin tone correction, 1080p 24/25/30Hz processing, 1080p 50/60Hz processing
- Screen enhancement: Semi-glare
- Color cabinet: High gloss black deco front black cabinet

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz
1280 x 720	60Hz
1280 x 768	60Hz
1280 x 1024	60Hz
1360 x 768	60Hz
1440 x 900	60 Hz
1680 x 1050	50Hz, 60Hz

Via HDMI/DVI input

Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz
1080p	24, 50, 60Hz
1080p	24, 25, 30, 50, 60Hz

Sound

- Output power (RMS): 2 x 10W
- Sound Enhancement: Auto Volume Leveler, Incredible Surround, Smart Sound
- Sound System: Nicam Stereo

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer, Wake up Clock, Wake Up Timer
- Connection Enhancement: Easy link
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug & Play
- Ease of Use: Auto Volume Leveller (AVL), Graphical User Interface, On Screen Display, Settings assistant Wizard, Side Control
- Electronic Program Guide: Now + Next EPG, 8day Electronic Program Guide*
- Remote Control: TV
- Remote control type: RCPF01EO9B
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Teletext: 1000 page Hypertext
- Teletext enhancements: Fast text, Program information Line
- Smart mode: Game, Movie, Personal, Energy saving, Standard, Vivid

Multimedia Applications

- Multimedia connections: USB
- Playback Formats: MP3, JPEG Still pictures

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, SECAM B/G, SECAM L/L', DVB COFDM 2K/8K
- Video Playback: NTSC, SECAM, PAL
- Digital TV: DVB Terrestrial *
- Tuner bands: Hyperband, S-Channel, UHF, VHF

Connectivity

- Ext 1 Scart: Audio L/R, RGB
- Ext 2 Scart: Audio L/R
- Number of Scarts: 2
- Ext 3: YPbPr, Audio L/R in
- Front / Side connections: HDMI v1.3, CVBS in,

- Audio L/R in, USB 2.0
- Audio Output - Digital: Coaxial (cinch)
- Other connections: S/PDIF out (coaxial), Common Interface
- HDMI 1: HDMI v1.3
- EasyLink (HDMI-CEC): One touch play, EasyLink, System standby

Power

- Ambient temperature: 5 °C to 40 °C
- Mains power: 220-240V, 50Hz
- Power consumption (typical): 125 W
- Standby power consumption: 0.30 W


Dimensions

- Set dimensions (W x H x D): 1026 x 667.4 x 82.4 mm
- Set dimensions with stand (W x H x D): 1026 x 727.4 x 261.5 mm
- Product weight: 17.38 kg
- Product weight (+stand): 19.5 kg
- Box dimensions (W x H x D): 1170 x 787 x 260 mm
- Wall mount compatible: 400 x 400 mm

Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Warranty certificate, Remote Control, 2 x AAA Batteries, Software declaration

Rear connectors

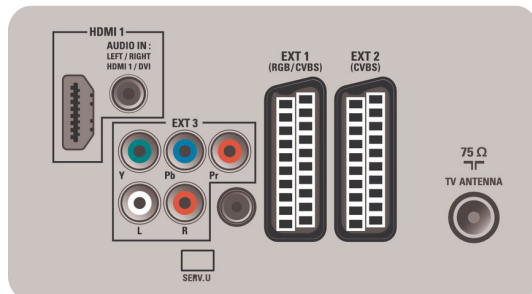

Side



Issue date 2022-07-14

Version: 8.6.3

12 NC: 8670 000 48962
EAN: 87 12581 46038 9

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com